



aerospace
climate control
electromechanical
filtration
fluid & gas handling
hydraulics
pneumatics
process control
sealing & shielding





Filtration, Air Drying, and Nitrogen Generation Products

Balston Product Catalog
Bulletin FNS-E





Parker Hannifin Corporation

The Global Leader in Motion and Control Technologies

We engineer success of our customers around the world, drawing upon nine core motion and control technologies. These technologies enable virtually every machine and process to operate accurately, efficiently and dependably.

As the global leader in motion and control, we partner with our distributors to increase our customers' productivity and profitability by delivering an unmatchable breadth of engineered components and value-added services.

We continue to grow with our customers by creating application-focused products and system solutions. A key to our global expansion has been to follow our customers and establish operations, sales and service wherever they are needed. No single competitor matches Parker's global presence.


Parker's Motion and Control Technologies

Aerospace	Hydraulics
Climate Control	Pneumatics
Electromechanical	Process Control
Filtration	Sealing & Shielding
Fluid & Gas Handling	



Corporate Headquarters in Cleveland, Ohio.

Legal Notifications

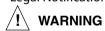

FAILURE OR IMPROPER SELECTION OR IMPROPER USE OF THE PRODUCTS AND/OR SYSTEMS DESCRIBED HEREIN OR RELATED ITEMS CAN CAUSE DEATH, PERSONAL INJURY AND PROPERTY DAMAGE.

This document and other information from Parker Hannifin Corporation, its subsidiaries and authorized distributors provide product and/or system options for further investigation by users having technical expertise. It is important that you analyze all aspects of your application and review the information concerning the product or system in the current product catalog. Due to the variety of operating conditions and applications for these products or systems, the user, through its own analysis and testing, is solely responsible for making the final selection of the products and systems and assuring that all performance, safety and warning requirements of the application are met.

The products described herein, including without limitation, product features, specifications, designs, availability and pricing, are subject to change by Parker Hannifin Corporation and its subsidiaries at any time without notice.

Offer of Sale

The items described in this document are hereby offered for sale by Parker Hannifin Corporation, its subsidiaries or its authorized distributors. This offer and its acceptance are governed by the provisions stated in the "Offer of Sale".

© Copyright 1995, 2009, Parker Hannifin Corporation, All Rights Reserved.



Table of Contents

Balston Complete Air and Gas Solutions	iv
Compressed Air Filters	1-64
Filter Cartridge and Housing Selection Flow Rates International ISO Standards Compressed Air and Gas Water Separators Filter Installation Recommendations 1/4" and 1/2" Line Size Filters 3/4" to 2" Line Size Filters 3" to 10" Line Size Filters High Pressure Compressed Air Filters Stainless Steel Compressed Air Filters for Harsh Environments Disposable Filter Silencers Filter Regulators Mist Lubricators Air Preparation Filters Automatic Drains - High and Normal Capacity Condensate Drain - Zero Air / Zero Energy Loss Differential Pressure Indicator Kit Miniature Disposable Filter Units	2 3 4 5-6 7-9 10-11 12 13-14 15-16 17-21 22-23 24-25 26-27 28-56 57 58-60 61 62-63
williature Disposable Filter Offits	02-03
Sample Filters	65-108
·	

Table of Contents


1/4" to 3/4" Plastic Filter Housings Filters for Vehicle Emission Analyzers Filters for Diesel Engine Analyzers Series 98 Membrane Filters - Hydrophobic Membrane Protection Series 98 Membrane Filters 1/4" Line Size Series A98 Coalescer Membrane Combination Filters Series A98/11 Series Coalescer Membrane Combination Filter Series A39/12 Coalescer Membrane Combination Filter 39 Series Membrane Filters Fast Loop Filters Horizontally Mounted Sample Filter	93-94 95 96 97 98 99 100 101-102 103-104 105-106 107
Vacuum Pump Exhaust and Inlet Filters	109-134
Exhaust Filters for Hazardous/Corrosive Applications Vacuum Pump Exhaust Filters for Non-Hazardous/Non-Corrosive Applications Vacuum Pump Inlet Filters for Vacuum Service to 10 ⁻⁶ Torr Vacuum Pump Inlet Filters for Vacuum Service to 2 Torr Recommended Exhaust Filters for Vacuum Pumps Pump to Filter Adaptors Straight Thread to NPT Thread Pump to Filter Adaptors Flange to NPT Thread	110-1111 112-113 114-115 116-117 118-132 133 134
Balston Liquid Filters	135-144
Filter Cartridge and Housing Selection Chemical and Solvent Compatibility 1/4" to 3/4" Line Size 1" Line Size 1/2" to 2" Line Size Disposable Filter Units for Liquids Water Filter	136 137 138-139 140 141 142-143 144
Filters and Air Dryers for Hospital Applications	145-150
Steam Filters for Sterilizers Water Filters for Washer Sterilizers EtO Filters	146-147 148-149 150
Natural Gas Filters	151-158
2" Through 10" Line Size Filters 2" Through 4" Line Size 6" Through 10" Line Size Flow Rates Low Pressure Natural Gas Filters	152 153 154 155 156-158

Table of Contents

0.01 Micron Membrane Filters	159-166
0.01 Micron Membrane Filters Disposable Filter Units 1/8" to 1/2" Line Size Stainless Steel or PTFE Filter Housings 1/2" Line Size High Pressure Membrane Filters	160-161 162 163-164 165-166
Filters and Dryers for the Food Industry	167-196
Steam Filters Stainless Steel Harsh Environment Filters for Food Processing & Packaging Filter Cartridges and Housing Selection 1/4" to 1" Line Size Stainless Steel Filters for Harsh Environment Flow Rates for Stainless Steel Harsh Environment Filters Principal Specifications - Stainless Steel Harsh Environment Filters 2 Stage Compressed Air Filter Systems 3 Stage compressed Air Filter Assemblies 3 Stage Sterile Air Filter Systems Sterile Air Filters Filter Cartridge Housing and Selection Sterile Air Filters - Flow Rates 1/4" to 2" Line Size Sterile Air Filters 3" to 10" Line Size Sterile Air Filters 1/4" to 1" Line Size Steam I Sterile Air Filters 2" to 10" Line Size Steam Sterilizable Sterile Air Filters Cabinet Dryers for Washdown Areas	168-169 170 171 172 173 174 175-177 178-180 181-183 184 185 186 187 188-189 190-191 192-193 194-195
Nitrogen Generator Systems	197-206
Membrane Nitrogen Generators Principal Specifications - HFX Series Membrane Nitrogen Generators PSA Nitrogen Generators Principal Specifications - MB Series PSA Nitrogen Generators Principal Specifications - DB Series PSA Nitrogen Generators	198-201 201 202-206 204 205-206
Compressed Air Dryers	207-224
Membrane Air Dryers Principal Specifications Membrane Air Dryers -40°F Dewpoint Principal Specifications IT Series Membrane Air Dryers for +35°F Dewpoint Membrane Air Dryers for Coordinate Measurement Machines SMART Dryer™ 5000 Series Membrane Air Dryers Cabinet Dryers PSA Air Dryers	208-209 210-211 212-214 215-216 217-219 220-221 222-223
Customer Support and Service Network for Balston Products Index	224 225-238

Balston® Complete Air and Gas Solutions

Compressor Room

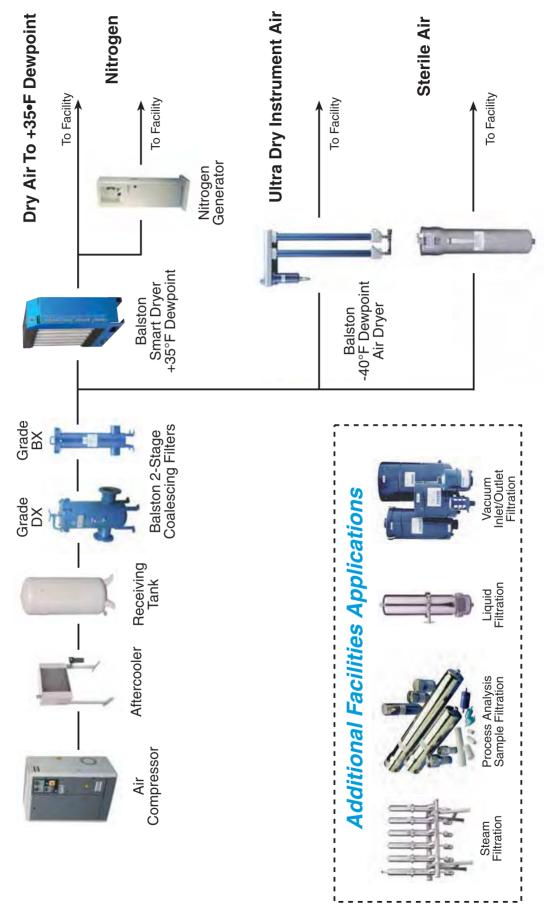

Sterile Air Filter

Coalescing Compressed Air Filters

Balston Microfiber® Filter Assemblies:

Balston Coalescing Compressed Air Filters protect your equipment and delicate instruments from the dirt, water, and oil usually found in compressed air. Balston Coalescing Filters remove these contaminants at a very high efficiency up to 99.99% for 0.01 micron particles and droplets. Liquid releases from the filter cartridge to an automatic drain as rapidly as it enters the filter. This allows a Balston Coalescing Filter to continue removing liquids for an unlimited time without loss of efficiency or flow capacity. Select 1/4" to 2" line filters come with a lifetime (20 year) warranty which quarantees the product against defects and other failures.



Product Features:

- Remove 99.99% of 0.01 micron particles of oil, water, and dirt from compressed air and other gases
- Continuously trap and drain liquids
- Service flow ranges from a few SCFM to 40,000 SCFM
- Remove trace oil vapor with adsorbent cartridges
- Lifetime warranty (20 year) with select 1/4" to 2" line filters

Compressed Air Systems

Instrumentation and Automated Pnuematic Controls

Pnuematic Tools and Cylinders



Filter Cartridge and Housing Selection

Filter Cartridge Description General purpose Single stage filtration. Use a Grade DX filter applications such as plant compressed air Instrument air and other Two stage filtration is necessary. Use a critical air requirements Grade DX followed by a Grade BX filter cartridge. As a general rule, a Grade BX filter cartridge should not be used alone. Removal of trace com-For rare instances where even a trace pressor oil vapor amount of oil vapor can cause a problem, three stage filtration is necessary. Use a Grade DX followed by a Grade BX, and a type CI cartridge.

Physical Properties, Microfibre Filter Cart	ridges
Temperature Range	-40°F to 300°F (-40°C - 149°C)
Maximum Pressure Differential Across Filter, Inside-to-Outside Flow:	100 psi
Materials of Construction	Borosilicate glass microfibers with fluorocarbon resin binder. Resistant to water, all hydrocarbon and synthetic lubricants.

Retention Efficie	ency
Grade	Efficiency for 0.01 Micron Particles and Droplets
DX	93%
ВХ	99.99%

Balston Filter Cartridges

Balston provides two grades of coalescing filter cartridges, Grade DX and Grade BX. Singly or in tandem, these filters satisfy all requirements for removing liquid and solid contaminants from compressed air. Balston also has an activated carbon adsorbent CI-type cartridge for the removal of trace oil vapors from a compressed air line. The activated carbon cartridge is Grade 000.

How to Select the Filter Cartridge and Housing

- 1 Decide which grade(s) of filter cartridges fits the application (see selection boxes at left).
- Select the filter housing with a port size equal to the line size where the filter is to be located.
- 3 For a new installation in which the line size has yet to be selected, determine the gas flow rate and pressure at the point where the filter will be located, and then refer to the flow chart on the reverse side of this data sheet. NOTE: The filter port size must be equal to or larger than the line size (when specified).

How to Order the Filter Assembly

- Build your own custom filter assembly using the guideline matrix on Page 16 and specify your model number. Example: 1/2" filter with DPI and Auto Drain with Grade DX Filter = 6004N-01A-DX.
- Each assembly is shipped with the filter cartridge installed. To order additional filter cartridges, indicate the model number of the cartridges, and the grade. Examples 050-05-DX, 050-05-BX. The grade used for Type CI cartridges is 000 (CI-100-12-000).

Note: Assemblies with CI Cartridges are shipped with the adsorbent cartridge wrapped separately. This shipping method prolongs the life of the cartridge.



1-800-343-4048

2

Flow Rates


Filter Housing Model	Port Size	Filter Cartridge Grade	Flow ra Charts PSIG	tes (SCF in each p	M), at 2 p product d	si drop a ata shee	t indicate t for max	ed line pi imum pre	essure. essure ra	Refer to ting of e	Principal ach hous	Specific ing	ation
		Grado	2	20	40	80	100	125	150	200	250	400	650
A94A	1/4"	DX	4	9	13	24	29	36	43	55	67		
A914, A914D, A914P		BX	1.2	2.4	4	7	8	9	12	15	17		
2002	1/4"	DX	9	19	30	51	63	76	90	117	145		
2003	3/8"	BX	3	8	11	21	25	31	36	47	58		
2004	1/2"	CI	2	5	7	12	15	18	22	28	35	—	—
2104	1/2"	DX	19	41	65	113	137	166	196	257	316		
		BX	9	19	30	51	63	76	90	117	145		
		CI	6	12	19	32	39	48	56	73	90		
2206	3/4"	DX	37	78	123	214	259	315	371	484	596		
		BX	10	21	34	56	70	85	101	131	162		
		CI	8	16	26	44	53	65	76	99	122	—	—
2208	1"	DX	55	115	181	314	380	463	546	711	877		
		BX	11	23	37	64	77	94	111	144	178		
		CI	10	20	32	56	67	82	96	125	154	—	—
2312	1 1/2"	DX	98	203	319	554	670	816	963	1254	1546		
		BX	22	46	74	129	155	189	223	290	358		—
		CI	16	33	52	91	110	134	158	206	253		
A15/80	2"	DX	160	333	525	908	1100	1340	1580	2060	2540	—	
		BX	45	94	148	256	310	378	445	580	715		—
		CI	23	49	77	133	161	197	231	301	371		
	3"	DX	364	760	1190	2060	2500	3045	3600	4680	5770	9030	14480
AKH-0280		BX	90	190	300	510	620	755	890	1160	1430	2240	3590
		CI	47	98	154	266	322	394	462	602	742	1160	1860
	4"	DX	740	1540	2430	4210	5100	6210	7300	9550	11750	18400	29480
AKH-0480		BX	180	380	590	1020	1240	1510	1780	2320	2860	4480	7180
		CI	94	196	308	632	644	780	920	1200	1480	2320	3710
	6"	DX	1500	3120	4910	8500	10300	12550	14800	19300	23700	37120	59460
AKH-0880		BX	360	750	1180	2050	2480	3020	3560	4640	5710	8940	14330
		CI	188	392	616	1064	1280	1560	1840	2390	2950	4620	7400
	8"	DX	2620	5450	8580	14860	18000	21900	25800	33700	41540	65050	104200
AKH-1480		BX	630	1310	2070	3580	4340	5300	6230	8120	10010	15680	25100
		CI	329	686	1078	1860	2250	2740	3230	4210	5190	8130	13020
	10"	DX	4080	8470	13350	23110	28000	34100	40200	52400	64590		162050
AKH-2280		BX	1000	2070	3270	5660	6850	8340	9840	12800	15780	24700	39600
		CI	516	1077	1690	2920	3540	4310	5070	6610	8150	12760	20450



International ISO Standards

Table taken from ISO8573 - 1

	Solid		Water		Oil		
Class	Maximum Particle Size (micron)	Maximum Concentration ppm (mg/m³)		Maximum Pressure Dewpoint °F (°C)			imum ntration (mg/m³)
1	0.1	.08	(0.1)	-94	(-70)	.008	(0.01)
2	1	.8	(1)	-40	(-40)	.08	(0.1)
3	5	4.2	(5)	-4	(-20)	.83	(1)
4	15	6.7	(8)	37	(+3)	4.2	(5)
5	40	8.3	(10)	45	(+7)	21	(25)
6	-	-	-	50	(+10)	-	-

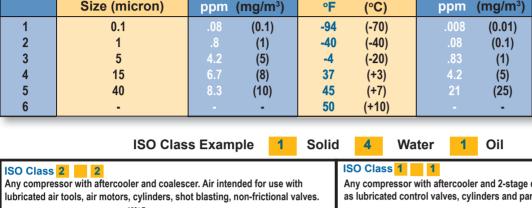






ADDITIONAL SPECS: CGA - G7.1 (Grades A & Ba1)


Any compressor with aftercooler and 2-stage coalescing. Air intended for use as lubricated control valves, cylinders and parts blow-down.

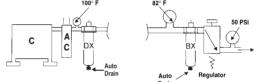

ADDITIONAL SPECS: Mil. Std. 282 H.E.P.A., U.S.P.H.S. 3A accepted particles for milk

ISO Class 1


Any compressor with aftercooler, 2-stage coalescing and activated carbon filter. Air intended for use with general pneumatics systems.

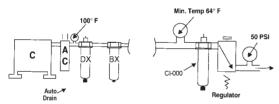

ADDITIONAL SPECS: CGA - G7.1 (Grade C)

ISO Class 1 4 1


Any compressor with aftercooler, 2-stage coalescing and refrigerated dryer for use with instrument quality air.

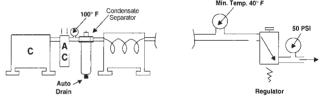

ADDITIONAL SPECS: CGA - G7.1 (Grade D & E) ISA S7.3, sFed. Std. 209 (Class 100)

ISO Class

Any compressor with aftercooler, 2-stage coalescing, and a -40°F membrane air dryer. Air intended for use as industrial breathing air and decompression chambers.*

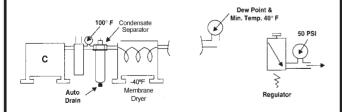


ADDITIONAL SPECS: O.S.H.A. 29CFR 1910.134 *CO Monitor required.

ISO Class 1 1 1

4

Any 2-stage compressor with aftercooler, double coalescing and a regenerative type desiccant dryer. Air intended for use in applications involving critical instrumentation and high purity gases.

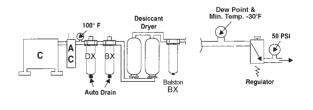

ADDITIONAL SPECS: CGA - G7.1 (Grade F)

Note: In the pictorial examples shown above, the contribution of hydrocarbon vapors has not been taken into account in determining the OIL class category.



Compressed Air and Gas Water Separators

Protect your equipment from contamination:

Balston's new water separators have been designed for the efficient removal of bulk liquid contamination from compressed air. Today, many products are offered for the removal of bulk liquid from compressed air, however, these are often selected based only upon their initial purchase cost, with little or no regard for the separation efficiency they provide or the cost of operation throughout their life. Balston's water separators have been designed from the ground up with the key design focus on air flow management, separation efficiency at all flow conditions, minimal pressure losses and independently validated performance.




Product Features:

- Tested in accordance with ISO 8573.9
- High liquid removal efficiencies at all flow conditions
- Low pressure losses for low operational costs
- Suitable for variable flow compressors
- Works with all types of compressor and compressor condensate
- Low maintenance

Applications:

- Bulk liquid removal at any point in a compressed air system
- Protection to membrane and desiccant dryer prefiltration
- Liquid removal from compressor inter-coolers / aftercoolers
- Liquid separation within refrigeration dryers

Separation Efficiency

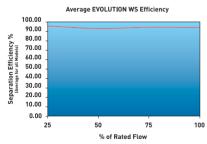

Tested with an Inlet challenge concentration of 33ml/m²hr and in accordance with ISO 8573.9. Performance shown is an average for all models in range. Individual model performance available on request.




Compressed Air and Gas Water Separators

Product Selection and Technical Data								
Part Number	Port Size (inches) NPT	SCFM at 100 PSIG	Max Operating Pressure	Max Operating Temp	Min Operating Temp			
WS002N	1/4"	25	232	176°F	35°F			
WS003N	3/8"	25	232	176°F	35°F			
WS004N	1/2"	25	232	176°F	35°F			
WS0H3N	3/8"	100	232	176°F	35°F			
WS0H4N	1/2"	100	232	176°F	35°F			
WS006N	3/4"	100	232	176°F	35°F			
WS008N	1"	100	232	176°F	35°F			
WS0H6N	3/4"	250	232	176°F	35°F			
WS0H8N	1"	250	232	176°F	35°F			
WS0010N	1-1/4"	250	232	176°F	35°F			
WS0012N	1-1/2"	250	232	176°F	35°F			
WS0H10N	1-1/4"	750	232	176°F	35°F			
WS0H12N	1-1/2"	750	232	176°F	35°F			
WS0016N	2"	750	232	176°F	35°F			
WS0020N	2-1/2"	1700	232	176°F	35°F			
WS0024N	3"	1700	232	176°	35°			

Flow/Pressure Correction Factors (to calculate flow rates below and above 100 PSIG use this table)								
Line Pressure (psig)	Correction Factor							
15	0.25							
29	0.38							
44	0.50							
58	0.63							
73	0.75							
87	0.88							
100	1.00							
116	1.06							
131	1.12							
145	1.17							
160	1.22							
174	1.27							
189	1.32							
203	1.37							
218	1.41							
232	1.46							

Dimensions and Weights							
Part Number	Port Size (inches)	<u>Dime</u> A	ensions (inc B	ches) C	Weight (lbs)		
WS002N	1/4"	3	7.2	6	1.3		
WS003N	3/8"	3	7.2	6	1.3		
WS004N	1/2"	3	7.2	6	1.3		
WS0H3N	3/8"	3.8	9.3	7.9	2.4		
WS0H4N	1/2"	3.8	9.3	7.9	2.4		
WS006N	3/4"	3.8	9.3	7.9	2.4		
WS008N	1"	3.8	9.3	7.9	2.4		
WS0H6N	3/4"	5.1	10.8	9.2	4.8		
WS0H8N	1"	5.1	10.8	9.2	4.8		
WS0010N	1-1/4"	5.1	10.8	9.2	4.8		
WS0012N	1-1/2"	5.1	10.8	9.2	4.8		
WS0H10N	1-1/4"	6.7	17	15	11.2		
WS0H12N	1-1/2"	6.7	17	15	11.2		
WS0016N	2"	6.7	17	15	11.2		
WS0020N	2-1/2"	8.1	19.9	17.5	22		
WS0024N	3"	8.1	19.9	17.5	22		

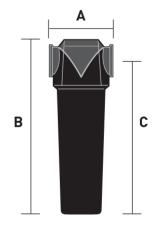



1-800-343-4048

6


Filter Installation Recommendations

Recommendations for Typical Filter Installations

Selecting the proper location for a filter in a compressed air line is as important as selecting the proper filter. In most cases you will probably be able to base your own installation on these recommendations for typical installations.

Placing the Filter at the Compressor

The standard compressor installation consists of a prefilter (mounted on the compressor), a compressor, aftercooler, and a receiver. The Balston filter should be installed downstream from the receiver. In a system with an efficient aftercooler, the distance from the receiver to the filter is not important. Since the filter is usually maintained by the personnel responsible for the compressor, it is often convenient to install the filter downstream from the receiver. If there is no aftercooler, or the aftercooler is not efficient, coalescing filter be installed as close to the point(s) of use as possible.

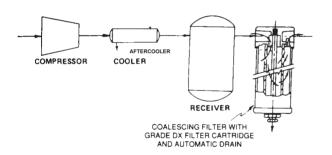

Compressor Filter Specifications Microfibre Filter Cartridge Grade DX Filter Housing Determine filter size from flow chart on page 3, but port size must be equal to or larger than the line size Automatic Drain Recommended Differential Pressure Indicator Recommended

Some compressor installations do not have an after-cooler (this is an undesirable situation). Air saturated with water vapor leaves a compressor at 240°F to 400°F (116°C to 204°C). Without an aftercooler, the air cools close to room temperature in the distribution lines and water condenses throughout the air distribution system. About two-thirds of the total water content of the air

will be condensed when the air has cooled to 100°F (38°C). A filter located just before the main air line branches into smaller distribution lines will remove most of the water load from the system. The filter requirements for the main line are described above; they are the same as for a system with an aftercooler. However, since the air will continue to cool in the distribution system, additional filters located at end- use points will be required to remove water condensed downstream from the main line filter.

How to Obtain a Trouble-Free Coalescer

The mechanism of coalescing leads to three important considerations in selecting and installing a coalescing filter:

- 1 The filter should be large enough to ensure that the air exits the filter at low velocity and does not carry over coalesced liquid. Proper sizing of a Balston coalescing filter is easily done by using the recommendations or the maximum flow rate data. There is no danger on oversizing the filter. A Balston coalescing filter is even more efficient at extremely low flow rates than at its maximum rated flow capacity.
- 2 To avoid liquid carryover, the coalesced liquid should not be allowed to build up in the filter housing above the level of the bottom of the filter tube.
 - Rather than relying on operator attention to this easilyoverlooked job, Parker Hannifn Corp. recommends automatic drains with all coalescing filters.
- 3 The flow direction through the Microfibre filter tube must be inside-to-outside to permit the liquid to drip from the outside of the tube to the drain in the filter housing. If installed outside-to-inside, the filter will at first function as a coalescing filter, but liquid will collect on the inside of the filter tube. Since there is no way of draining the liquid, the level will build up rapidly until it begins to be carried downstream by the air flow. The filter will work at removing liquids for a short time, and then not work at all. If the Balston coalescing filter exhibits these symptoms, reversing the flow direction will solve the problem.



Filter Installation Recommendations

Removing Oil from Compressed Air

The source of oil in compressed air is the compressor lubricant. The common plant problems resulting from oil in the air are caused by liquid oil depositing in valves, instrument control surfaces, and other critical points in the air distribution system.

Balston often receives inquiries from users of compressed air about removing oil vapor from the air, yet the only reason for concern about oil vapor in most applications is that it may condense to liquid oil. Just like water vapor, oil vapor will condense to liquid when the temperature is reduced or the air pressure is increased at constant temperature. However, the table below show that while in theory, condensation of oil vapor and water vapor are similar, in practice the effect of condensation of the two vapors is quite different.

Concentration of vapor, parts per million by weigh	nt
(ppm) in air at 100 psig, at indicated temperature	

	Petroleum Base Oil	Synthetic Oil	Water
80°F	0.012	0.002	2,743.
100°F	0.05	0.01	5,137.
125°F	0.2	0.06	10,508.
150°F	0.7	0.2	20,119.
200°F	3.5	2.4	62,371.

From the above figures, one can calculate that if 100 SCFM of air is filtered at 125°F to remove all liquids, and is subsequently cooled to 80°F, condensed liquids would consist of: water 3.6 lbs per hour, and either petroleum base oil 0.001 lbs. per hour, or synthetic oil 0.0003 lbs per hour. Condensed water is potentially a serious problem, but the quantity of condensed oil vapor is extremely small.

Field tests show that the liquid oil in air from a well-maintained reciprocating compressor is typically in the range of 15 to 30 ppm. With an oil-sealed rotary screw compressor, liquid oil content in the compressed air can vary from 10 to more than 100 ppm, depending upon the efficiency of the bulk oil separator. Compared to these figures, the approximate 0.2 ppm of liquid oil which could result from oil vapor condensation is for practical purposes negligible.


Therefore, removing the liquid oil from compressed air with a Balston coalescing filter, even at temperatures as high as 125°F, will eliminate the chance of oil-caused problems downstream in virtually all installations.

There are rare instances in which even 0.2 ppm oil vapor in the air or gas can cause a problem; for example, in contact with a sensitive catalyst or other highly reactive material.

In those cases, the trace quantity of oil vapor can be reduced using an adsorbent-loaded cartridge, following coalescing filter to remove the liquid oil.

Placing the Filter at the Point-Of-Use

Whether or not the system has an aftercooler, Balston strongly recommends a filter at each critical end-use point, even if a main line Grade DX filter has been used. The point-of-use filters will remove dirt and oil which may have been in the distribution lines, as well as water that has condensed downstream from the main filter. If there is a pressure regulator at the end-use point, the filter should be installed immediately upstream from the regulator. Alternatively, replace the existing regulator with a combination Balston filter-regulator.

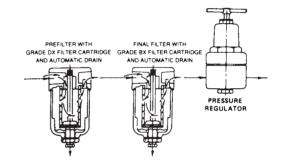

Point-of-Use Filter Recommendations						
Microfibre Filter Cartridge	Grade BX					
Filter Housing	Size from flow chart or by line size					
Automatic Drain	Recommended (refer to Page 18)					

If there is no Grade DX filter upstream from the final filter, or if a significant amount of water or oil is expected, then a two-stage system, Grade DX followed by Grade BX, is required at each use point. The housing and automatic drain for the Grade DX prefilter should be the same as for the Grade BX final filter (if the flow capacities permit).

Even if the application is not particularly sensitive to impurities in the air - for example, an air-driven tool - it is still good practice to remove condensed water with a filter at the end of the line. Parker recommends a single-stage Grade DX filter with automatic drain.



8 1-800-343-4048

Filter Installation Recommendations

Using Filters With Air Dryers

Properly specified filters are relatively inexpensive protection for air dryers. Both refrigerated and desiccant dryers benefit from filter protection.

Refrigerated Dryers

A Grade DX prefilter with automatic drain should be installed upstream from a refrigerated dryer to prevent oil and condensed water from entering the dryer. Oil entering a dryer coats the cooling coil and reduces its efficiency; condensed water increases the cooling load and reduces dryer capacity. A dryer that was in operation before a Balston filter was installed may already have oil inside it. Therefore a second filter, a Grade BX filter with automatic drain, must be installed downstream from the dryer if oil-free air is required.

Desiccant Dryers

Desiccant dryers are very sensitive to water and oil droplets. Water can saturate the desiccant and reduce its drying efficiency or even destroy it. Oil can coat the desiccant, rendering it ineffective, or the oil can accumulate on the desiccant and create a combustion hazard when the desiccant is heated for regeneration.

For maximum protection of the desiccant dryer, a twostage filter (Grade DX followed by Grade BX) system with automatic drains should installed upstream from the dryer. To protect downstream delivery points from abrasive desiccant particles, a high efficiency filter with high solids holding capacity should be installed downstream from the dryer. The Balston Grade DX filter cartridge is recommended for this downstream installation location. (Note: All Balston desiccant dryers are equipped with prefilters and final filters, as recommended above).

Membrane Dryers

Membrane air dryers are sensitive to water and oil droplets. Oil can permanently damage the hollow fiber core. Balston Membrane Air Dryers are assembled with maximum protection, two stage coalescing filters (Grade DX followed by BX) designed to remove all contaminants down to 0.01 microns. Most all other membrane dryers are not assembled with adequate prefiltration protection and should be protected with a two stage Balston Filter System (Grade DX, Grade BX).

Maintaining The Filters

In a typical compressed air delivery system, a properly specified Balston filter cartridge can be expected to last for one year. The filter cartridge can continue to coalesce indefinitely, but solids loading in the depth of the cartridge will cause a pressure drop through the housing. The filter should be changed when the pressure drop reaches 10 psi. At pressure drops higher than 10 psig, the cartridge will continue to perform at its rated efficiency, but downstream instrumentation may be affected by the pressure drop.


To monitor the condition of the filters, install Balston Differential Pressure Indicators (DPI) on the filters or across a multi-filter installation. The DPI gives a visual indication of differential pressure through the filter cartridge. The Balston Differential Pressure Indicator is factory-installed on 1/4" and larger line size Balston Compressed Air Filter Assemblies. To use a DPI with a smaller Balston Compressed Air Filter, pressure taps must be provided with "tees" on the line upstream and downstream from the filter.



1/4" and 1/2" Line Size Filters

Models A914D, A914P, A914, A914A

Models A914P and A914D are 1/4" line size assemblies with simple, reliable "automatic" drains used for low flow applications with moderate levels of liquid contaminate. The A914P is designed to empty condensate when there is a sudden pressure drop through the system (intermittent compressed air demand applications). The A914D incorporates an overnight drain which will drain liquid contaminate when the compressed air system pressure drops below 5 psig. The standard A914 utilizes a standard manual threaded drain. All models have a transparent polycarbonate bowl with an aluminum head. The Model A914A has a zinc bowl.

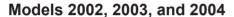

Models 2002 and 2003 are 1/4" and 3/8" line size assemblies. These filters have increased liquid holding capacity and are equipped with high capacity float drains, differential pressure indicators, sightglass, pressure relief valve, and 1/4 turn bayonet bowl closures. The 2004 series is designed to service 1/2" compressed air lines with low flow rates.

Model 2104

The Model 2104 is a 1/2" line size assembly with an aluminum bowl. The filter housing has a large liquid holding capacity and a high capacity float drain, differential pressure indicator, sightglass, pressure relief valve, and 1/4 turn bayonet bowl closure.



Model A914D, A914P. A914



Model 200X Series



Model A914A



Model 2104 Series



1/4" and 1/2" Line Size Filters

Principal Specificat	tions			
Model	A914	A914A	2002, 2003, 2004 (1)	2104 (1)
Port Size	1/4" NPT	1/4" NPT	1/4", 3/8", 1/2" NPT	1/2" NPT
Materials of Construction				
Head	Anod. Alum.	Anod. Alum.	Anod. Alum.	Anod. Alum.
Bowl	Polycarbonate	Zinc	Anod. Alum.	Anod. Alum.
Internals	Nylon	Nylon	Nylon	Nylon
Seals	Buna-N	Buna-N	Buna-N	Buna-N
Maximum Temperature	120°F (49°C)	220°F (104°C)	130°F (54°C) (2)	130°F (54°C) (2)
Maximum Pressure	150 psig (3)	250 psig (3)	250 psig (3)	250 psig (3)
Minimum Pressure	5 psig (4)	5 psig (4)	15 psig (4)	15 psig (4)
Shipping Weight	0.5 lbs. (0.2 kg)	0.5 lbs. (0.2 kg)	2.0 lbs. (0.9 kg)	2.5 lbs. (1.1 kg)
Dimensions	1.5"W X 4.0"L (4cm X 10cm)	1.5"W x 4.0"L (4cm X 10cm)	3.3"W X 8.5L" (8cm X 20cm)	3.3"W X 11.3"L (8cm X 28cm)

Ordering Informat	ion							
For assistance, call toll-free at 1-800-343-4048 8AM to 5PM Eastern Time								
Model	A914	A914A (8)	2002, 2003, 2004 (1)	2104 (1)				
Differential Pressure Indicator	Not Included (7)	Not Included (7)	Included (7)	Included (7)				
Replacement Filter Cartridges	S							
No. Required	1	1	1	1				
Box of 5	5/050-05-🖵 (5)	5/050-05-🖵 (5)	5/100-12- (5)	5/100-18-🗆 (5)				
Cartridges Box of 10	050-05-🗆 (5)	050-05-🗆 (5)	100-12-🗆 (5)	100-18-🖵 (5)				
CI Cartridge Box of 1		_	CI-100-12-000 (5)	CI-100-25-000 (5)				

Notes:


- 1 Lifetime (20 year) Warranty included. Contact your local representative for details.
- 2 Automatic drain and Differential Pressure Indicator are temperature limiting factors. For Temperature capabilities to 220°F (104°C), order assemblies without automatic Drain and Differential Pressure Indicator.
- 3 Maximum pressure ratings are for temperatures to 130°F (54°C). Please consult factory for maximum pressure ratings at elevated temperatures.
- 4 Required for proper operation of piston drain, overnight drain, or float drain.

- 5 Indicate grade of filter cartridge by putting appropriate letter after ordering number. To order assembly with Type CI cartridges, add-000 after assembly number. Example: 2104N-0A0-000
- ${\small 6\ \ Automatic\ drains\ not\ supplied\ with\ assemblies\ containing\ Type\ CI\ cartridges.}\\$
- 7 Differential Pressure Indicator (DPI) Kit may be ordered separately, P/N 41-071. DPI is sensitive in the range of 0-7 psi differential.
- 8 Order A914D-_X for overnight drain installed in the filter assembly. Order A914P-_X for piston drain installed in the filter assembly. Order A914A-_X for aluminum bowl and 250 psig rating.

How to Order the Filter Assembly*

Build your own custom filter assembly using the guideline matrix below and specify your model number. Example: 1/2" filter with DPI and Auto Drain with Grade DX Filter = 2104N-1B1-DX.

*Consult Factory. Not all configurations are available.

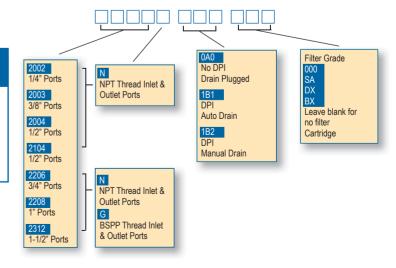



3/4" to 2" Line Size Filters

Models 2206, 2208, 2312, and A15/80

The Model A15/80 filter assembly has 2" NPT inlet and outlet ports, an automatic float drain and differential pressure indicator installed. The Models 2206, 2208, and 2312 filter assemblies have 3/4", 1", and 1 1/2" NPT inlet and outlet ports, respectively; these models are also equipped with automatic drains, sight glasses, pressure relief valve, bayonet closures, and differential pressure indicators. Materials of construction are shown below.









Fillicipal Specifica	LIUIIS			
Model A15/80	2206 (1)	2208 (1)	2312 (1)	
Port Size Materials of Construction	3/4" NPT	1" NPT	1 1/2" NPT	2" NPT
Head	Anod. Alum.	Anod. Alum.	Anod. Alum.	Anod. Alum.
Bowl	Anod. Alum.	Anod. Alum.	Anod. Alum.	Steel
Internals	Aluminum	Aluminum	Aluminum	St. Steel
Seals	Buna-N	Buna-N	Nuna-N	Buna-N
Maximum Temperature	130°F (54°C) (2)	130°F (54°C) (2)	130°F (54°C) (2)	130°F (54°C) (2)
Maximum Pressure	250 psig (3)	250 psig (3)	250 psig (3)	250 psig (3)
Minimum Pressure	15 psig (4)	15 psig (4)	15 psig (4)	15 psig (4)
Shipping Weight	8 lbs. (3.6 kg)	8 lbs. (3.6 kg)	15 lbs. (6.8 kg)	11 lbs. (5 kg)
Dimensions	4"W X 13"L (10cm X 33cm)	4"W X 13"L (10cm X 33cm)	5.0"W X 17L" (13cm X 43cm)	6.3"W X 28"L (16cm X

Ordering Information	Ordering Information									
For assistance, call toll-free at 1-800-343-4048 8AM to 5PM Eastern Time										
Model	2206	2208	2312	A15/80						
Differential Pressure Indicator	Included (6)	Included (6)	Included (6)	Included (6)						
Replacement Filter Cartridges										
No. Required	1	1	1	1						
Box of 5	5/150-19- (5)	5/150-19-🖵 (5)	5/200-35- (5)	5/200-80-🖵 (5)						
Box of 10	150-19-🖵 (5)	150-19-🖵 (5)	200-35- (5)	200-80- (5)						
CI Cartridge (Box of 1)	CI150-19-000	CI150-19-000	Cl200-35-000	CI200-80-000						

Model A15/80

Notes:

- 1 Lifetime (20 year) Warranty included. Contact your local representative for
- 2 Automatic Drain and Differential Pressure Indicator are limiting factors. For temperature capabilities to 220°F (104°C), order assemblies without Auto Drain and Differential Pressure Indicator.
- 3 Maximum pressure ratings are for temperatures to 130°F (54°C). Please consult factory for maximum pressure ratings at elevated temperatures.
- 4 Required for proper operation of the float drain.
- 5 Indicate grade of filter cartridge by putting appropriate letter after ordering number (please refer to PK1-2). Example: 5/150-19-DX, 200-35-BX.
- 6 The DPI is sensitive in the range of 0-5 psi differential.




71cm)

Principal Specifications

3" to 10" Line Size Filters

New LF/FF Series Multiple Cartridge Filter Assemblies

These filter assemblies provide high efficiency filtration of compressed air and other compressed gases at very high flow rates. With inlet and outlet ports accommodating 3" to 10" pipe sizes, the new LF/FF Series housings are capable of flow rates up to a maximum capacity of 37,350 SCFM at 100 psig. The standard carbon steel units, which are generally in stock (through 6" line sizes), have pressure ratings up to 250 psig.

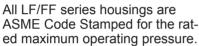

All FF Series vessels have built-in legs for floor mounting. Selected models have swing bolt enclosures for easy access to the internals. The filter cartridges in all models are sealed by tightening the threaded retainer cap onto the rigid tie rod, ensuring a leak tight seal on both ends of the cartridge.

Each assembly is equipped with a stainless steel automatic float drain, differential pressure indicator, and a set of filter cartridges (except where noted).

Benefits

Low Pressure Drop Lower Change out/Labor Costs

Lower Energy Costs
High Dirt Holding Capacity

Heat and Chemical Resistant No Wet Zone Oleophobic/Hydrophobic High Burst Strength

Calculation with Part-Load Operation (100 hp compressor)

Annual Electricity Costs =

[(Motor full-load brake horsepower) x (0.746 kW/hp)

x (Annual Hours of Operation) x (Electricity Cost in h(W)] x [(Percent of time running fully loaded) + (0.30) x (Percent of time running unloaded)] For example:

Full load motor efficiency = 90%

Motor full load bhp = 100 hp

Annual hours of operation = 8,760 hours (3-shift, continuous operation)
Runs 65% of the time fully loaded, 35% of the time unloaded

Unloaded operation consumes 30 percent of the electricity of fully loaded operation

Cost of electricity = \$0.10/kWh

Annual electricity costs =

[(100 hp) x (0.746 hp/kW) x (8,760 hrs) x \$0.10/kWh) / 0.9] x [0.65 + (0.30) x (0.35)] = \$54,272.00



Annual electricity costs to operate a 100 HP Compressor can be as high as \$50,000. Pressure loss in the system adds to this expense. For a system operating at 100 psig that loses 2 psig of pressure through a filter, requires an additional 1% in operating energy costs (1).

Installing a single stage HFC Filter in place of a standard brand X filter, will reduce the pressure drop by 2+ psi.

Based on a standard 100 HP compressor operating at a 65% load cycle, a 1% reduction in annual operating costs would be equal to \$542.00

High Flow Coalescing Filter Media HFC Grade

Efficiency: 99.5% @ 0.5 micron

Balston's HFC media consists of two layers. The outer layer features a dense matrix of glass fibers. It provides highly efficient coalescing aerosol removal and very low pressure drop. The inner layer, or initial stage of filtration, effectively traps dirt particles.



protecting and extending the life of the outer layer. A metal retainer is used for strength and stability. This media is used in bulk coalescing applications and when relatively high efficiency and low pressure drop are required.

High Efficiency Coalescing Media HEC Grade

Efficiency: 99.97% @ 0.01 micron

Air Flow: Inside to Outside

This coalescing element is composed of an epoxy saturated borosilicate glass micro-fiber tube. The HEC grade filter has a pleated cellulose inner layer as a built-in prefilter. This element is metal retained for added strength, and includes a synthetic fabric layer.



HEC filters are used when "total removal of liquid aerosols and suspended fines" is required. Because of its overall performance characteristics, this grade is most often recommended.

The HEC element is great prefilter protection for desiccant air dryers. This element prevents oil or varnish from coating the desiccant, while maintaining the dryer efficiency.

(1) Compressed Air Challenge, Doc # F9-1, April, 1998-Rev.0.



www.balstonfilters.com

HFC MEDIA Max. Rated Flows (SCFM) at Various Operating Pressures (0.25 psi pressure drop)

Model Number	2 PSIG	20 PSIG	40 PSIG	80 PSIG	100 PSIG	125 PSIG	150 PSIG	175 PSIG	200 PSIG	220 PSIG	250 PSIG
ALN3-0128-HFC	363	753	1187	2056	2490	3033	3575	4118	4661	5095	5746
ALF3-0128-HFC	363	753	1187	2056	2490	3033	3575	4118	4661	5095	5746
ALF4-0125-HFC	483	1004	1583	2741	3320	4044	4767	5491	6215	6793	N/A
ALF6-0136-HFC	725	1507	2375	4112	4980	6065	7151	8236	9322	10190	N/A
ALF6-0336-HFC	1088	2260	3562	6167	7470	9098	10726	12354	13983	15285	N/A
AFN3-0128-HFC	363	753	1187	2056	2490	3033	3575	4118	4661	5095	5746
AFF3-0128-HFC	363	753	1187	2056	2490	3033	3575	4118	4661	5095	5746
AFF4-0125-HFC	483	1004	1583	2741	3320	4044	4767	5491	6215	6793	N/A
AFF6-0136-HFC	725	1507	2375	4112	4980	6065	7151	8236	9322	10190	11493
AFF6-0328-HFC	1088	2260	3562	6167	7470	9098	10726	12354	13983	15285	N/A
AFF8-0428-HFC	1450	3013	4750	8223	9960	12131	14302	16472	18644	20380	22984
AFF10-0728-HFC	2538	5273	8312	14391	17430	21229	25028	28826	32627	35665	40222
AFF12-1128-HFC	3988	8286	13062	22614	27390	33360	39330	45298	51271	56045	63206
AFF16-1528-HFC	5438	11299	17812	30837	37350	45491	53632	61770	69915	76425	86190

HEC MEDIA Max. Rated Flows (SCFM) at Various Operating Pressures (1.5 psi pressure drop)

Model Number	2 PSIG	20 PSIG	40 PSIG	80 PSIG	100 PSIG	125 PSIG	150 PSIG	175 PSIG	200 PSIG	220 PSIG	250 PSIG
ALN3-0128-HEC	218	454	715	1238	1500	1827	2154	2481	2808	3069	3462
ALF3-0128-HEC	218	454	715	1238	1500	1827	2154	2481	2808	3069	3462
ALF4-0125-HEC	219	605	954	1651	2000	2436	2872	3308	3744	4092	N/A
ALF6-0136-HEC	437	908	1431	2477	3000	3654	4308	4962	5616	6139	N/A
ALF6-0328-HEC	654	1362	2145	3714	4500	5481	6462	7443	8424	9207	N/A
AFN3-0128-HEC	218	454	715	1238	1500	1827	2154	2481	2808	3069	3462
AFF3-0128-HEC	218	454	715	1238	1500	1827	2154	2481	2808	3069	3462
AFF4-0125-HEC	291	605	954	1651	2000	2436	2872	3308	3744	4092	N/A
AFF6-0136-HEC	437	908	1431	2477	3000	3654	4308	4962	5616	6139	6923
AFF6-0328-HEC	654	1362	2145	3714	4500	5481	6462	7443	8424	9207	N/A
AFF8-0428-HEC	872	1816	2860	4952	6000	7308	8616	9924	11232	12276	13848
AFF10-0728-HEC	1526	3178	5005	8666	10500	12789	15078	17367	19656	21483	24234
AFF12-1128-HEC	2398	4994	7865	13618	16500	20097	23694	27291	30888	33759	38082
AFF16-1528-HEC	3270	6810	10725	18570	22500	27405	32310	37215	42120	46035	51930


Housing Selection Chart

Model Number	HFC Replacement Element	HEC Replacement Element	Port Size	Port Type	# of Elements	. △ .
LINE MOUNT VESS ALN3-0128-H?C ALF3-0128-H?C ALF4-0125-H?C ALF6-0136-H?C ALF6-0328-H?C FLOOR MOUNT VE AFN3-0128-H?C AFF3-0128-H?C AFF4-0125-H?C AFF6-0136-H?C AFF6-0328-H?C AFF8-0428-H?C AFF10-0728-H?C AFF12-1128-H?C AFF16-1528-H?C	510-28- HFC 510-28- HFC 850-25- HFC 850-36- HFC 510-28- HFC	510-28-HEC 510-28- HEC 850-25- HEC 850-36- HEC 510-28- HEC 510-28- HEC 850-25- HEC 850-36- HEC 510-28- HEC 510-28- HEC 510-28- HEC 510-28- HEC 510-28- HEC	3 3 4 6 6 3 3 4 6 6 8 10 12 16	NPT FLANGE FLANGE FLANGE FLANGE FLANGE FLANGE FLANGE FLANGE FLANGE FLANGE FLANGE FLANGE	1 1 1 3 1 1 1 1 3 4 7 11	



1-800-343-4048

Drawings, Dimensions & Specifications

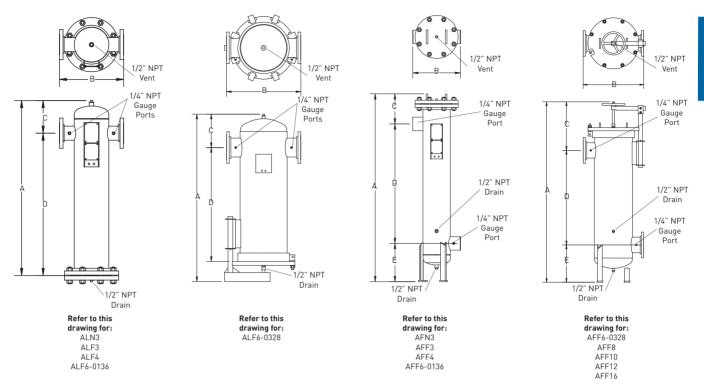

Dimensions	A	В	С	D	E	Element Removal Clearance (Inches/centimeters)	Capacity	Weight (pounds/kilograms)
ALN3	43.1/109.5	15.0/38.1	7.7/19.5	35.4/89.9	_	28/71.1	0.81/3	190/86
ALF3	43.1/109.5	16.0/40.6	7.7/19.5	35.4/89.9	-	28/71.1	0.81/3	190/86
ALF4	42.7/108.5	20.0/50.8	9.7/24.6	33.0/83.8	-	25/63.5	2.0/7	380/173
ALF6-0136	56.4/143.3	20.0/50.8	11.4/29.0	45.0/114.3	-	36/91.4	2.0/7	380/173
ALF6-0328	57.8/146.8	26.0/66.0	11.0/27.9	39.8/101.1	-	28/71.1	2.0/7	340/155
ALFN3	58.9/149.6	15.0/38.1	9.4/23.8	37.5/95.2	12.0/30.4	28/71.1	1.1/4	190/86
AFF3	58.9/149.6	16.0/40.6	9.4/23.8	37.5/95.2	12.0/30.4	28/71.1	1.2/4	200/91
AFF4	63.3/160.7	20.0/50.8	12.3/31.2	35.0/88.9	16.0/40.6	25/63.5	4.2/16	370/168
AFF6-0136	75.3/191.2	20.0/50.8	12.3/31.2	47.0/119.3	16.0/40.6	36/91.4	3.6/14	410/186
AFF6-0328	77.3/196.3	26.0/66.0	20.8/52.8	40.5/102.8	16.0/40.6	28/71.1	5.0/19	340/155
AFF8	87.3/221.7	30.0/76.2	25.8/65.5	42.5/108.0	19.0/48.3	28/71.1	8.7/33	550/250
AFF10	96.0/243.8	34.0/86.3	28.5/72.4	45.5/115.5	22.0/55.8	28/71.1	14.8/56	750/341
AFF12	101.0/256.5	44.0/111.7	27.5/69.8	47.5/120.6	26.0/66.0	28/71.1	25.5/97	1300/591
AFF16	112.0/28.4	52.0/132.0	32.0/81.3	50.0/127.0	30.0/76.2	28/71.1	56.2/213	1700/773

Materials of Construction

Body: Carbon Steel

Paint: Epoxy Enamel (Gray)

Internals: Epoxy powder painted carbon steel

Seals: Inorganic flange gasket (single element vessels)

Fluorocarbon o-ring (multi element vessels)

Internal Coating: Epoxy enamel

Specifications

Max Pressure: Up to 220-250 PSIG (Consult Flow Chart)

Max Temperature: 225°F(107°C)

Meets A.S.M.E. Code, Section VIII, Division 1: Note: Consult factory for special requirements



Balston High Pressure Compressed Air Filters

Balston high pressure compressed air filters offer exceptionally high efficiency coalescing filtration of compressed air at high flow rates. The housings are ASME Code stamped to 665 psig.

Since the coalesced liquid drains continuously from the filter cartridges as rapidly as it is collected, the filters have an unlimited capacity for liquid removal.

Each filter cartridge is mounted on a rigid permanent filter holder with a vibration-resistant removable tube retainer. The filter cartridge is self gasketing, and the filter holder is designed so that a perfect seal is easily made, even when the tube is replaced by an operator unfamiliar with the equipment.

AKH housings are available with inlet and outlet ports covering the range from 3" to 10" pipe sizes.



Principal Specifica	Principal Specifications - High Pressure Group										
Model (5)	AKH-0280	AKH-0480	AKH-0880	AKH-1480	AKH-2280						
Port Size Materials of Construction	3" FLG	4" FLG	6" FLG	8" FLG	10" FLG						
Vessel	Carbon Steel	Carbon Steel	Carbon Steel	Carbon Steel	Carbon Steel						
Filter Cartridge Holders	303 St. Steel	303 St. Steel	303 St. Steel	303 St. Steel	303 St. Steel						
Seals	Buna-N	Buna-N	Buna-N	Buna-N	Buna-N						
Maximum Temperature	250°F (121°C) (1)	250°F (14°C) (1)	250°F (121°C) (1)	250°F (121°C) (1)	250°F (121°C) (1)						
Maximum Pressure	665 psig (2)	665 psig (2)	665 psig (2)	665 psig (2)	665 psig (2)						
Minimum Pressure	10 psig	10 psig	10 psig	10 psig	10 psig						
Shipping Weight	150 lbs. (68 kg)	270 lbs. (123 kg)	560 lbs. (254 kg)	1120 lbs. (508 kg)	1430 lbs. (649 kg)						
Dimensions	16"W X 41"H (41cm X 104cm)	21"W X 40"H (53cm X 102cm)	25"W X 43"H (64cm X 109cm)	34"W X 54"H (86cm X 137cm)	36"W X 57"H (91cm X 145cm)						
Flange Center Line to Floor Dimension	7.75" (20cm)	6.25" (16cm)	8.5" (22cm)	16.25" (41cm)	17.25" (44cm)						
Flange to Flange Dimension	15.63" (40cm)	20.63" (52cm)	24.75" (63cm)	34" (86cm)	36" (91cm)						

Ordering Information - High Pressure Group (4)							
For assistance, call toll-free at 1-800-343-4048 8AM to 5PM Eastern Time							
Model (3)	AKH-0280-□	AKH-0480-□	AKH-0880-□	AKH-1480-□	AKH-2280-□		
Replacement Filter Cartrido	•						
No. Required	2	4	8	14	22		
Box of 5	5/200-80- (4)	5/200-80- (4)	5/200-80- (4)	5/200-80- (4)	5/200-80- (4)		
Box of 10	200-80- (4)	200-80-🗆 (4)	200-80-🖵 (4)	200-80-🖵 (4)	200-80-🖵 (4)		
CI Cartridge (Box of 1)	CI-200-80-000	CI-200-80-000	CI-200-80-000	CI-200-80-000	CI-200-80-000		

Notes:

1 Maximum operating temperature of carbon steel vessel is 650°F (343°C). Minimum operating (process and ambient pressure) temperature is -20°F (29°C). Max. Temps.

for Seal material: 250°F (Buna), 400°F (Viton), 450°F (Silicone). Seal material may not be the limiting factor. Maximum temperature for assemblies with DPI is 130°F (54°C)

- 2 Vessel is ASME Section VIII, Div. 1 code stamped for rated pressure.
- 3 Differential Pressure Indicator and Automatic Drain are not included with AKH Assemblies, or with assemblies containing Type CI Cartridges.
- 4 To order filter cartridges, indicate grade of filter cartridge by placing appropriate letter cartridge designation after the last digit. Example: 200-80-DX.



Stainless Steel Compressed Air Filters for Harsh Environments

Balston Stainless Steel Compressed Air Filter Assemblies:

Balston Compressed Air Filters protect your equipment and delicate instruments from the dirt, water, and oil usually found in compressed air and other gases. These filters will remove contaminants at a very high efficiency up to 99.99% for 0.01 micron particles and droplets. Liquid releases from the filter cartridge to an automatic drain as rapidly as it enters the filter. This allows the filter to continue removing liguids for an unlimited time without loss of efficiency or flow capacity. Select 1/4" to 1" line filters are constructed of 304 stainless steel and are designed to hold up to the harshest environments.



Product Features:

- All 304 stainless steel construction, ideal standing up to aggressive washdown chemicals
- Remove 99.99% of 0.01 micron particles of oil, water, and dirt from compressed air and other gases
- For Sterile Air Requirements:
- USDA accepted for use in federally inspected meat and poultry plants
- Low pressure drop
- Continuously trap and drain liquids
- Remove trace oil vapor with adsorbent cartridges

Petrochemical Textiles Pulp and Paper Refineries



Stainless Steel Filters for Harsh Environments

Filter Cartridge Description

General purpose applications such as plant compressed air

Single stage filtration. Use a Grade DX filter cartridge

Instrument air and other critical air requirements

Two stage filtration is necessary. Use a Grade DX followed by a Grade BX filter cartridge. As a general rule, a Grade BX filter cartridge should not be used alone.

Removal of trace compressor oil vapor

For rare instances where even a trace amount of oil vapor can cause a problem, three stage filtration is necessary. Use a Grade DX followed by a Grade BX, and a type CI cartridge.

Physical Properties, Microfibre Filter Cartridges

Temperature Range

-40°F to 300°F (-40°C - 149°C)

Maximum Pressure Differential Across Filter, Inside-to-Outside Flow:

100 psi

Materials of Construction

Borosilicate glass microfibers with fluorocarbon resin binder. Resistant to water, all hydrocarbon and synthetic lubricants.

Retent	Retention Efficiency					
Grade	Efficiency for 0.01 Micron Particles and Droplets					
DX	93%					
BX	99.99%					

Balston Filter Cartridges

Balston provides two grades of coalescing filter cartridges, Grade DX and Grade BX. Singly or in tandem, these filters satisfy all requirements for removing liquid and solid contaminants from compressed air. Balston also has an activated carbon adsorbent CI-type cartridge for the removal of trace oil vapors from a compressed air line. The activated carbon cartridge is Grade 000.

How to Select the Filter Cartridge and Housing

- 1 Decide which grade(s) of filter cartridges fits the application (see selection boxes at left).
- Select the filter housing with a port size equal to the line size where the filter is to be located.
- 3 For a new installation in which the line size has yet to be selected, determine the gas flow rate and pressure at the point where the filter will be located, and then refer to the flow chart on the reverse side of this data sheet. NOTE: The filter port size must be equal to or larger than the line size (when specified).

How to Order the Filter Assembly

- Build your own custom filter assembly using the guideline matrix on Page 16 and specify your model number. Example: 1/2" filter with DPI and Auto Drain with Grade DX Filter = 6004N-01A-DX.
- 2 Each assembly is shipped with the filter cartridge installed. To order additional filter cartridges, indicate the model number of the cartridges, and the grade. Examples 050-05-DX, 050-05-BX. The grade used for Type CI cartridges is 000 (CI-100-12-000).

Note: Assemblies with CI Cartridges are shipped with the adsorbent cartridge wrapped separately. This shipping method prolongs the life of the cartridge.



18 1-800-343-4048

Stainless Steel Filters for Harsh Environments

Models 6102, 6002, 6904

The 6102 and 6002 series models are 1/4" line size filters designed for lower flow systems and installations with space limitations. It is offered with two drain options, a manual drain or an auto float drain for maintenance free operation. The model 6904 offers 1/2" inlet and outlet connections, for applications requiring 1/2" pipe with space limitation requirements.



The 6004 series models are 1/2" line size filters designed for moderate flow rate systems. This series has increased liquid holding capacity which safeguards sensitive end use points from system upsets and morning start ups.



The 6006 and 6008 series models are 3/4" and 1" line size filters respectively. These are designed for high flow rate systems servicing multiple end use points. These are also offered with a high capacity auto float drain option.



Models 6102, 6002, 6904

Model 6004




Models 6006 and 6008

How to Order the Filter Assembly*

Build your own custom filter assembly using the guideline matrix below and specify your model number. Example: 1/2" filter with Auto Drain and Grade DX Filter = 6004N-0A1-DX.

*Consult Factory. Not all configurations are available.

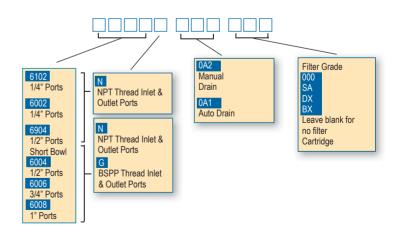



Stainless Steel Filters for Harsh Environments

Flow Rates

Filter Housing Model	Port Size	Filter Cartridge Grade	Flow rates (SCFM), at 7 psi drop at indicated line pressure (over 3 stages). Refer to Principal Specification Charts in each product data sheet for maximum pressure rating of each housing PSIG								
			2	20	40	80	100	125	150	200	250
6102N	1/4"	DX	3.5	8	11	20	25	30	36		
		BX	1	2	3.5	5.7	6.8	8	10		
6002N	1/4"	DX	9	19	39	51	63	76	90	117	145
6904N	1/2"	ВХ	3	8	11	21	25	31	36	47	58
		CI	2	5	7	12	15	18	22	28	35
		SA		8	11	21	25	31	36		
6004N	1/2"	DX	19	41	65	113	137	166	196	257	316
		BX	9	19	30	51	63	76	90	117	145
		CI	6	12	19	32	39	48	56	73	90
		SA		19	30	51	63	76	90		
6006N	3/4"	DX	37	78	123	214	259	315	371	484	596
		BX	10	21	34	56	70	85	101	131	162
		CI	8	16	26	44	53	65	76	99	122
		SA		21	34	56	70	85	101		
6008N	1"	DX	55	115	181	314	380	463	546	711	877
		BX	11	23	37	64	77	94	111	144	178
		CI	10	20	32	56	67	82	96	125	154
		SA		23	37	64	77	94	111		

Sterile Air Filters

Balston grade SA filter cartridges, rated at 99.9999+% efficiency for 0.01 micron particles, is at least 30 times better than the accepted standard for sterile air filters developed by independent research organizations in the U.S. and U.K. (request bulletin TI-105A for a detailed discussion on Balston filter efficiency rating procedure, and Bulletin TI-935 for an independent test report on balstonSterile Air Filters). Balston Sterile Air Filters are in full compliance with the requirements of the FDA.

Steam Sterilization Procedure

In installations where the sterile air filter requires steam sterilization, we recommend the following procedures:

The steam sterilization pressure should not exceed 60 psig. Preferably, it should be held to 40 psig or less. A typical sterilization cycle is 30 psig steam for 30 minutes. Steaming time can be increased as desired without harm to the filter cartridges. The steam flow should not exceed the normal air flow for the unit. To ensure no buildup of condensate in the housing, condensate should be drained from the filter by a condensate drain valve during the steaming process. The cleanliness of the steam is an important factor influencing the life of the Sterile Air Filter cartridges. Parker strongly recommends using Model 23 Steam Filters to ensure optimum operating life. When autoclaving, the Grade SA filter cartridges will tolerate temperatures to 300°F (149°C) in dry gas. Viton or other heat resistant seals should be used in the housing.



20 1-800-343-4048

Stainless Steel Filters for Harsh Environments

Principal Specifications								
Model	6102	6002	6904	6004	6006	6008		
Port Size	1/4" NPT	1/4" NPT	1/2" NPT	1/2" NPT	3/4" NPT	1" NPT		
Materials of Construction								
Head	316 Stainless Steel	304 Stainless Steel -				→		
Bowl	316 Stainless Steel	304 Stainless Steel -				→		
Internals	Acetal	Stainless Steel -				→		
Seals	Viton	Buna-N Food Grade -				→		
Maximum Temperature	140°F (60°C) (1)	120°F (49°C) (1) —				→		
Maximum Pressure	150 psig (2)	175 psig (2)				→		
Minimum Pressure	15 psig (3)	15 psig (3) ————				→		
Shipping Weight	3.5 lbs.	3.5 lbs.	3.5 lbs.	4.0 lbs.	11 lbs.	12 lbs.		
Dimensions	1.5"W x 4.2"L (3.8cm x 11.7cm)	3"W X 7"L (7cm X 18cm)	3"W X 7"L (7cm X 18cm)	3"W X 10"L (7cm X 25cm)	4"W X 10"L (10cm X 25cm)	4"W X 12"L (10cm X 30cm)		

³ Required for proper operation of auto drain.

Assembly Ordering Information Model P/N	on Filter Tube	Drain (Manual)	Drain (Auto. Float)	Mounting Bracket	(etainlace etaal)
6102N-0A0-(?X)	070-063-(?X)	SAP05481	N/A	N/A	(Stairliess steel)
6102N-0A1-(?X)	070-063-(?X)	N/A	C02-2392	N/A	
6002N-0A2-(?X)	100-12-(?X)	C01-0108	N/A	C01-0094	
6002N-0A1-(?X)	100-12-(?X)	N/A	C01-0109	C01-0094	
6002N-0A2-SA	100-12-SA	C01-0108	N/A	C01-0094	
6002N-0A2-000	CI-100-12-000	C01-0108	N/A	C01-0094	
6904N-0A2-(?X)	100-12-(?X)	C01-0108	N/A	C01-0094	
6904N-0A2-(?X)	100-12-(?X)	N/A	C01-0109	C01-0094	
6904N-0A2-SA	100-12-SA	C01-0108	N/A	C01-0094	
6904N-0A2-000	CI-100-12-000	C01-0108	N/A	C01-0094	
6004N-0A2-(?X)	100-18-(?X)	C01-0108	N/A	C01-0094	
6004N-0A1-(?X)	100-18-(?X)	N/A	C01-0109	C01-0094	
6004N-0A2-SA	100-18-SA	C01-0108	N/A	C01-0094	
6004N-0A2-000	CI-100-18-000	C01-0108	N/A	C01-0094	
6006N-0A2-(?X)	200-176-(?X)	C01-0108	N/A	C01-0094	
6006N-0A1-(?X)	200-176-(?X)	N/A	C01-0109	C01-0094	
6006N-0A2-SA	200-176-SA	C01-0108	N/A	C01-0094	
6006N-0A2-000	200-176-000	C01-0108	N/A	C01-0094	
6008N-0A2-(?X)	200-185-(?X)	C01-0108	N/A	C01-0094	
6008N-0A1-(?X)	200-185-(?X)	N/A	C01-0109	C01-0094	
6008N-0A2-SA	200-185-SA	C01-0108	N/A	C01-0094	
6008N-0A2-000	200-185-000	C01-0108	N/A	C01-0094	
Replacement Filter Cartridge	Ordering Information				
Model P/N	6102	6002/6904	6004	6006	6008
Replacement Filter Cartridges					
Number required	1	1	1	1	1
Box of 5	5/070-063-(?X)	5/100-12-(?X)	5/100-18-(?X)	5/200-176-(?X)	5/200-185-(?X)
Box of 10	070-063-(?X)	100-12-(?X)	100-18-(?X)	200-176-(?X)	200-185-(?X)
Box of 10	070-063-SA	100-12-SA	100-18-SA	200-176-SA	200-185-SA
CI Cartridges (box of 1)		CI100-12-000	CI100-18-000	CI200-176-000	CI200-185-000



perature with manual drain is 275°F.

¹ Max. temperature with auto drain Max. tem- 2 Max. pressure with auto drain. Max. pressure with manual drain is 250 psi.

Disposable Filter Silencers

Models 9955-05-DX, 9955-11-DX, 9955-12-DX, AR-009-DX

Balston Filter/Silencers for air exhausts offer the combination of unusually effective sound attenuation and filtration of all visible oil mist from the exhaust air. The Filter/Silencers are available in 1/8", 1/4", 1/2", and 3/4" port sizes. They contain a Grade DX Microfiber Filter Cartridge sealed into a molded nylon or steel holder.

Balston Filter/Silencers are remarkably efficient sound mufflers, far more efficient than the felts, pleated paper, sintered plastic, and sintered metal products commonly used in other exhaust silencers. A sound attenuation efficiency test comparing a 9955-12-DX, 1/2" Filter/Silencer with a sintered polyethylene silencer is described below.

This silencing efficiency test simulates the action of an air cylinder discharging rapidly to atmosphere. A length of 1/2" line between two ball valves is pressurized with air to a controlled pressure. The upstream valve is closed and then the downstream valve is opened rapidly to discharge the fixed volume of air under pressure to atmosphere. Noise levels were measured at a 3 foot distance with no silencer on the end of the line, with the Balston Filter Silencer, and with competitive silencers.

Noise Level Upstream Pressure (psig)							
(dBA)	100	80	60	40	20		
Without Silencer	102	102	101	99	95		
With Balston Silencer 65	70	70	69	67			
With Sintered Polyethylene Silencer	88	88	87	87	81		

A similar test of the Model AR-009-DX on a 3/4" air line gave the following results:

Sound Level 3 ft. from 3/4" Air Line Discharging Air At 100 PSIG Atmosphere					
Without Silencer	With Model AR-009-DX				
113 dBA	94 dBA				



Model 9955-05-DX



Model 9955-11-DX



Model 9955-12-DX



Model AR-009-DX



Disposable Filter Silencers

Principal Specifications							
Model	9955-05-DX	9955-11-DX	9955-12-DX	AR-009-DX			
Inlet Port	1/8" NPT (Male)	1/4" NPT (Male)	1/2" NPT (Male)	3/4" NPT (Female)			
Drain Port	1/4" OD Tubing	1/4" OD Tubing	1/4" OD Tubing	1/8" NPT (Female)			
Materials of Construction							
Filter Cartridge	Borosilicate glass micro	fibers with fluorocarbon resin b	inder				
Holder	Nylon	Nylon	Nylon	Aluminum			
Internals	_			Aluminum			
Maximum Internal Pressure at 110°F (43°F)	100 psig (1)	100 psig (1)	100 psig (1)	100 psig (1)			
Maximum Temp. at	roo poig (1)	100 poig (1)	100 poig (1)	roo paig (1)			
0 psig Internal Pressure	260°F (127°C)	260°F (127°C)	260°F (127°C)	300°F (149°C)			
Shipping Weight	0.5 lb (0.2 kg)	0.5 lb (0.2 kg)	0.5 lb (0.2 kg)	1 lb (0.5 kg)			
Dimensions	1.4" dia. X 2.0"h	1.4" dia. X 3.0"h	2.0" dia. X 3.7"h	3.95" dia. X 5.13"h			
	(4cm X 5cm)	(4cm X 8cm)	(5cm X 9cm)	(10cm X 13cm)			

Notes:

1 With the outlet open to atmosphere. Otherwise, maximum internal pressure is 15 psig.

Ordering Information						
For assistance, call toll-free at 1-800-343-4048 8AM to 5PM Eastern Time						
Model	Description					
9955-05-DX, 9955-11-DX, 9955-12-DX	Standard Pack 10 Filter Silencers per box, individually wrapped					
AR-009-DX	Complete Assembly with one filter element					
Replacement Element for AR-009-DX 2/BE200-168-DX BE200-168-DX	Boxes of 2 Boxes of 10					

Flow Rates	Flow Rate from Pressured Line through Filter to Atmosphere (cu. ft. per sec.)					
Filter Housing Type	100 psig Line Pressure	60 psig Line Pressure	20 psig Line Pressure			
9955-05-DX	3	1.2	0.2			
9955-11-DX	10	4	0.7			
9955-12-DX	35	14	2.2			
AR-009-DX	105	42	6.6			




Filter Regulators

Filter-Regulator Combinations

Balston Filter-Regulators combine a high efficiency coalescing filter with a high quality pressure regulator. Air flows through the filter, then to the pressure regulator. The filter is a Balston coalescing compressed air filter (Grade BX) and will completely remove oil, water, and dirt from compressed air and other compressed gases. Flow direction through the element is inside-to-outside for optimum oil and water removal. An automatic drain is installed on the 3/8", 1/2", and 3/4" models offering maintenance-free operation. Pressure gauges are standard and are available in up to 4 different ranges (see ordering information).



AFR-940, AFR-940A

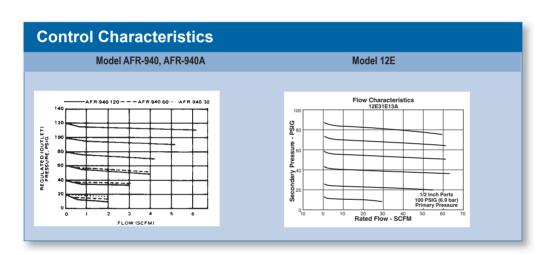



12E Series



24 1-800-343-4048

Filter Regulators

Principal Specifications							
Model	AFR-940	AFR-940A	12E27	12E37	12E47		
Port Size	1/4" NPT	1/4" NPT	3/8" NPT	1/2" NPT	3/4" NPT		
Gauge Ports	1/8" NPT	1/8" NPT	1/4" NPT	1/4" NPT	1/4" NPT		
Materials of Construction							
Head	Anod. Alum.	Anod. Alum.	Zinc	Zinc	Zinc		
Bowl	Polycarb.	Anod. Alum.	Zinc	Zinc	Zinc		
Bonnet	Polycarb.	Polycarb.	Plastic	Plastic	Plastic		
Internals	Brass/Buna	Brass/Buna	Zinc/Nitrile	Zinc/Nitrile	Zinc/Nitrile		
Maximum Temperature	220°F (104°C)	220°F (104°C)	125°F (52°C)	125°F (52°C)	125°F (52°C)		
Maximum Pressure	150 psig (2)	250 psig (2)	250 psig (2)	250 psig (2)	250 psig (2)		
Minimum Pressure			15 psig (1)	15 psig (1)	15 psig (1)		
Shipping Weight	0.5 lbs. (0.2 kg)	0.5 lbs. (0.2 kg)	2.5 lbs. (1.1 kg)	2.5 lbs. (1.1 kg)	2.5 lbs. (1.1 kg)		
Dimensions	1.2"W X 6"L (3cm X 15cm)	1.2"W X 6"L (3cm X 15cm)	3.25"W X 13"L (8 cm X 33cm)	3.25"W X 13"L (8 cm X 33cm)	3.25"W X 13"L (8cm X 33cm)		

Ordering Information							
For assistance, call toll-free at 1-800-343-4048 8AM to 5PM Eastern Time							
Model	AFR-940	AFR-940A	12E27	12E37	12E47		
Control Gauge Pressure	Range						
0-30 psig	AFR-940-30	AFR-940A-30	see ordering matrix below				
5-60 psig	AFR-940-60	AFR-940A-60	see ordering matrix below				
10-130 psig	AFR-940-130	AFR-940A-130	see ordering matrix below				
Auto. Drain	N/A (1)	N/A (1)	Included (1)	Included (1)	Included (1)		
Replacement Filter Cartri	idges						
Number Required	1	1	1	1	1		
Box of 5	5/050-05-BX	5/050-05-BX	5/130-14-BX	5/130-14-BX	5/130-14-BX		
Box or 10	050-05-BX	050-05-BX	130-14-BX	130-14-BX	130-14-BX		
Mounting Bracket	11536	11536	PS807P	PS807P	PS807P		


Notes

- 1 Minimum operating pressure for automatic drain is 15 psig.
- 2 Maximum pressure ratings are for tem-

peratures to 130°F (54°C). Please consult the factory for maximum pressure ratings at elevated temperatures.

How to Order

To order product with desired port size and Regulating Pressure Range, select the indicator digits from the matrix (at right). This will complete the entire model number which is needed to place an order.

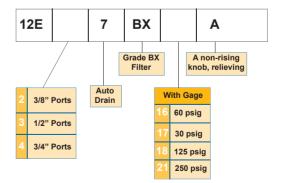



Mist Lubricators

Model 17L Series

Many pneumatic system components and most tools require oil lubrication for proper operation and long service life. This lubricant is typically carried by the air stream. Too little oil can cause excessive wear and premature failure. Too much oil is wasteful and can become a contaminant. Use of the proper lubricator can greatly extend the life of expensive downstream pneumatic equipment.

The 17L Series Micro-Mist Lubricators offer proportional oil delivery over a wide range of air flows. The precision needle valve assures repeatable oil delivery and provides simple adjustment of delivery rate. They are designed to generate oil droplets of 5 microns or smaller downstream to lubricate systems having complex piping arrangements. The 17L series are ideal for low and high flow applications with changing air flow.




17L Series

How to Select the Correct Lubricator

Once the required flow is determined for a pneumatic application, the lubricator can be selected by using the flow chart. To read the lubricator flow chart, first determine the inlet pressure that will be used. Find the appropriate pressure curve on the graph. Each graph will contain three pressure curves. If the required inlet pressure is not on the graph, interpolate a similar curve for the required pressure.

Next, determine the acceptable pressure drop across the lubricator and locate it on the vertical axis. Find the intersection point of the acceptable pressure drop and the inlet pressure curve. At this point, follow a vertical path downward to view the flow in SCFM. If the flow is too low, select a larger port size or body size to give the required flow. If the flow is higher than necessary, select a smaller port size or body size to give the required flow.

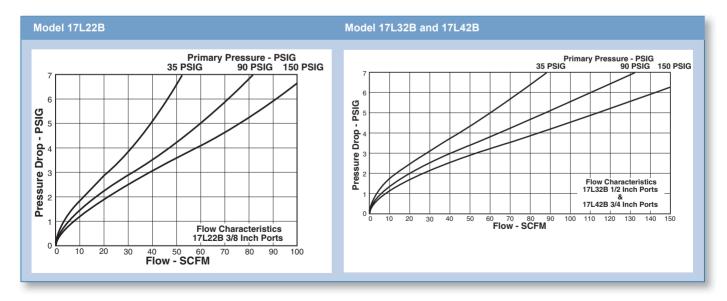



26 1-800-343-4048

Mist Lubricators

Principal Specificati	ons		
Model	17L22BE	17L32BE	17L42BE
Port Size	3/8" NPT	1/2" NPT	3/4" NPT
Gauge Ports	1/4" NPT	1/4" NPT	1/4" NPT
Materials of Construction			
Head	Zinc	Zinc	Zinc
Bowl	Polycarbonate	Polycarbonate	Polycarbonate
Bowl Guard	Steel	Steel	Steel
Collar	Plastic	Plastic	Plastic
Seal	Nitrile	Nitrile	Nitrile
Sight Dome	Polycarbonate	Polycarbonate	Polycarbonate
Sight Gage	Polyamide	Polyamide	Polyamide
Maximum Temperature	125°F (52°C)	125°F (52°C)	125°F (52°C)
Maximum Pressure	150 psig	150 psig	150 psig
Minimum Pressure	15 psig	15 psig	15 psig
Shipping Weight	1.9 lbs. (0.9 kg)	1.9 lbs. (0.9 kg)	1.9 lbs. (0.9 kg)
Dimensions	3.25"W X 9.27"L (85mm X 235mm)	3.25"W X 9.27"L (85mm X 235mm)	3.25"W X 9.27"L (85mm X 235mm)

Ordering Information										
For assistance, call t	coll-free at 1-800-343-4048 8AM to 5P	M Eastern Time								
Model	17L22BE (3/8"NPT)	17L32BE (1/2"NPT)	17L42BE (3/4"NPT)							
Service Kit	PS748P	PS748P	PS748P							



Compressed Air FiltersSelection Chart Prep-Air® II Air Preparation Units

Product Selection Chart

Basic Unit	Series		Port Size (inches)											Bowls		Capacity	Elements (Micron)	Page
		1/8	1/4	3/8	1/2	3/4	1	1-1/4	1-1/2	2	2-1/2	3	Poly	Metal	Metal SG		5	1 age
F I L	FF10				X								316 St	316 Stainless Steel		4 oz.	Standard	29
L T E R S	10F	Χ	X										Х	X	X	1 oz.	Grade 6 Std., Grade 10 Opt.	31
C O A L	FF501		Х										316 Stainless Steel		1 oz.	Grade 6	33	
E S C E R	FF11				X								316 Stainless Steel			4 oz.	Grade 6	35

Ba	sic	Series			Port S	ize (ir	nches)		Spring	Page	
Unit		Series	1/8	1/4	3/8	1/2	3/4	1	1-1/2	125	raye	
R E G U		FR364		X						Standard	37	
	S T A	05R		X	X					Standard	39	
LATORS	N D A R	FR10				Х				Standard	41	
R	D	07R			Χ	Х	X			Standard	43	
		P3NR					Х	Χ	Х	Standard	45	

^{*}Sight gauge



28 1-800-343-4048

Compressed Air FiltersSelection Chart Prep-Air® II Air Preparation Units

Product Selection Chart


Basic Unit	Series	Port Size								Bowl	s	0	Elements (Micron)	Spring Range	Page
		1/8	1/4	3/8	1/2	3/4	1	1-1/2	Poly	Metal	Metal SG	Capacity	5	125	raye
F I L T E R	14E	Х	Х						Х	Х	N/A	1 oz.	Standard	Standard	47
/	FB548	548 X 316		316 Stainless Steel		1 oz.	Standard	Standard	49						
R E G U L A T	06E		X	X	X				Х	Х	X	4.4 oz.	Standard	Standard	51
T 0 R S	FB11				X				31	316 Stainless Steel		4 oz.	Standard	Standard	53

^{*}Sight gauge




Air Preparation Units - Drains

Automatic Pulse Drain

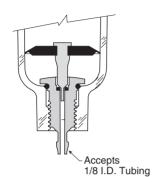

Automatic Float Drain

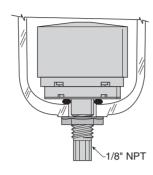

(Spitter Drain)


The diaphragm in this drain pulses when there is a pressure differential such as a valve cycling or cylinder stroking downstream. This action flexes the diaphragm and allows the filter to drain the entrapped water.

The float internal to this drain rises with increased liquid level. When the float rises, it opens a seat area allowing the trapped liquids to drain through the bottom.

A manual override can be pushed in the bottom of the drain to unseat the float if particulates create a block.

30 1-800-343-4048


Air Preparation Units - FF10 Filter - Standard 1/2" NPT Ports

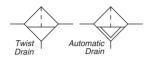



Features

- Stainless steel construction handles most corrosive environments.
- Meets NACE specifications MR-01-75/ISO 15156.
- 1/8" female threaded drain.
- High Flow: 1/2" 70 SCFM §

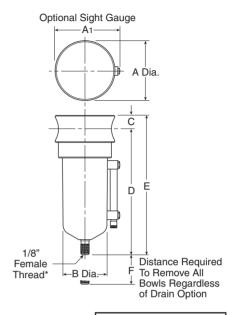


	NPT withou	NPT without sight gauge		NPT with sight gauge	
Port Size	Manual Twist Drain	Automatic Float Drain	Manual Twist Drain	Automatic Float Drain	
1/2"	FF10-04DGSS	FF10-04DGRSS	FF10-04WGSS	FF10-04WGRSS	

§ SCFM = Standard cubic feet per minute at 90 PSIG inlet and 5 PSIG pressure drop.


F10 Filter Dimensions		
A	A 1	B
2.38	2.50	1.75
(60)	(64)	(44)
C	D	E
.56	5.00	5.56
(14)	(127)	(141)
F		

inches (mm)

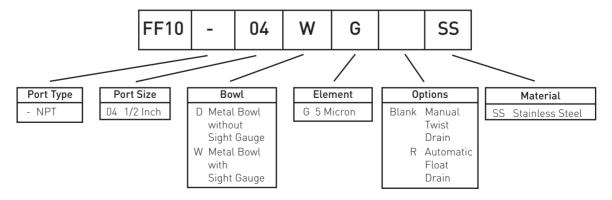



Air Preparation Units - FF10 Air Line Filters Technical Information

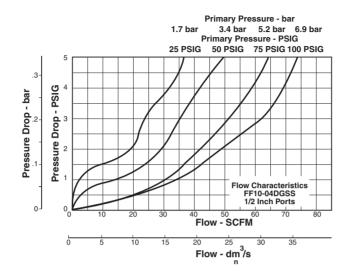

FF10 Filter Kits & Accessories

Drain Kit –	
Automatic Float Drain	SA602MDSS
Manual Twist Drain-	
Small (Old)	SA600Y7-1SS
Large (New)	SAP05481
Filter Element Kits –	
Particulate (5 Micron) Element	EK55G
Pipe Nipple - 1/2" 316 Stainless Steel	
Specifications	
•	/ 0 0
Bowl Capacity	
Filter Rating	
Sump Capacity	1.7 Ounce
Port Threads	1/2 Inch
Pressure & Temperature Ratings –	
Manual Twist Drain (D-Bowl)	0 to 300 PSIG (0 to 20.7 bar)
	0°F to 180°F (-18°C to 82°C)
Manual Twist Drain (W-Bowl)	0 to 250 PSIG (0 to 17.2 bar)
	0°F to 150°F (-18°C to 66°C)
Automatic Float Drain	
	40°F to 125°F (4°C to 52°C)
Note: Air must be dry enough to avoid ice	
below 32°F (2°C).	
Weight	1.9 lb. (0.85 kg)

Materials of Construction

Body	316 Stainless Steel
Bowls	316 Stainless Steel
Deflector	Acetal
Drain	316 Stainless Steel
Element Holder	Acetal
Filter Element	Polyethylene
Seals	Fluorocarbon
Sight Gauge	Isoplast



32 1-800-343-4048

Air Preparation Units - 10F Coalescing Filters - Miniature 1/8", 1/4" Basic 1/8" Body







Features

- Removes liquid aerosols and sub-micron particles.
- Liquids gravitate to the bottom of the element and will not re-enter the airstream.
- Oil free air for critical applications, such as air gauging and pneumatic instrumentation and controls.
- Interchangeable twist and automatic pulse drains.
- Grade 6 element,
 99.97% DOP efficiency.
- High Flow: Grade 6 Element

1/8" - 17 SCFM § 1/4" - 20 SCFM §

Grade 10 Element 1/8" - 19 SCFM [§] 1/4" - 24 SCFM [§]

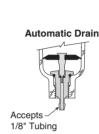

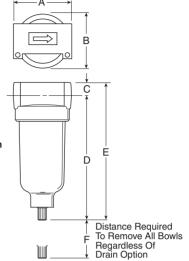


Port	NPT		
Size	Twist Drain	Automatic Pulse Drain	
Poly Bowl	‡		
1/8"	10F01E*	10F05E*	
1/4"	10F11E*	10F15E*	
Metal Bowl without Sight Gauge			
1/8"	10F03E*	10F07E*	
1/4"	10F13E*	10F17E*	

Standard part numbers shown bold, with Grade 6 Elements (for Grade 10 Elements, replace "E" with "H" in the 6th position). For other models refer to ordering information below.

- [‡] For polycarbonate bowl see Caution on page 2.
- § SCFM = Standard cubic feet per minute at 90 PSIG inlet and 5 PSIG pressure drop.


10F Coalescing Filter Dimen- sions		
A 1.69 (43)	B 1.56 (39,6)	C 0.39 (10)
D 3.82 (97)	D ⁺ 3.67 (93)	E 4.21 (107)
E [†] 4.06 (103)	F 1.60 (41)	

Inches (mm)

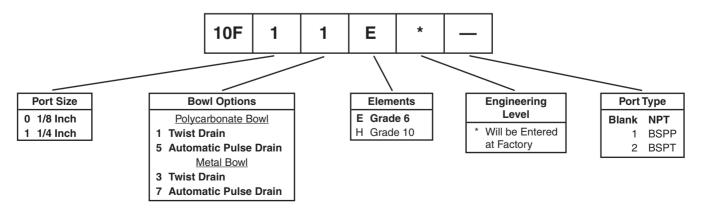



[†] With Automatic Pulse Drain.

Air Preparation Units - 10F Coalescing Filters Technical Information

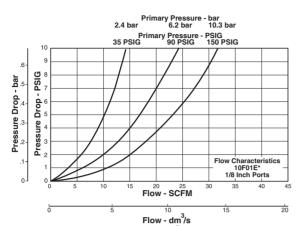




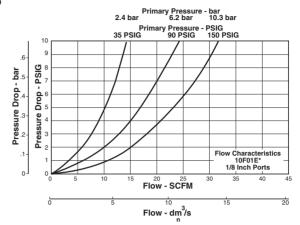

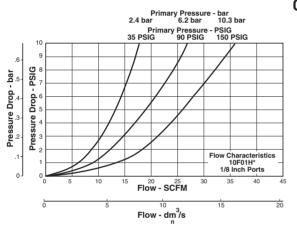



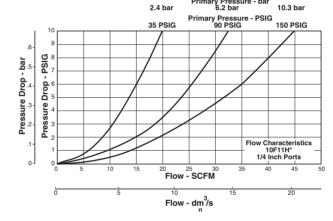

10F Coalescing Filter Kits & Accessories

Bowl Kits –	
Poly Bowl - Automatic Pulse Drain	. PS408BP
Twist Drain	PS404P
Metal Bowl – Automatic Pulse Drain	. PS451BP
Twist Drain	. PS447BP
Filter Element Kits – Grade 6 (Standard)	PS446P
Grade 10 (Optional) PS456P	
Mounting Bracket Kit PS417BP	

Specifications

Automatic Pulse Drain Tube Barb	1/8 Inch
Bowl Capacity	1 Ounce
Operation – Normal Operating Pressure Drop Maximum Recommended Pressure (Element should be replaced)	
Port Threads	1/8, 1/4 Inch
Pressure & Temperature Ratings –	
Polycarbonate Bowl	
	32°F to 125°F (0°C to 52°C)
Metal Bowl	
	32°F to 175°F (0°C to 80°C)
Automatic Pulse Drain	10 to 250 PSIG (0.7 to 17.2 bar)
	at 125°F (52°C) or less
Maight	0 / 1 lb (0 10 kg)

Materials of Construction

i later late of constituents.
BodyZinc
Bowls Transparent Polycarbonate
Metal (Zinc) Without Sight Gauge
Drains - Twist Drain -
Body & StemPlastic
SealsNitrile
Automatic Pulse Drain –
Piston & SealsNitrile
Stem, Seat, Adaptor & Washers Aluminum
Element Holder
Filter Element –
Borosilicate & felt glass fibers 99.97% DOP efficiency
Largest Aerosol Particle Passed (Grade 6)0.01 Micron
Largest Solid Particle Passed (Grade 6)
Seals Nitrile


Air Preparation Units FF501 Coalescing Filter - Miniature 1/4" Ports



Features

- Stainless steel construction handles most corrosive environments.
- Meets NACE specifications MR-01-75/ISO 15156.
- 1/8" female threaded drain*.
- High Flow: 1/4" 16 SCFM §



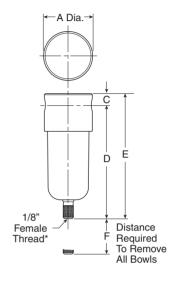


Port	NPT	
Size	Manual Twist Drain	
1/4"	FF501-02DHSS	

Standard part numbers shown bold. For other models refer to ordering information below.

 $\mathsf{SCFM} = \mathsf{Standard}$ cubic feet per minute at 90 PSIG inlet and 5 PSIG pressure drop.


F50	F501 Coalescing Filter Dimensions		
1.5 (40	6	C 0.31 (8)	D 3.69 (94)
4.0 (10	10	F 1.58 (40)	

inches (mm)

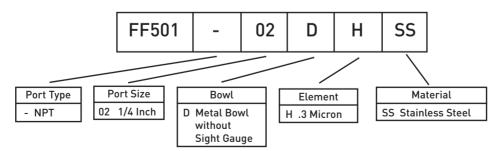



Air Preparation Units - F501 Series Technical Information

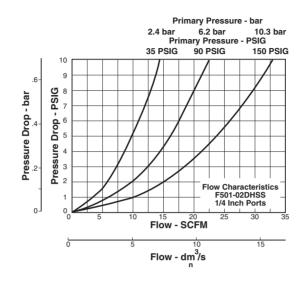

FF501 Filter Kits & Accessories

Filter Element Kits –	
0.3 Micron	EKF31
Manual Twist Drain –	
Small (Old)	SA600Y7-1SS
Large (New)	SAP05481
Pipe Nipple -	
1/4" 316 Stainless Steel	616Y28-SS
Specifications	
Bowl Capacity	1.0 Ounces
Filter Rating	0.3 Micron
Port Threads	1/4 Inch
Pressure & Temperature Ratings -	
Manual Twist Drain	

0°F to 180°F (-18°C to 82°C)

Note: Air must be dry enough to avoid ice formatio	n at temperatures
below 32°F (2°C)	
Sump Capacity	0.4 Ounce
Weight	0.6 lb. (0.27 kg)

Materials of Construction

Body	316 Stainless Steel
Bowls	
Drain	
316 Stainless Steel	
Element Holder	Acetal
Filter Element	Borosilicate Fiber
Seals	Fluorocarbon




36 1-800-343-4048

Air Preparation Units - FF11 Coalescing Filter Standard 1/2" Ports



Features

- Stainless steel construction handles most corrosive environments.
- Meets NACE specifications MR-01-75/ISO 15156.
- 1/8" female threaded drain*.
- High Flow: 1/2" 45 SCFM §
- * Beginning January 2008

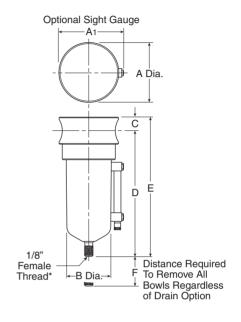

Port	NPT without sight gauge		NPT with sight gauge	
Size	Manual Automatic Twist Drain Float Drain		Manual Twist Drain	Automatic Float Drain
1/2"	Metal Bowl With Sight Gauge			
1/2	F11-04DJSS	F11-04DJRSS	F11G04WJSS	F11G04WJRSS

 $Standard\ part\ numbers\ shown\ bold.\ For\ other\ models\ refer\ to\ ordering\ information\ below.$

F11 Coalescing Filter Dimensions		
A	A 1	B
2.38	2.50	1.75
(60)	(64)	(44)
C	D	E
0.56	5.00	5.56
(14)	(127)	(141)
F 2.12 (54)		

inches (mm)


Ordering Information FF11 SS 04 W Material Port Type Port Size Element **Options** Bowl - NPT 04 1/2 Inch J .01 Micron Blank Manual SS Stainless Steel D Metal Bowl G BSPP Twist without Drain Sight Gauge R Automatic W Metal Bowl Float with Drain

Sight Gauge



[§] SCFM = Standard cubic feet per minute at 90 PSIG inlet and 5 PSIG pressure drop.

Air Preparation Units - FF11 Series Technical Information

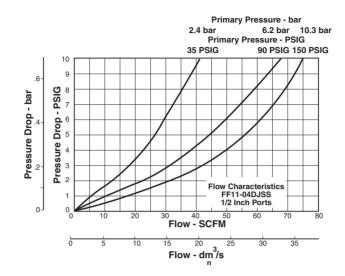

F11 Filter Kits & Accessories

1 1 1 1 11101 11110 0 7 10000001	
Drain Kit –	
Automatic Float Drain	SA602MDSS
Manual Twist Drain-	
Small (Old)	SA600Y7-1SS
Large (New)	SAP05481
Filter Element Kits –	
0.3 Micron	FKF71
Pipe Nipple –	
1/2" 316 Stainless Steel	616A28-SS
Specifications	
Bowl Capacity	4.0 Ounces
Filter Rating	0.01 Micron
Sump Capacity	1.7 Ounce
Port Threads	
Pressure & Temperature Ratings –	
Manual Twist Drain	0 to 300 PSIG (0 to 20.7 bar)
	0°F to 180°F (-18°C to 82°C)
Manual Twist Drain (W)	0 to 250 PSIG (0 to 17.2 bar)
	0°F to 150°F (-18°C to 66°C)
Automatic Float Drain	0 to 175 PSIG (0 to 12 bar)
	40°F to 125°F (4°C to 52°C)
Note: Air must be dry enough to avoid in	ce formation at temperatures
below 32°F (2°C).	1
Weight	1 9 lb (N 85 kg)

Element Holder	Acetal
Filter Element	Borosilicate Fiber
Seals	Fluorocarbon
Sight Gauge	Isoplast
	·

FF11 Media Specifications

[Grade Desig- nation	Coalescing Efficiency 0.3 to 0.6	Maximum Oil Carryover ¹	Micron Rating	Pressu (PS @ Rate	SID) '	Flow: SCFM @3 PSID
		Micron Particles	PPM w/w		Media Dry	Media Wet With 10-20 wt. oil	Operating Pressure 100 PSIG
	6	99.97%	0.008	0.01	1.0	2-3	??
	10	95%	0.85	1.0	0.5	0.5	??

¹Tested per ISO 12500-1 at 40 ppm inlet.



Materials of Construction

38 1-800-343-4048

²Add dry + wet for total pressure drop.


Air Preparation Units - FR364 Regulator - Miniature **1/4" Ports**





Features

- Stainless steel construction handles most corrosive environments.
- Large diaphragm to valve area ratio for precise regulation and high flow capacity.
- Meets NACE specifications MR-01-75/ISO 15156.
- High Flow: 1/4" 12 SCFM§

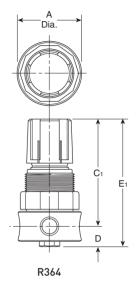

1 1	
4 1	
The second of th	
	and the

R364

Series	Adjustment Type	Port Size	NPT
FR364	Knob	1/4"	R364-02CSS


[§] SCFM = Standard cubic feet per minute at 100 PSIG inlet, 75 PSIG no flow secondary setting and 15 PSIG pressure drop.

Product rupture can cause serious injury. Do not connect regulator to bottled gas. Do not exceed maximum primary pressure rating.

	egulator nsions
A	C ₁
1.56	2.56
(40)	(65)
D	E 1
0.50	3.06
(13)	(78)

inches (mm)


NOTE: 1.25 Dia. [32mm] hole required for panel mounting.

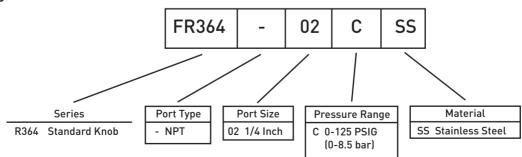



Air Preparation Units FR364 Air Line Regulators Technical Information

Operation

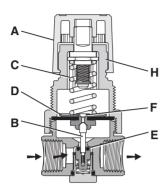

FR364

With the adjusting knob (A) turned fully counter-clockwise (no spring load), and pressure supplied to the regulator inlet port, the valve poppet assembly (B) is closed. Turning the adjusting knob clockwise applies a load to control spring (C). This load causes the diaphragm (D) and the valve poppet assembly (B) to move downward allowing flow across the seat area (E) created between the poppet assembly and the seat. Pressure in the downstream line is sensed below the diaphragm (D) and offsets the load of spring (C). As downstream pressure rises, poppet assembly (B) and diaphragm (D) move upward until the area (E) is closed and the load of the spring (C) and pressure under diaphragm (D) are in balance. A reduced outlet pressure has now been obtained, depending on spring load. Creating a demand downstream, such as opening a valve, results in a reduced pressure under the diaphragm (D). The load of control spring (C) now causes the poppet assembly to move downward opening seat area (E) allowing air to flow to meet the downstream demand. The flow of downstream air is metered by the amount of opening (E).

Should downstream pressure exceed the desired regulated pressure, the excess pressure will cause the diaphragm (D) to move upward against control spring (C), open vent hole (F), and vent the excess pressure to atmosphere through the hole in the bonnet (H). (This occurs in the relieving type regulator only.)


Technical Information

CAUTION:

REGULATOR PRESSURE ADJUSTMENT -

The working range of knob adjustment is designed to permit outlet pressures within their full range. Pressure adjustment beyond this range is also possible because the knob is not a limiting device. This is a common characteristic of most industrial regulators, and limiting devices may be obtained only by special design.

For best performance, regulated pressure should always be set by increasing the pressure up to the desired setting.

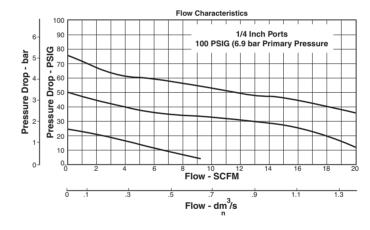

FR364 Regulator Kits & Accessories

R364 Bonnet Kit (Knob Included)	CKR364YSS
	K4515N14160SS
Panel Mount Bracket (Stainless).	161X57-SS
Panel Mount Nut –	
Stainless	R05X51-SS
Plastic	R05X51-P
Service Kit –	
Relieving	RKR364YSS
Springs – 0-125 PSIG Range	SPR-377-1-SS

Specifications


Gauge Port	1/4 Inch
Operation	
Port Threads	
Pressure & Temperature Ratings -	300 PSIG Max (20.7 bar)
	40°F to 150°F (4°C to 66°C)
Weight	0.5 lb. (0.23 kg)

Materials of Construction

Adjustment Mechanism / Springs	316 Stainless Steel
Adjusting Knob (R364)	Polypropylene
Body	316 Stainless Steel
Bonnet (R364)	
Bottom Plug	
Poppet	316 Stainless Steel
Seals	Fluorocarbon



Air Preparation Units - 05R Regulators - Economy 1/4", 3/8" NPT - Basic 1/4" Body

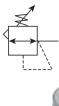




Features

- Secondary aspiration plus balanced poppet provides quick response and accurate pressure regulation.
- Rolling diaphragm for extended life.
- Removable non-rising knob for panel mounting and tamper resistance.
- Easily serviced.
- Reverse Flow.
- High Flow: 1/4" 30 SCFM§ 3/8" 40 SCFM§



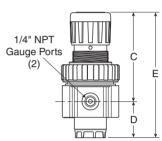


Port Size	NPT
Without Gaug	е
1/4"	05R113A*
3/8"	05R213A*
With 160 PSI	Gauge
1/4"	05R118A*
3/8"	05R218A*

05R Regulator Dimensions			
A 2.00 (51)	B 2.06 (52)	C 3.16 (80)	
D 1.28 (32)	E 4.44 (113)		

Inches (mm)

NOTE: 1.53 Dia. (39mm) hole required for panel mounting.


** Includes 1-1/2" Dial Face Gauge

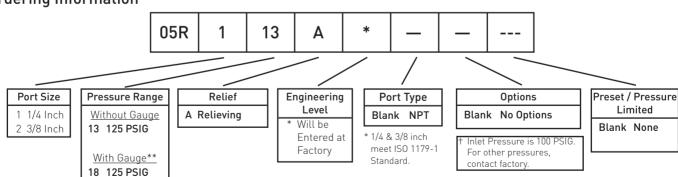




[§] SCFM = Standard cubic feet per minute at 100 PSIG inlet, 90 PSIG no flow secondary setting and 10 PSIG pressure drop.

Air Preparation Units 05R Air Line Regulators Technical Information

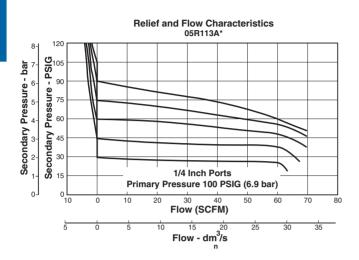

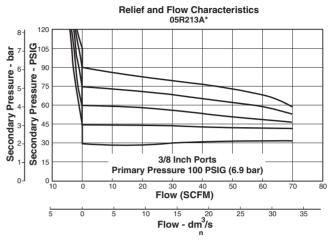

CAUTION:

REGULATOR PRESSURE ADJUSTMENT – The working range of knob adjustment is designed to permit outlet pressures within their full range. Pressure adjustment beyond this range is also possible because the knob is not a limiting device. This is a common characteristic of most industrial regulators, and limiting devices may be obtained only by special design.

For best performance, regulated pressure should always be set by increasing the pressure up to the desired setting.

⚠ WARNING

Product rupture can cause serious injury.

Do not connect regulator to bottled gas.

Do not exceed maximum primary pressure rating.

05R Regulator Kits & Accessories

Gauges –	1-1/2" Dial Face ????	
_	30 PSIG (0 to 2.1 bar)	K4515N14030
	60 PSIG (0 to 4.1 bar)	K4515N14060
	160 PSIG (0 to 11.0 bar)	K4515N14160
	300 PSIG (0 to 20.0 bar)	K4515N14300
	2" Dial Face	
	60 PSIG (0 to 4.1 bar)	K4520N14060
	160 PSIG (0 to 11.0 bar)	
Mounting	Bracket Kit	PS963P
•	Bracket Kit	
Panel Mou	ınt Nut – Metal	PS964P
Panel Mou	ınt Nut – Metal 1-30 PSIG Range	PS964P
Panel Mou	ınt Nut – Metal 1-30 PSIG Range 1-60 PSIG Range	PS964P P04427 P04426
Panel Mou	ınt Nut – Metal 1-30 PSIG Range	PS964P P04427 P04426 P04425

Specifications

Gauge Ports (2)	1/4 Inch
Port Threads	1/4, 3/8 Inch
Primary Pressure Rating –	
Maximum Primary Pressure	250 PSIG (17.2 bar) Max.
For Secondary Pressure Ranges	see above charts.
Temperature Rating	32°F to 175°F (0°C to 80°C)
Low Temperature	4°F to 125°F (-20°C to 52°C)
Weight	1.1 lb. (0.49 kg)

Materials of Construction

Brass
Plastic
Zinc
Plastic
Nitrile
Plastic
Nitrile
Steel



42 1-800-343-4048


Air Preparation Units - FR10 Regulator - Standard 1/2" Ports





Features

- Stainless steel construction handles most corrosive environments.
- Large diaphragm to valve area ratio for precise regulation and high flow capacity.
- Meets NACE specifications MR-01-75/ISO 15156.
- Low temperature version available.
- High Flow: 1/2" 80 SCFM§

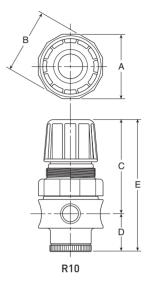




Port Size	NPT	
1/2"	FR10-04CSS	

[§] SCFM = Standard cubic feet per minute secondary setting and 15 PSIG pressure

eet per minute at 100 PSIG inlet, 75 PSIG no flow PSIG pressure drop.	2.34 (60)	2.43 (62)	3.59 (91)
	D 1.38 (35)	E 4.97 (126)	
MARNING)	

Product rupture can cause serious injury. Do not connect regulator to bottled gas. Do not exceed maximum primary pressure rating. inches (mm) NOTE: 1.75 Dia. (44mm) hole required for panel mounting.


R10, R11 Regulator **Dimensions**

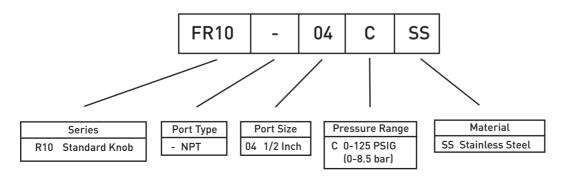



Air Preparation Units FR10 Air Line Regulators Technical Information

Operation

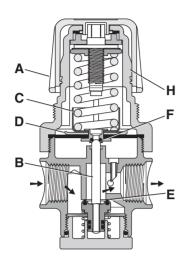

With the adjusting knob (A) turned fully counter-clockwise (no spring load), and pressure supplied to the regulator inlet port, the valve poppet assembly (B) is closed. Turning the adjusting knob clockwise applies a load to control spring (C). This load causes the diaphragm (D) and the valve poppet assembly (B) to move downward allowing flow across the seat area (E) created between the poppet assembly and the seat. Pressure in the downstream line is sensed below the diaphragm (D) and offsets the load of spring (C). As downstream pressure rises, poppet assembly (B) and diaphragm (D) move upward until the area (E) is closed and the load of the spring (C) and pressure under diaphragm (D) are in balance. A reduced outlet pressure has now been obtained, depending on spring load. Creating a demand downstream, such as opening a valve, results in a reduced pressure under the diaphragm (D). The load of control spring (C) now causes the poppet assembly to move downward opening seat area (E) allowing air to flow to meet the downstream demand. The flow of downstream air is metered by the amount of opening (E).

Should downstream pressure exceed the desired regulated pressure, the excess pressure will cause the diaphragm (D) to move upward against control spring (C), open vent hole (F), and vent the excess pressure to atmosphere through the hole in the bonnet (H). (This occurs in the relieving type regulator only.)


Technical Information

CAUTION:

REGULATOR PRESSURE ADJUSTMENT -

The working range of knob adjustment is designed to permit outlet pressures within their full range. Pressure adjustment beyond this range is also possible because the knob is not a limiting device. This is a common characteristic of most industrial regulators, and limiting devices may be obtained only by special design.

For best performance, regulated pressure should always be set by increasing the pressure up to the desired setting.

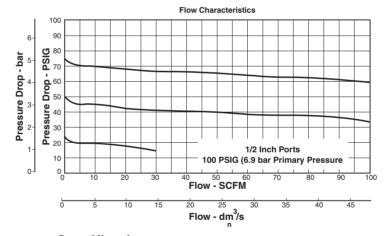

FR10 Regulator Kits & Accessories

R10 Bonnet Kit (Knob Included)CKR10YSS
Gauge –
160 PSIG (0 to 1100 kPa), 2" Face
Panel Mount Bracket (Stainless)
Stainless
Plastic R10X51-P
Service Kit –
RelievingRKR10YSS
Springs –
0-125 PSIG Range



Specifications	
Gauge Port	1/4 Inch
Operation	Fluorocarbon Diaphragm
Port Threads	1/2 Inch
Pressure & Temperature Ratings –	300 PSIG Max (20.7 bar)
	0°F to 150°F (-18°C to 66°C)
Note: Air must be dry enough to avoid in below 32°F (2°C).	ce formation at temperatures
Weight	1.79 lb. (0.81 kg)
Materials of Construction	
Adjustment Mechanism / Springs	316 Stainless Steel
Body	316 Stainless Steel
Bonnet / Knob (R10)	Acetal
Bottom Plug	316 Stainless Steel




Air Preparation Units - 07R Regulators - Standard 3/8", 1/2", 3/4" NPT - Basic 1/2" Body



Features

- Secondary aspiration plus balanced poppet provides quick response and accurate pressure regulation.
- Rolling diaphragm for extended life.
- Two high flow 1/4" gauge ports can be used as additional outlets.
- Easily serviced.
- Removable non-rising knob for panel mounting and tamper resistance.
- High Flow: 3/8" 70 SCFM§ 1/2" – 90 SCFM§

3/4"	_	90	S	CF	M

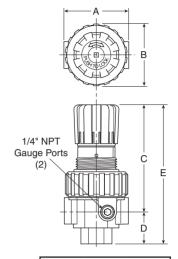

07R Regulator Dimensions			
A 3.24 (82)	B 2.74 (70)	C 4.79 (122)	
D 1.61 (41)	E 6.40 (163)		

Inches (mm)


Port Size	NPT	
Without Gaug	e	
3/8"	07R213A*	
1/2"	07R313A*	
3/4"	07R413A*	

NOTE: 2.00 Dia. (51mm) hole required for panel mounting.

§ SCFM = Standard cubic feet per minute at 100 PSIG inlet, 90 PSIG no flow secondary setting and 10 PSIG pressure drop.


⚠ WARNING


Product rupture can cause serious injury.
Do not connect regulator to bottled gas.
Do not exceed maximum primary pressure rating.

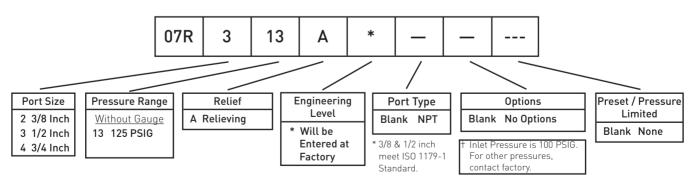



Air Preparation Units 07R Air Line Regulators Technical Information

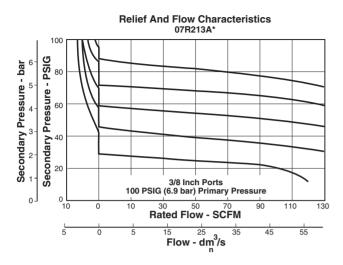

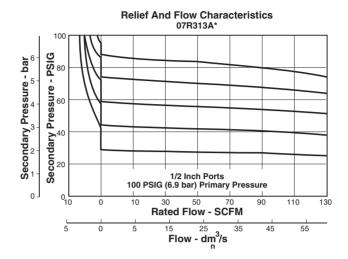


CAUTION:

REGULATOR PRESSURE ADJUSTMENT -

The working range of knob adjustment is designed to permit outlet pressures within their full range. Pressure adjustment beyond this range is also possible because the knob is not a limiting device. This is a common characteristic of most industrial regulators, and limiting devices may be obtained only by special design.

For best performance, regulated pressure should always be set by increasing the pressure up to the desired setting.

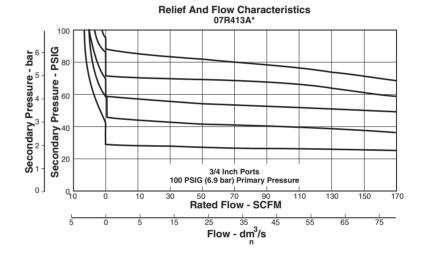

07R Regulator Kits & Accessories

Control Kno	mbly Kit	P04069B
	60 PSIG (0 to 11.0 bar)	
	acket Kit (Includes Panel Mount Nut) : Nut – Plastic Metal	P04082
Service Kit -	Relieving (Includes Poppet)	PS808P
Springs –	2-125 PSIG Range	P04063
Tamperproof KitPS737		

Specifications

Gauge Ports (2)
Port Threads
Primary Pressure Rating – Maximum Primary Pressure
Secondary Pressure Range – Standard Pressure
Temperature Rating32°F to 175°F (0°C to 80°C) Weight 2.5 lb. (1.1 kg)

Materials of Construction

Adjusting Stem	Steel
Body	Zinc
Bonnet, Piston Stem, Valve Poppet & Cap	Plastic
Collar, Knob	Plastic
Diaphragm	Nitrile
Seals	Nitrile
Springs - Poppet	Stainless
Control	Stool



Air Preparation Units - P3NR Regulators - High Flow 3/4", 1", 1 1/2" NPT - Basic 1" Body




Features

- Port blocks (PB) available to provide 1-1/2" port extension to 1" ported bodies.
- Self relieving feature plus balanced poppet provides quick response and accurate pressure regulation.
- Solid control piston for extended life.
- High Flow: 3/4" 200 SCFM§

1" - 300 SCFM§

11/2" - 300 SCFM§

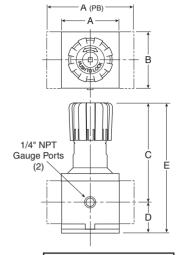

P3NR Regulator Dimensions		
A	A ^(PB)	B
3.62	5.91	3.62
(92)	(150)	(92)
C	D	E
6.38	2.08	8.46
(162)	(53)	(215)

Inches (mm)


Port Size	NPT	
Without Gaug	е	
3/4"	P3NRA96BNN	
1"	P3NRA98BNN	
11/2	P3NRA9PBNN	

NOTE: 2.00 Dia. (51mm) hole required for panel mounting.

§ SCFM = Standard cubic feet per minute at 100 PSIG inlet, 90 PSIG no flow secondary setting and 10 PSIG pressure drop.


⚠ WARNING


Product rupture can cause serious injury.
Do not connect regulator to bottled gas.
Do not exceed maximum primary pressure rating.

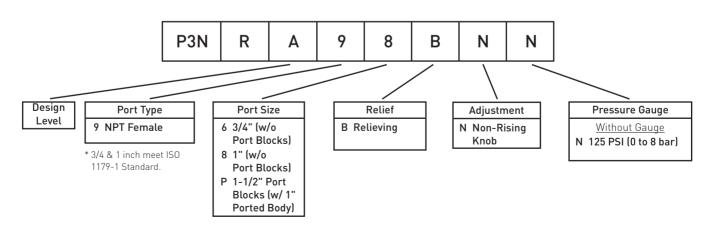



Air Preparation Units - P3NR Air Line Regulators Technical Information

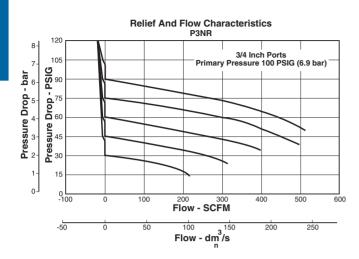

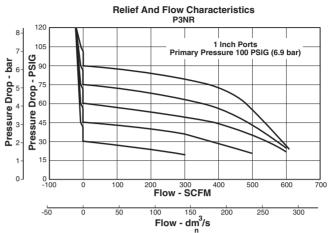


CAUTION:

REGULATOR PRESSURE ADJUSTMENT -

The working range of knob adjustment is designed to permit outlet pressures within their full range. Pressure adjustment beyond this range is also possible because the knob is not a limiting device. This is a common characteristic of most industrial regulators, and limiting devices may be obtained only by special design.

For best performance, regulated pressure should always be set by increasing the pressure up to the desired setting.

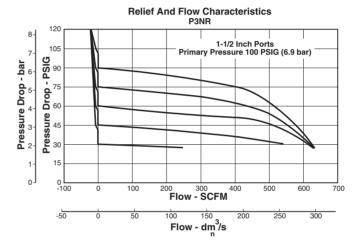

Weight –	3/4"	4.2 lb. (1.9 kg)
	1"	4.2 lb. (1.9 kg)
	1½" †	

P3NR Regulator Kits & Accessories

Control Knob P3NKA00PN			
Gauges – 60 PSIG (0 to 4.1 bar) K4520N14060 160 PSIG (0 to 11.0 bar) K4520N14160			
Mounting Bracket Kit*			
Service Kit - Relieving			
Springs - 2-125 PSIG Range			
Specifications Gauge Ports (2)			
Primary Pressure Rating –			

Materials of Construction

Adjusting Stem	Steel
Body	Aluminum
Bonnet	Aluminum
Knob	Plastic
Piston	Plastic
Poppet Assembly	Brass
Seals	Nitrile
Springs - Poppet & Control	Steel




Secondary Pressure Range -

48 1-800-343-4048

 $[\]dagger$ 1" Port Body with 1% " Port Block.


Air Preparation Units - 14E Filter/Regulator - Miniature 1/8", 1/4" NPT - Basic 1/8" Body

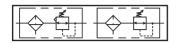



Features

- Excellent water removal efficiency.
- Unbalanced poppet standard.
- Solid control piston for extended life.
- Space saving package offers both filter and regulator features in one integral unit.
- Non-rising adjustment knob.
- Two full flow 1/8" gauge ports.
- High Flow: 1/8" 16 SCFM§ 1/4" 18 SCFM§

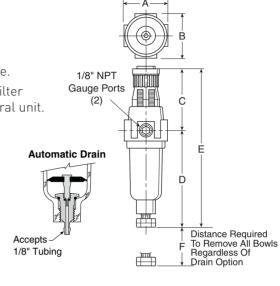


Port	NPT		NPT	
Size	Twist Drain	Automatic Pulse Drain		
Poly Bowl [‡]				
1/8"	14E01B13F*	14E05B13F*		
1/4"	14E11B13F*	14E15B13F*		
Metal Bowl				
1/8"	14E03B13F*	14E07B13F*		
1/4"	14E13B13F*	14E17B13F*		

[‡]For polycarbonate bowl see Caution on page A2.

NOTE: 1.218 Dia. (31mm) hole required for panel mounting.

14E Filter / Regulator Dimensions			
A	B	C	
1.62	1.58	2.42	
(41)	(40)	[61]	
D	D [†]	E	
3.79	3.64	6.21	
(96)	(92)	(158)	
E [†] 6.06 (154)	F 1.60 (41)		


Inches (mm) + With Auto Drain

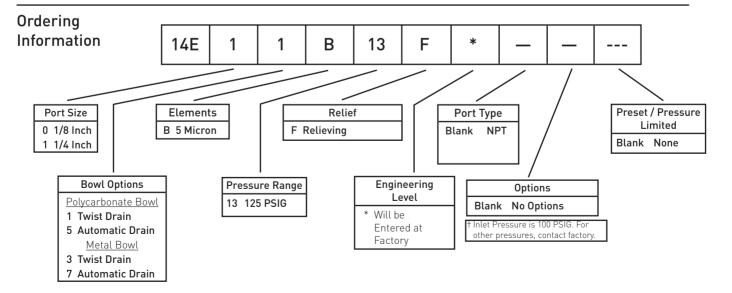



[§] SCFM = Standard cubic feet per minute at 100 PSIG inlet, 90 PSIG no flow secondary setting and 10 PSIG pressure drop.

Air Preparation Units - Prep Air II, 14E Filter/Regulators Technical Information

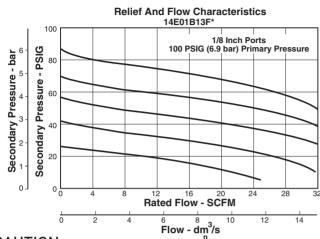

CAUTION:

REGULATOR PRESSURE ADJUSTMENT – The working range of knob adjustment is designed to permit outlet pressures within their full range. Pressure adjustment beyond this range is also possible because the knob is not a limiting device. This is a common characteristic of most industrial regulators, and limiting devices may be obtained only by special design.

For best performance, regulated pressure should always be set by increasing the pressure up to the desired setting.

14E Filter / Regulator Kits & Accessories Bowl Kits -


Bowl Kits –		
Poly Bowl - Autom		
Twist	Drain	PS404P
Metal Bowl – Autom	natic Drain	PS451BP
Twist	Drain	PS447BP
Filter Element Kits –	5 Micron	PS403P
Gauges -????	30 PSIG (0 to 2.1 bar)	K4515N18060
Mounting Bracket Kit (Includes Panel Mount Nut)PS417BP		
Panel Mount Nut		P78652
Poppet Kit - Unbala	anced	PS424BP
Service Kit - Reliev	ing	PS423P
Springs - 2- 125 PSI	G Range (Gold)	P01173
Specifications		
	n Tube Barb	1/8 Inch
Bowl Capacity		1 Ounce
Gauge Ports (2) (Can I	oe used for Full Flow)	1/8 Inch
Port Threads		1/8, 1/4 Inch

Pressure & Temperature Ratings -

Polycarbonate Bowl

0 to 150 PSIG (0 to 10.3 bar), 32°F to 125°F (0°C to 52°C)

0 to 250 PSIG (0 to 17.2 bar), 32°F to 175°F (0°C to 80°C)

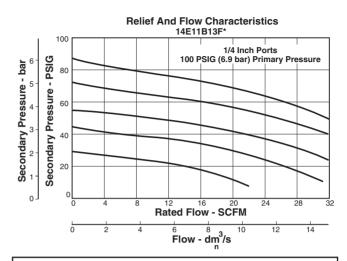

WARNING

Product rupture can cause serious injury.

Do not connect regulator to bottled gas.

Do not exceed maximum primary pressure rating.

Secondary Pressure Ranges -

Standard Pressure	0 to 8.6 bar)
Weight	lb. (0.18 kg)
Materials of Construction Adjusting Nut	Brass
Adjusting Stem & Spring	
Body	Zinc
Bonnet, Knob, Seat, Piston, Holder & Deflector	Plastic
Bowls Available - Transparent Po Metal (Without Sight Gauge)	
Drains – Manual – Twist Type Body & Stem Seals	
Automatic – Pulse Type Piston & Seals Stem, Seat, Adaptor & Washers	
Filter Elements - 5 Micron (Standard)	Plastic
Seals	Nitrile



Air Preparation Units - FB548 Filter/Regulator - Miniature 1/4" Ports








Features

- Stainless Steel Construction Handles Most Corrosive Environments
- Large Diaphragm To Valve Area Ratio For Precise Regulation And High Flow Capacity
- 1/8" Female Threaded Drain*
- Meets NACE Specifications MR-01-75/ISO 15156.
- High Flow: 1/4" 12 SCFM§
- * Beginning January 2008

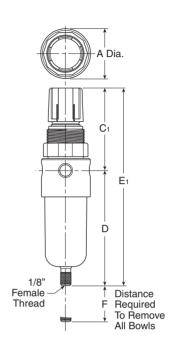


Port Size	NPT
1/4"	FB548-02DGCSS

[§] SCFM = Standard cubic feet per minute at 100 PSIG inlet, 75 PSIG no flow secondary setting and 15 PSIG pressure drop.

FB548 Piggyback Dimensions		
A C ₁ D 1.56 2.17 3.63 (40) (55) (92)		
E 1 3.06 (78)	F 1.58 (40)	


inches (mm) NOTE: 1.25 Dia. (32mm) hole required for panel mounting.

Product rupture can cause serious injury. Do not connect regulator to bottled gas. Do not exceed maximum primary pressure rating.

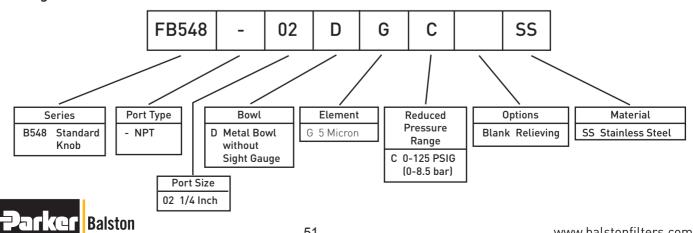

Air Preparation Units - FB548 Filter/Regulators **Technical Information**

Operation

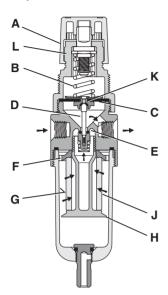


Turning the adjusting knob clockwise applies a load tocontrol spring (B) which forces diaphragm (C) and valve poppet assembly (D) to move downward allowing filtered air to flow through the seat area (E) created between the poppet assembly and the seat. "First stage filtration". Air pressure supplied to the inlet port is directed through deflector plate (F) causing a swirling centrifugal action forcing liquids and coarse particles to the inner bowl wall [G] and down below the lower baffle (H) to the guiet zone. After liquids and large particles are removed in the first stage of filtration "second stage filtration" occurs as air flows through element (J) where smaller particles are filtered out and retained. The air flow now passes through seat area (E) to the outlet port of the unit. Pressure in the downstream line is sensed below the diaphragm (C) and offsets the load of spring (B). When downstream pressure reaches the set-point, poppet valve assembly (D) and diaphragm (C) move upward closing seat area (E). Should downstream pressure exceed the desired regulated pressure, the excess pressure will cause the diaphragm (C) to move upward opening vent hole (K) venting the excess pressure to atmosphere through the hole in the bonnet (L). (This occurs in the standard relieving type filter/regulators only.)

Technical Information

CAUTION:

REGULATOR PRESSURE ADJUSTMENT – The working range of knob adjustment is designed to permit outlet pressures within their full range. Pressure adjustment beyond this range is also possible because the knob is not a limiting device. This is a common characteristic of most industrial regulators, and limiting devices may be obtained only by special design.

For best performance, regulated pressure should always be set by increasing the pressure up to the desired setting.

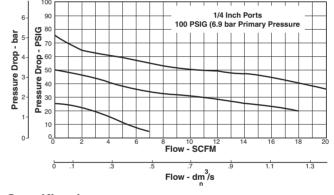

Flow Characteristics

FB548, Regulator Kits & Accessories

FB548 Bonnet Kit (Knob Included)CP	(R364YSS
Filter Element Kits –	
Particulate (5 Micron)	.EK504VY
Gauge –	
160 PSIG (0 to 1100 kPa), 2" FaceK4515N	V14160SS
Manual Twist Drain	00Y7-1SS
Panel Mount Bracket (Stainless)	61X57-SS
Panel Mount Nut –	
StainlessR	05X51-SS
Plastic	R05X51-P
Service Kit –	
Relieving F	RK549YSS
3	
Springs –	
0-125 PSIG RangeSPR-	377-1-SS

Specifications Bowl Capacity

Filter Rating	5 Micron
Gauge Port	1/4 Inch
Operation	Fluorocarbon Diaphragm
Port Threads	1/4 Inch
Pressure & Temperature Ratings –	300 PSIG Max (20.7 bar) 0°F to 150°F (-18°C to 66°C)
Note: Air must be dry enough to avoid ice below 32°F (2°C).	formation at temperatures
Sump Capacity	0.4 Ounce
Weight	0.6 lb. (0.27 kg)
Materials of Construction	
Adjustment Mechanism / Springs	316 Stainless Steel
Body	316 Stainless Steel
Bonnet (B548)	Acetal
Bottom Plug	316 Stainless Steel
Knob (B548)	
Poppet	316 Stainless Steel
Seals	
52	1-800-343-404



1-800-343-4048

Air Preparation Units - 06E Filter/Regulator - Compact 1/4", 3/8", 1/2" NPT - Basic 3/8" Body







Features

- Space saving package offers both filter and regulator features for optimal performance.
- Excellent water removal efficiency.
- Rolling diaphragm for extended life.
- Quick response, and accurate pressure regulation regardless of changing flow or inlet pressure.
- Two high flow 1/4" gauge ports can be used as additional outlets.
- Shown with recommended metal bowl guard.

• High Flow: 1/4" - 46 SCFM§

3/8" - 55 SCFM§

1/2" - 61 SCFM§

		E Distance F To Remov Regardles Drain Opti	Required e All Bowls s Of on
06E I	- ilter /	' Regu	lator
	Dimer	nsions	
А	В	С	D

Port	NPT			
Size	Twist Drain	Automatic Float Drain		
Poly Bowl‡/N	Metal Guard			
1/4"	06E12B13A*	06E16B13A*		
3/8"	06E22B13A* 06E26B13A*			
1/2"	06E32B13A* 06E36B13A*			
Metal Bowl / S	Metal Bowl / Sight Gauge			
1/4"	06E14B13A*	06E18B13A*		
3/8"	06E24B13A*	06E28B13A*		
1/2"	06E34B13A* 06E38B13A*			

[‡]For polycarbonate bowl see Caution on page 2.

NOTE: 2.00 Dia. (50.8 mm) hole required for panel mounting. Max. panel thickness 1/4".

06E Filter / Regulator Dimensions			
A	B	C	D
2.81	2.74	4.69	5.69
[71]	(70)	(119)	(145)
D [†]	E	E [†]	F
5.74	10.38	10.43	2.25
(146)	(264)	(265)	(57)

Inches (mm)

1/4" NPT

Gauge Ports


(2)

WARNING

Product rupture can cause serious injury.

Do not connect regulator to bottled gas.

Do not exceed maximum primary pressure rating.

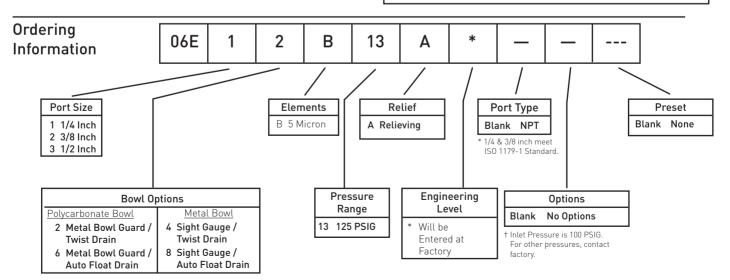




[§] SCFM = Standard cubic feet per minute at 100 PSIG inlet,

⁹⁰ PSIG no flow secondary setting and 10 PSIG pressure drop.

⁺ With Twist Drain or Auto Pulse Drain


Air Preparation Units - 06E Filter/Regulators Technical Information

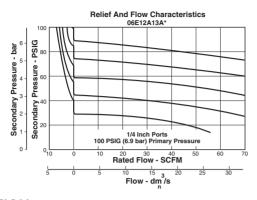

CAUTION:

REGULATOR PRESSURE ADJUSTMENT – The working range of knob adjustment is designed to permit outlet pressures within their full range. Pressure adjustment beyond this range is also possible because the knob is not a limiting device. This is a common characteristic of most industrial regulators, and limiting devices may be obtained only by special design.

For best performance, regulated pressure should always be set by increasing the pressure up to the desired setting.

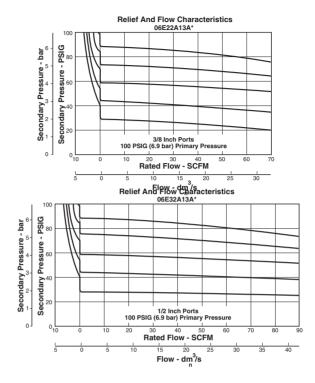

06E Filter / Regulator Kits & Accessories

Bonnet Assembl	y Kit	PS715P
Bowl Guard Kit		PS705P
Bowl Kits –		
Poly Bowl –	Automatic Float Drain	
	Twist Drain	
Metal Bowl –	3	
	Sight Gauge / Twist Drain	
Control Knob		P04069B
Drain Kit –	Automatic Float Drain	PS506P
	Twist Drain	PS512P
E:U EI	9	DC700D
Filter Element K	its – 5 Micron	P5/02P
Gauges –	60 PSIG (0 to 4.1 bar)	K/520N1/040
oddycs	160 PSIG (0 to 11.0 bar)	
	100 1 0.0 (0 10 11.0 20.1)	
Mounting Bracke	et Kit (Includes Panel Mount Nut)	PS707P
Panel Mount Nut	t	P04082
Service Kits -	Non-Relieving (Includes Poppet)	PS711P
	Relieving (Includes Poppet)	
Spring - 2- 12	25 PSIG Range	P04063
	J	
Tamperproof Kit	(Key Lock)	PS737P
Specificat	ions	
		/ / Ounces
, ,		
	as Additional Full Flow 1/4" Outlet Ports)	1/4 111011
	as Additional Fatter tow 174 Outlet Forts)	1/4 3/8 1/2 Inch
i ore inicado		1, 7, 0, 0, 1, 2 111011

Pressure & Temperature Ratings -

Polycarbonate Bowl - 0 to 150 PSIG (0 to 10.4 bar) 32°F to 125°F (0°C to 52°C) Metal Bowl - 0 to 250 PSIG (0 to 17.2 bar) 32°F to 175°F (0°C to 80°C) Automatic Float Drain - 15 to 250 PSIG (1.0 to 17.2 bar) Secondary Pressure Range -Materials of Construction

materia	als o	Construction	
Adjusting St	tem		Steel
Body			Zinc
Bonnet, Inte	ernal Pa	rts	Plastic
Bowls Avail	able –	Transparent	
Bowl Guard			Steel
Collar			Plastic
Diaphragm			Nitrile
Drains - M	lanual T	wist Drain Standard	
	Body 8	Nut	Plastic
	Autom	atic Float Drain Optional	
	(Interc	hangeable for Field Conversions)	
	Operat Housin Seals .	ing Range	Plastic Nitrile
Knob			Plastic
Filter Eleme	ents –	5 Micron (Optional)	Plastic
Seals Sight Gauge	e		
Springs –	Poppet		Stainless



Air Preparation Units - FB11 Filter/Regulator - Standard 1/2" Ports








Features

- Stainless steel construction handles most corrosive environments.
- Large diaphragm to valve area ratio for precise regulation and high flow capacity.
- 1/8" female threaded drain.
- Meets NACE specifications MR-01-75/ISO-15156.
- Low temperature version available.
- High Flow: 1/2" 72 SCFM§

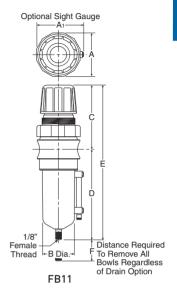

Do mt	Adiustassast	NPT		BSPP	
Port Size	Adjustment Type	Manual Twist Drain	Automatic Float Drain	Manual Twist Drain	Automatic Float Drain
1/2"	Metal Bowl with Sight Gauge				
1/2	Knob	FB11-04WGCSS	FB11-04WGCRSS	FB11G04WGCSS	FB11G04WGCRSS

Standard part numbers shown bold. For other models refer to ordering information below.

WARNING


Product rupture can cause serious injury.

Do not connect regulator to bottled gas.

Do not exceed maximum primary pressure rating.

FB11 Piggyback Dimensions			
A	A 1	B	
2.34	2.50	1.75	
(60)	(64)	(44)	
C	D	E	
3.59	5.00	8.59	
(91)	(127)	(218)	
F 2.12 (54)			

inches (mm) NOTE: 1.75 Dia. (44mm) hole required for panel mounting.

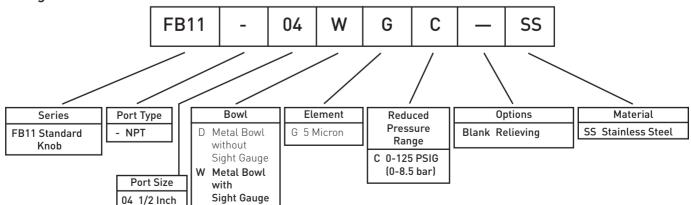




[§] SCFM = Standard cubic feet per minute at 100 PSIG inlet, 90 PSIG no flow secondary setting and 15 PSIG pressure drop.

Air Preparation Units - FB11 Filter/Regulators Technical Information

Operation

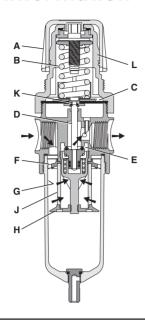

Turning the adjusting knob clockwise applies a load to control spring (B) which forces diaphragm (C) and valve poppet assembly (D) to move downward allowing filtered air to flow through the seat area (E) created between the poppet

assembly and the seat. "First stage filtration". Air pressure supplied to the inlet port is directed through deflector plate (F) causing a swirling centrifugal action forcing liquids and coarse particles to the inner bowl wall (G) and down below the lower baffle (H) to the quiet zone. After liquids and large particles are removed in the first stage of filtration "second stage filtration" occurs as air flows through element (J) where smaller particles are filtered out and retained. The air flow now passes through seat area (E) to the outlet port of the unit. Pressure in the downstream line is sensed below the diaphragm (C) and offsets the load of spring (B). When downstream pressure reaches the set-point, poppet valve assembly (D) and diaphragm (C) move upward closing seat area (E). Should downstream pressure exceed the desired regulated pressure, the excess pressure will cause the diaphragm (C) to move upward opening vent hole (K) venting the excess pressure to atmosphere

through the hole in the bonnet (L). (This occurs in the standard

relieving type filter/regulators only.)

Technical Information


CAUTION:

REGULATOR PRESSURE ADJUSTMENT – The working range of knob adjustment is designed to permit outlet pressures within their full range. Pressure adjustment beyond this range is also possible because the knob is not a limiting device. This is a common characteristic of most industrial regulators, and limiting devices may be obtained only by special design.

For best performance, regulated pressure should always be set by increasing the pressure up to the desired setting.

FB11 Regulator Kits & Accessories

FB11 Bonnet Kit (Knob Included)	
Drain Kit –	
Automatic Float Drain	SA602MDSS
Manual Twist Drain	SA600Y7-1SS
Filter Element Kit –	
Particulate (5 Micron)	EKF10VY
Gauge –	
160 PSIG (0 to 1100 kPa), 2" Face	
Panel Mount Bracket (Stainless)	R10Y57-SS
Panel Mount Nut –	
Stainless	
Plastic	R10X51-P
Service Kit –	
Relieving	RKR10YSS
Spring –	
0-125 PSIG Range	SPR_389_1_SS
_	
Materials of Construction	
Adjustment Mechanism / Springs	316 Stainless Steel
Body	316 Stainless Steel
Bonnet / Knob (B11)	Acetal
Bottom Plug	
Poppet	
Seals	
Sight Gauge	Isoplast

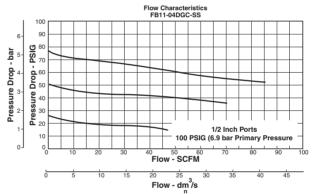

Specifications

4.0 Ounces
5 Micron
1/4 Inch
Fluorocarbon Diaphragm
1/2 Inch
300 PSIG Max (20.7 bar)
0°F to 150°F (-18°C to 66°C)
0 to 250 PSIG (0 to 17.2 bar)
0°F to 150°F (-18°C to 66°C)
15 to 175 PSIG (1 to 12 bar)
40°F to 125°F (4°C to 52°C)

Note: Air must be dry enough to avoid ice formation at temperatures below $32^{\circ}F$ [2°C].

Sump Capacity1.	7 Ou	nce
Weight	[1.09	kg)

1-800-343-4048

Automatic Drains - High and Normal Capacity

High Capacity Electric Solenoid Drain

The Balston Automatic Drain Assembly, P/N 20-440 automatically removes water from Balston filter housings. The autodrain consists of a solenoid valve and an automatic timer that can be adjusted to the desired cycle time and is powered by 120/240 VAC, 50/60 Hz. To drain receiving tanks, use any commercially available Y-strainer (ex. Keystone 911 Series or Watts Model 7771) to protect the 20-440.





High Capacity Non-Electrical Float Drain


In the 20-211 design, a sealed stainless steel float operates a needle valve by means of a lever. All internal parts are stainless steel. The 20-211 drain is a rugged design for high volumes of liquid.



20-402

Normal Capacity Non-Electrical Float Drain

In the 20-402 design, a float rises to operate a pilot-controlled valve when the liquid level in the body of the drain reaches a predetermined level. The float is reseated by the force of line pressure as soon as the liquid is drained.

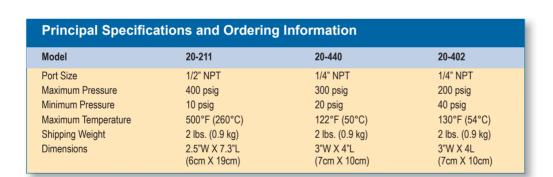



20-211



Condensate Drains - Zero Air / Zero Energy Loss

What is a zero air loss condensate drain?


Zero air loss condensate drains are designed for economical removal of unwanted water, oil emulsions, and other liquids. These drains will only open when liquid is present and will not allow any compressed air to escape from the system.

Why are they needed?

- Condensate is always present in a compressed air system.
- If condensate is not removed from a compressed air system, it will adversely affect product quality and production efficiency and will eventually lead to costly downtime.



Where are condensate drains used?

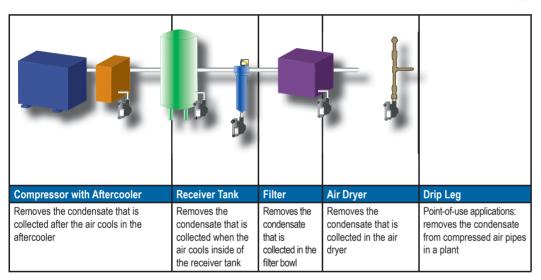


Condensate Removal Method	Disadvantages of Other Drains	Advantages of ZLD
Manual Drain (operators must manually open valves to discharge condensate)	Requires constant attention Always leads to excess air loss because air escapes whenthe valve is left open to drain the condensate	Automatically drains condensate When a minimum level of condensate is reached, the valve closes in time before compressed air can escal
Float Drain (uses a float connected to a drain valve that opens when enough condensate is present and closes when condensate has been removed)	Float is susceptible to blockage from particulate contamination in condensate Often sticks in open (leaks excess air) or closed position (no condensate is drained)	Includes an integrated dirt screen between the level measurement and drain valve to protect the diaphra- valve Particulate contamination is removed by the integrat dirt screen before fouling the moving parts
Solenoid Operated Drain Valves (uses a timer which allows user to open and close valve at specified intervals)	The period for which the valve is open might not be long enough for adequate drainage of accumulated condensate The valve will operate even if little or no condensate is present, resulting in air loss Often requires a strainer to remove particulate contamination which can block the inlet and outlet ports	Drain will remove condensate when liquid reaches the high level sensor The drain will not operate until the liquid level reached the high level sensor Particulate contamination is removed by the integrated dirt screen before fouling the outlet port




Condensate Drain - Zero Air / Zero Energy Loss

How does this drain work?

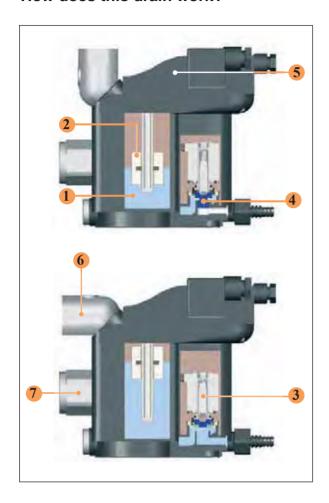

- 1 This collection vessel stores condensate until it is drained away.
- 2 This electronic level controller continuously monitors the liquid level inside the drain.
- 3 This depicts the electric drain valve. As soon as the electronic level controller detects a buildup of liquid, the valve opens and condensate is drained. When a minimum liquid level is reached, the valve closes before compressed air can escape.
- 4 The diaphragm valve ensures that contaminants are flushed out and that the condensate is prevented from forming an emulsion that would need expensive condensate treatment.
- 5 If an error has occurred (i.e. if the condensate cannot be discharged), the electronic control board (5) of the condensate drain generates an alarm signal. This allows timely detection of a problem and helps avoid excessive costs associated with condensate carryover to downstream components.
- 6 Unique swivel inlet connection for easy adaptability on 20-613 and 20-623. This allows the condensate line to be connected from the top or the rear. The 20-606 has a fixed inlet port with dynamic seal which allows the filter bowl to be removed while the drain is attached (not shown).
- 7 An additional liquid inlet on the 20-623 allows for the connection of a balance or vent line. This provides new connections so that condensate can no longer back up into the feed lines.

The cost of compressed air when using a timed drain valve

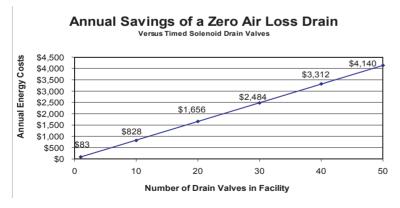



The annual cost of compressed air was calculated using data from the U.S. Department of Energy and several compressed air consultants. The average annual energy cost to maintain a compressed air system is \$0.23 per 1000 ft³. If a timed solenoid drain valve opens 3-4 times per hour, the cost of the wasted air will be \$80 per valve, per year.

Zero Loss Drains don't waste any compressed air and have a payback of approximately 6 months - 1 year.



Condensate Drain - Zero Air / Zero Energy Loss

Dimensions and Specifications



20-606

Dimensions (Inches)




20-613


Dimensions (Inches)





20-623


Dimensions (Inches)

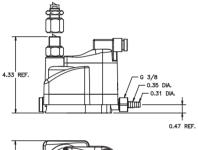


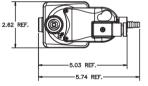

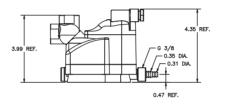

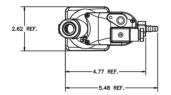

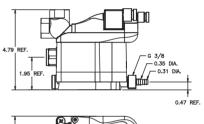

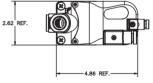

Model Number	Maximum Compressor Capacity	Maximum Refrigerated Dryer Capacity [™]	Maximum Filter Capacity ^{*2}	Pressure Range	Temperature Range	Connection Size	Drain Capacity	Electrical Requirement
20-606	Not Recommended	Not Recommended	424 SCFM (720 m³/h)	3 - 232 PSIG (0.2 - 16 bar)	35 -140°F (2 – 60 °C)	3/8" NPT	6 Gallons per day	120Vac (60Hz)
20-613	141 SCFM (240 m³/h)	283 SCFM (480 m³/h)	1413 SCFM (2,400 m³/h)	3 - 232 PSIG (0.2 - 16 bar)	35 -140°F (2 – 60 °C)	1/2" NPT	13 Gallons per day	120Vac (60Hz)
20-623	247 SCFM (420 m³/h)	494 SCFM (840 m³/h)	2472 SCFM (4,200 m³/h)	3 - 232 PSIG (0.2 - 16 bar)	35 -140°F (2 – 60 °C)	1/2" NPT	23 Gallons per day	120Vac (60Hz)

*1Based on 100 psi working pressure, air compressor inlet at 77°F at 60% RH, air discharge temperature of 95°F following the aftercooler, pressure dewpoint of 37°F after the refrigerated dryer.

Note: Drains are available with BSP threads; 24V/50 - 60Hz versions are available; 24V DC on request. A 6 ft. line cord will be included with each drain.



² Condensate from aftercooler or refrigerated dryer to be drained upstream – only for residual oil content or small quantities of condensate.

Differential Pressure Indicator Kit

Balston Differential Pressure Indicator

The Balston Differential Pressure Indicator (DPI) is used to monitor the pressure drop across the filters or other components in a compressed air system. The DPI is sensitive in the range of 0 to 5 psi differential.

Principal Specifications	s & Ordering	Information
Model	41-070	C02-2377
Differential Pressure Indicator	41-070	C02-2377
Indicator and Installation Kit (1)	41-071	N/A
Port Size	1/8" NPT	3/8"-24
Maximum Pressure	250 psig	250 psig
Maximum Temperature	130°F (54°C)	130°F (54°C)
Dimensions	1.7"W X 1.8"H (4cm X 5cm)	2.9"W X 2.25"H (7cm X 6cm)



¹ Installation kit includes fittings and tubing necessary for line-mounting the 41-070 DPI



41-070



41-070 Mounted on Filter Assembly



C02-2377



C02-2377 Mounted on Filter Assembly



Miniature Disposable Filter Units Constructed of Nylon and PVDF

Models 9922-05, 9933-05, 4433-05 and 9900-05


The 99XX-05 Models are the smallest Disposable Filter Units with 11.7 ml internal volume. These models are used in low flow gas or liquid sampling applications, such as liquids to specific-ion analyzers or gases to personal samplers. The Model 4433-05 has 1/4" and 3/8" barb connections molded into the inlet/outlet ports. The 9900-05 is available with a color indicator that turns red when saturated with oil.

Models 9922-11 and 9933-11

Models 9922-11 and 9933-11 are used for applications similar to the smaller DFUs (Models 9922-05 and 9933-05) which require greater solids holding capacity and can tolerate the increased retention time.

Model 8833-11

These Disposable Filter Units are used as continuous coalescing filters with a third port serving as the drain, slip-stream, or by-pass port.

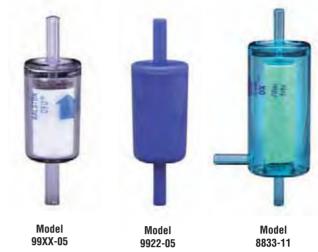

Retention Efficiency				
Model	Efficiency for 0.01 Micron Particles and Droplets			
DX	93%			
BX, BK	99.99%			

Flow Rates Air Flow at 2 psi drop, standard cu. ft. per min. (SCFM) at indicated line pressure										
Filter Housing Type	Volume of Housing (CU. FT.)	Filter Tube Grade	Flow Rate (CFM) At 10" Water Press. Drop., 0 PSIG	2 psig	20 psig	40 psig	60 psig	80 psig	100 psig	125 psig
9900-05 9922-05	0.0004	DQ	0.2	1.2	2.5	3.9	5.4	6.8	8.3	10.1
9933-05 4433-05	0.0004	BQ/BK	0.1	0.8	1.6	2.6	3.5	4.5	5.4	6.6
8822-11 8833-11	0.0007	DX	0.4	1.8	3.6	6	8	10	12	14.6
9922-11	0.0001	ВХ	0.2	0.9	1.8	3	4	5	6	7.3

Installation Information

Compression fittings for 1/4" O.D. tubing may be obtained from the following manufacturers: Hoke, Inc. (Gyrolock); Crawford Fitting Co. (Swagelok); Parker-Hannifin Corp. (CPI); Legris, Inc. (push-on

fittings); Jaco Mfg. Co. (plastic fittings).

The following brass fittings seal by O-ring compression and may be completely recovered and reused when changing filters. They may be purchased from Parker Hannifin Coro

Connector 1/4" tubing to 1/4" NPT, female - P/N 11970

Connector 1/4" tubing to 1/4" tubing - P/N 11971

ow 1/4" tubing to 1/8" NPT female (for manual drain

on Type 8833-11) - P/N 11972

For connections to low pressure plastic tubing

Tubing with 1/4" ID may be slipped over the DFU end fittings and held with tubing clamps. Parker Hannifin Corp. supplies plastic barbs to connect the DFU to smaller diameter plastic tubing. The connection is suitable for pressures to 50 psig.

DFU to 1/16" ID tubing P/N 14000 (bag of 20 barbs)
DFU to 1/8" ID tubing P/N 14001 (bag of 20 barbs)

Parker Hannifin Corp. also offers a manual drain valve for removal of coalesced liquids from the Type 8833-11-DX

Drain Valve 1/8" NPT (male) x 1/8" ID tubing

(requires fitting part 11977)

P/N 20120



Miniature Disposable Filter Units Constructed of Nylon and PVDF

Principal Specifications						
Model	9922-05	9900-05, 9933-05	4433-05	9922-11	9933-11	8833-11
Inlet and Outlet Ports	1/4" Tubing	1/4" Tubing	1st Tier/Barb 1/4" Tube 2nd Tier/Barb 3/8" Tube	1/4" Tubing	1/4" Tubing	1/4" Tubing
Drain	None	None	None	None	None	1/4" Tubing
Material of Construction	PVDF	Nylon	Nylon	PVDF	Nylon	Nylon
Filter Cartridge Length	1.25" (3.2 cm)	1.25" (3.2 cm)	1.25" (3.2 cm)	2.25" (5.7 cm)	2.25" (5.7 cm)	2 1/4"
Maximum Temperature	275°F (135°C) (1)	230°F (110°C) (1)	230°F (110°C) (1)	275°F (135°C) (1)	230°F (110°C) (1)	230°F (110°C) (1)
Maximum Pressure	125 psig (2)	125 psig (2)	125 psig (2)	125 psig (2)	125 psig (2)	125 psig (2)
Dimensions	1.0"D X 3.25"L (2.5 cm X 6 cm)	1.0"D X 3.25"L (2.5 cm X 6 cm)	1.0"D X 3.43"L (2.5 cm X 8.72 cm)	1.4"D X 4.6"L (9.1 cm X 12 cm)	1.4"D X 4.6"L (9.1cm X 12 cm)	1.4"D X 4.6"L (9.1 cm X 12 cm)

Ordering Information							
For assistance, call toll	I-free at 1-800-343	3-4048 8AM to	5PM Eastern Tir	ne			
Model Filter Cartridges Box of 10 Available in types Q and X	9922-05 9922-05-□ (3)	9900-05 9900-05-□ (3)	4433-05 4433-05-□ (3)	9933-05 9933-05-□ (3)	9922-11 9922-11-□ (3)	9933-11 9933-11-□ (3)	8833-11 8833-11-□ (3)

Notes:

1 At 0 psig

2 At 110°F (43°C)

3 To designate the grade of filter tube in the DFU, insert Grade letters after DFU designation. For example, to obtain a grade BQ filter tube in a DFU 9922-05, order: 9922-05-BQ. Please note the following limitations:

DFU	Supplied With These Grades
4433-05, 9900-05, 9922-05, 9933-05	DQ, BQ, AQ (BK) (4)
9922-11, 9933-11	DX, BX, AQ
8822-11, 8833-11	DX, BX

 $4\,$ BK Grade has a color indicating feature, which turns the cartridge red when saturated with oil. Available only in types 4433-05 and 9900-05.



Application Notes



64 1-800-343-4048

Sample Filters

Balston Sample Filters Protect Sensitive Analyzers:

Balston Gas and Liquid Sample Analyzer Filters protect analyzers from sample impurities by removing solids and liquids from gases with 99.999% efficiency at 0.01 micron. Balston Sample Filters offer liquid filtration to 1 micron or lower. Composed of borosilicate glass microfibers with a resin binder, Balston sample filters are inert to most any gas or liquid.

To satisfy the extremely wide range of requirements for analyzer sample filters, Parker Hannifin Corporation supplies a complete line of filter housings in stainless steel, polypropylene, and other corrosion resistant materials, as well as a choice of high efficiency filter elements which are inert to most all liquids and gases.



Product Features:

- Remove liquids and solids from gas samples
- Remove solids and gas bubbles from liquid samples
- Coalesce and separate two liquid phases
- Filter solids and liquids from gases with 99.999% efficiency at 0.01 µm
- Temperature resistance to 900°F (482°C)
- Low pressure drop
- Long life between filter element changes

Emissions Monitoring and Analysis

Process Instrumentation and Controls

Slip Stream and By-Pass Sampling Filtration Specialty Gas and Chemical Filtration



Sample Filters

Sample Filter Functions

Coalescing Filtration: Separating Liquids From Gases

Microfibre Filter Cartridges efficiently separate suspended liquids from gases. The micro fibers capture the fine liquid droplets suspended in the gas and cause the droplets to run together to form large drops within the depth of the filter cartridge. The large drops, forced by the gas, flow to the downstream surface of the filter cartridge, from which the liquid drains by gravity. This process is called "coalescing". Since the coalesced liquid drains from the cartridge at the same rate that liquid droplets enter the cartridge, the cartridge has an unlimited life when coalescing liquids from relatively clean gases, and the filters operate at their initial retention efficiency even when wet with liquid (see Figure 1). Note that the flow direction is inside-to-outside, to permit the liquid to drip from the outside of the filter to the housing drain.

Since the coalesced liquid drips from the downstream surface of the filter cartridge in the presence of filtered gas, it is important to avoid carryover, or entrainment, of liquid droplets by the gas leaving the filter housing. The possibility of entraining coalesced liquid is minimized by using an X-Type filter cartridge. The X-Type filter cartridges are constructed of two layers, an inner high-efficiency coalescing layer and an outer layer of coarse glass fibers. The coarse, rapidly-draining outer layer ensures that the liquid drips continuously from the bottom of the filter cartridge and minimizes the chance of liquid carryover. (The small internal volume of some filter housings does not permit use of the thick-wall X-Type cartridges, and therefore Q-Type cartridges must be used.) Re-entrainment of coalesced liquid is also avoided by ensuring that the gas flow rate through the housing is safely below the maximum shown in the flow charts on page 40. For most requirements for removing liquid from gas samples, Grade DX or DQ filter cartridges should be used.

CLEAN/DRY AIR OUT CLEAN AIR CLEAN AIR BALSTON MICROFIBRE FILTER TUBE COALESCED LIQUID AUTOMATIC FLOAT DRAIN

Figure 1
Balston Compressed Air Filter

66

Draining Collected Liquid

If liquid is carried into the filter in slugs rather than dispersed as droplets in the gas, a filter which is properly sized for steady-state conditions can be flooded and permit liquid carryover. If slugging of liquid is expected, a filter with a relatively large bowl should be selected to provide adequate liquid holding capacity and provisions should be made to drain the liquid automatically from the bowl of the housing as fast as it accumulates. An automatic float drain can be used if the pressure is in the 10-400 psig range. Above 400 psig, the possibilities are: a constant bleed drain. a valve with automatic timed actuator (supplied by customer), or an external reservoir with manual valves (see Figure 2). The external reservoir can be constructed of pipe or tubing with sufficient volume to hold all the liquid which is expected to be collected during any period of unattended operation.

If the filter is under vacuum, the external reservoir is a practical method of collecting coalesced liquid for manual draining from time to time. If an external vacuum source, such as an aspirator, is available, the liquid may be drained continuously from the housing drain port.

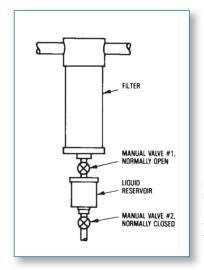


Figure 2

To drain liquid while filter is operating at pressure or vacuum conditions, close valve #1, and open valve #2



1-800-343-4048

Sample Filter Functions

Coalescing Filtration: Separating Two Liquid Phases

In principle, Microfibre Filter Cartridges separate suspended droplets of a liquid which is immiscible in another liquid by the same process as they separate droplets of liquid from a gas. The liquid droplets suspended in the continuous liquid phase are trapped on the fibers and run together to form large drops, which are then forced through the filter to the downstream surface. The large drops separate from the continuous liquid phase by gravity difference, settling if heavier than the continuous phase and rising if lighter. The coalescing action of Balston® filters is effective with aqueous droplets suspended in oil or other hydrocarbons, and also with oil in water suspensions.

In practice, liquid-liquid separations are much more difficult than liquid-gas separations. The specific gravity difference between two liquids is always less than between a liquid and a gas, and therefore a longer phase separation time is needed. Either the filter housing must be oversized or the flow rate greatly reduced to avoid carryover of the coalesced phase. As a rule of thumb, flow rate for liquid-liquid separation should be no more than one-fifth the flow rate for solid-liquid separation shown in the chart on page 39. Even at low flow rates, if the specific gravity difference between the two liquids is less than 0.1 units (for example, if an oil suspended in water has a specific gravity between 0.9 and 1.1), the separation time for the coalesced phase may be impracticably long. In that case, if there is only a small quantity of suspended liquid, the filter tube can be used until saturated with the suspended liquid and then changed.

Another practical problem with liquid-liquid separations is that small quantities of impurities can act as surface-active agents and interfere with the coalescing action. For that reason it is not possible to predict accurately the performance of a liquid-liquid coalescing filter, and each system must be tested on site. The general guidelines for the system to start testing are to use Grade DX filter cartridges, and flow inside-to-outside at very low flow rates. If the suspended liquid is lighter than the continuous phase, the housing should be oriented so that the drain port is up. In general, Microfibre Filter Cartridges should be used for liquid-liquid coalescing in slipstream sampling applications only.

Membrane Separation of Sample Streams

A Coalescer Membrane Combination Filter is designed to remove entrained liquid and particulate in gas samples for a wide variety of applications, and to prevent contamination or damage to the analyzers and sample system components. Microscopic pores contained within the membrane permit molecules of gas or vapor to flow through easily, allowing the composition of the sample gas to remain unchanged. However, even the smallest liquid molecules remain trapped and are unable to flow through the membrane's small passages under normal operating conditions. This is due to the high surface tension which causes liquid molecules to bind tightly together to form a group of molecules, moving together, which is too large to fit through the pores of the membrane.

The membrane is extremely inert, and is recommended for most process liquid applications, with the exception of hydrofluoric acid. It is also recommended for use in systems designed for PPB, PPM, and "percent level" component concentrations, as a result of its very low absorption characteristics. The membrane is strong and durable, but also very soft and pliable. Typically located upstream from the analyzer or component it is protecting, the Coalescer Membrane Combination provides protection even if other sample system components fail.

Removing Gas Bubbles from Liquids

Microfibre Filter Cartridges readily remove suspended gas bubbles from liquid, eliminating the need for deaeration tanks, baffles, or other separation devices. Flow direction through the filter is outside-to-inside. The separated gas bubbles rise to the top of the housing and are vented through the drain port. If slipstream sampling is used, the separated bubbles are swept out of the housing with the bypassed liquid. Grade DX or Grade DQ is a good choice for gas bubble separation.



Sample Filter Functions

Quantitative Measurement of Solids in Gas

Quantitative determination of solids in gas, often a requirement in stack gas or other exhaust gas sampling, is readily accomplished using a Balston® Model 30 filter housing. In the Model 30 housing, the filter cartridge is sealed in place by a stainless steel spring acting on a lightweight stainless retainer disc (Figure 3). The retainer disc is pressed firmly into the end of the filter cartridge. When the housing is disassembled, the filter cartridge and retainer disc may be easily removed as a unit. At the beginning of the run, a tare weight is obtained on the filter cartridge-retainer disc assembly. When the filter is in service, flow through the filter cartridge is inside-to-outside so that even large solid particles which fall off the filter cartridge are held in the cartridge-disc assembly. At the conclusion of the run with a known volume of gas, the cartridge-disc assembly is reweighed, and the increase in weight can be expressed as solids concentration in the gas. Grade DH Filter Cartridges are recommended for high temperature sampling (up to 900°F/482°C). If the sampling or ovendrying temperatures do not exceed 300°F (149°C), Grade DQ may be used.

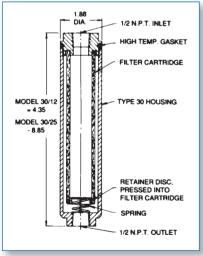


Figure 3

Filter cartridge and retainer disc of Model 30 housing may be weighed as a unit for quantitative determination of solids in gases.

Slipstream or Bypass Sampling

Instrument sample use rates are invariably quite low, yet it is essential to minimize lag time in the sample system. Since analyzers often are located some distance from the sampling point, samples are usually transported to the analyzer at a relatively high flow rate to minimize lag time. The sample is divided at the analyzer, with the analyzer using the portion it requires (usually a very small fraction of the total sample), and the balance recycled to the process, or vented.

If the sample filter is located in the low-flow line to the analyzer, it will have good life between filter element changes because the solids loading rate is very low; however, the filter must be carefully selected to avoid introducing unacceptable lag time. If the filter is located in the high-flow portion of the sample system, its effect on sample lag time can be relatively low, but the life between filter changes may be inconveniently short because the element is filtering a much greater volume of material than the analyzer is using.

Ideally, a filter should be located at the point where the low-flow stream is withdrawn to the analyzer (Figure 4). This arrangement permits the main volume of the filter to be swept continuously by the high flow rate stream, thus minimizing lag time; at the same time, only the low-flow stream to the analyzer is filtered, thus maximizing filter life.

A slipstream filter requires inlet and outlet ports at opposite ends of the filter element to allow the high flow rate of the by-passed material to sweep the surface of the filter element and the filter reservoir, and a third port connected to the low flow rate line to the analyzer, which allows filtered samples to be withdrawn from the filter reservoir.

The Model 95 housings, 31GCFL, 41GCFL, 48S6, 49S6, DFU 8822-11, and DFU 8833-11 are ideal designs for slipstream sampling, since the inlet and the bypass ports are located at opposite ends of the housing, and the bypass port is as large as the inlet port. Larger housings, such as the Model 33S6, Model 45S6, and Model 27/35, can also be used for slipstream sampling, but the relatively small size of the drain port may limit the slipstream rate in some applications.

If bubble removal from a liquid is a requirement, this function may be combined with slipstream filtration, since the recommended flow direction for bubble removal is outside-to-inside, and the separated bubbles will be swept out of the housing by the bypass stream. In this case, the liquid feed should enter at the bottom of the housing and the bypass liquid exit at the top of the housing.




1-800-343-4048

Sample Filter Functions

Slipstream Sampling Plus Coalescing Filtration

A special problem arises in slipstream sampling if the filter is to coalesce and continuously drain suspended liquid from a gas stream or to coalesce liquid droplets from a liquid stream. As noted earlier (see page 32). the coalesced liquid is removed in the form of large drops from the downstream side of the filter. Therefore, the coalescing filter requires two outlet ports, one for the dry gas and one for the liquid drain. To combine coalescing and slipstream filtration, a filter housing would need four ports - two for inlet and bypass and two for filtered gas and coalesced liquid - which is not a practical design. Therefore, slipstreaming plus coalescing requires two stages of filtration (Figure 5). The second (coalescing) stage must be located in the sample line to the analyzer, and should be as small as possible to minimize lag time. If the quantity of suspended liquid is not large, an in-line Disposable Filter Unit (9933-05 or 9922-05) may be considered as a trap for the suspended liquid, to be replaced when saturated.

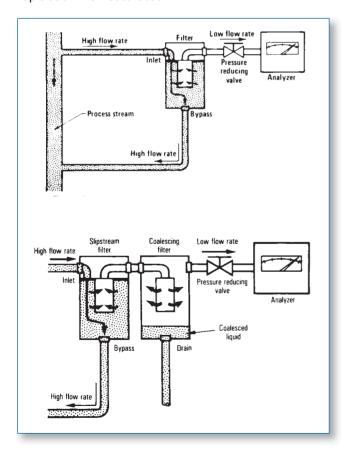

Quantitative Measurement of Liquids in Gas

Quantitative determination of nonvolatile liquids suspended in a gas may be accomplished by a procedure similar to the solids determination (see page 68). In the case of liquids, the test is designed so that all the liquid entering the filter cartridge during the test period remains trapped on the fibers; i.e., the sample period is short enough that the filter cartridge does not become saturated and begin to drain liquid.

Any convenient filter housing may be used. The filter cartridge should be Grade BQ, to assure quantitative retention of aerosols, no matter what droplet size. With a known gas flow rate and test duration, the increase in weight of the filter cartridge will be a measure of the weight concentration of aerosol in the gas.

Considerable care must be taken to obtain a representative sample of aerosol in gas. If sampling from a large line, the sample probe should enter the pipe from above and if possible, extend into the pipe to avoid picking up liquid clinging to the wall of the pipe. There should be no valves, reducers, or sharp elbows in the sample line upstream from the filter.

Figure 4
Slipstream or bypass filtration

Figure 5
Slipstream Filtration plus coalescing filtration



Application Recommendations

Acid Plant Stack Gas

A frequently encountered sampling requirement is to analyze the gas composition in the exhaust from absorbers or scrubbers in acid manufacturing plants. The exhaust gas invariably contains droplets of dilute acid, which must be removed from the sample before it enters the analyzer. The recommendations are similar to those for natural gas sample filtration: Grade DQ or DX filter tube, inside-to-outside flow, and two stages of filtration if slipstream sampling is required. Depending upon the composition of the suspended liquid, housings may be stainless steel, PTFE (Model 95T), Monel (Model 95M), or PVDF (DFU 8822-11).

Sampling Ambient Air or Other Atmospheric Pressure Gas

The filtration requirement for ambient air samplers is usually to remove solid particles or liquid droplets which could deposit on analyzer optical surfaces or cause other calibration problems. Grade DX or DQ filter cartridges are recommended. For low flow rate personal samplers, the compact and lightweight DFU 9933-05-DQ is often used. For higher flow rates, the Model 90 filter holder with Grade DX or DQ filters is recommended.

Ambient air sampling systems are often under negative pressure, induced by the sampling pump. If it is necessary to drain coalesced liquid from the system, the external reservoir is often the most convenient method (see Figure 2 on page 66).

Sampling Water

Most water analyzers are well protected against the damage or calibration drift caused by solid contamination if a 10 micron (LP Grade 30) filter cartridge is used. If long filter life is desired in a system with high solids loading (including most tap water, well water, and cooling water), a two stage LP cartridge system is recommended: LP Grade 10 followed by LP Grade 30.

Sampling Liquid Effluent Streams

Liquid effluent analyzers usually deal with aqueous streams having a high solids content. In addition, the analyzers are often located in remote areas of the plant and are infrequently serviced. Therefore, the sample filter system must have long life between filter cartridge changes, even in a high solids situation. The general recommendation for this requirement is a two stage filter system, LP Grade 10 filter cartridge followed by LP Grade 30 filter cartridge. The filters should be oversized as much as possible without causing excessive lag time. Plastic filter housings are usually a good choice.

Measurements of steam and condensate conductivity, specific ion concentrations, and feedwater additive concentrations are often required in high pressure boiler systems. In a continuous sampling system, the high pressure steam or condensate is cooled to below 100°F (38°C) and then the pressure is reduced to near atmospheric pressure for metering to the analyzers. Filtration is required upstream from the pressure reducing valves, to prevent pitting of the valve seats by suspended particles and to eliminate variations in flow rate to the analyzers.

A stainless steel filter housing with the appropriate pressure rating and Grade DX or DQ filter cartridge is recommended. Since the analyzer system is often located some distance from the sampling point, slipstream filtration is usually required. Figure 9 shows a sampling system in operation at a nuclear steam generating facility.

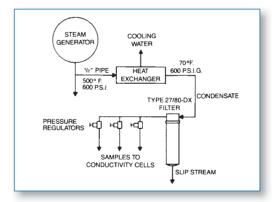


Figure 9

Model 27 filter with Grade DX filter cartridge protects pressure reducing valves in a steam condensate sampling system.



Application Recommendations

On-Line Process Analyzers

The variety of filtration requirements for on-line process analyzers precludes making general recommendations above for the required filtration functions. The filter housings most frequently used for process analyzer applications are the Model 95S6 and Model 91S6, which provide the corrosion resistance of Model 316 stainless steel (complies with NACE specification MR-01-75), a pressure rating of 5000 psig, have full slipstream sampling capability, and minimum internal volume.



Figure 6

Model 95S6, 316 stainless steel with 5,000 psig pressure rating, is the filter housing most frequently used in process analyzers

Natural Gas Analyzers

To protect gas composition analyzers from liquids and solids, Grade DX or DQ filter tubes are recommended, with inside-out flow direction. If both slipstream sampling and coalescing are required, a two stage system must be used, as described on page 69.

The Model 85 (5000 psig rating) and Model 37 (4000 psig rating) housings comply with NACE specification MR-01-75. For lower pressure applications, any stainless steel housing of appropriate flow capacity may be used.





Figure 7

Model 85 (left) or Model 37/12 (right) are used for natural gas sample filtration when a housing larger than the Model 95S6 is required

Stack Gas Sampling

The Model 30 housing with Grade DH filter cartridge is used for quantitative determination of solids in stack gas, as described on page 68. The Model 30 may also be used as a beginning-of-the-line filter at stack gas temperature (up to 900°F), to prevent solids from entering the gas sample line. Grade DH is used for this purpose. After the sample is cooled, a coalescing filter with Grade DX tube is used to remove suspended liquids before the sample goes to the analyzer. Flow direction is inside-to-outside. Model 33G or 45G housings are often used in this application to permit a visual check on the liquid level in the filter housing. Since there often is a considerable amount of liquid present at this point, positive steps must be taken to drain the housing to ensure that liquid does not build up and carry downstream to the analyzer.

The coalescing filter should be located as close to the analyzer as possible to minimize the chance of condensation between the filter and the analyzer. Additional precautions which can be taken to avoid downstream condensation are to cool the sample below ambient temperature upstream from the coalescing filter, and to heat the line.

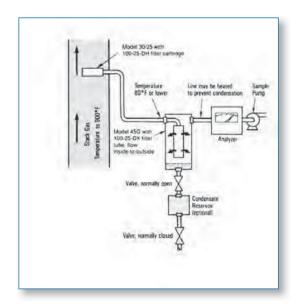


Figure 8

Stack gas sample lines usually require a high temperature solids filter at the sample point and a condensate separator immediately upstream from the analyzer



Filter Cartridge and Housing Selection

Table 1 Filter Cartridge Description

LP Cartridges: Designed to filter liquids with high solids contents. Have an integral prefilter and an external support structure

(flow direction is inside-to-outside)

X-Type Cartridges: Used for solids and relatively large amounts of suspended liquids in gases. Provide excellent chemical

resistance, temperature resistance to 300°F (150°C). and good mechanical handling properties. These cartridges have thick walls for improved coalescing efficiency. Should be used whenever permitted by housing internal volume. Fluorocarbon Resin Binder.

Q-Type Cartridges: Used for solids and trace amounts of liquids in gases. Also ideal for liquid service and removal of particulates.

Similar to X-Type cartridges in chemical and temperature resistance. Fluorocarbon Resin Binder

H-Type Cartridges: Recommended for oxygen service or when X-Type or Q-Type are unsuitable. H-Type cartridges have

temperature resistance to 1000°F (538°C) in dry gas, 100°F (38°C) in liquid . Quartz construction.

M Type Sintered Stainless Steel Cartridges:

Designed for applications having heavy loading of solid contaminants. These cartridges are also suitable for removing heavy, viscous liquids from gases and as prefilters to high efficiency final filters. Constructed of 316 stainless steel with molded viton end seals.

CI Cartridges: Used to remove trace quantities of oil vapor. Activated carbon sandwiched between two layers of microfiber filter media absorbs oil vapor. Must be prefiltered

with Grade DX and Grade BX. Max. operating temp.

is 180°F

How To Select The Filter Cartridge

When selecting a cartridge, do not overspecify. Select the coarsest grade which will adequately protect the instrument. Coarser grade filters provide lower pressure drop and longer life than finer grades.

Parker Hannifin supplies filter cartridges in three differ-

ent designs: LP Cartridges, Sintered Stainless Steel

Cartridges, and Microfibre Filter Cartridges

(X, H, or Q-type). See Table 1 for descriptions:

Filter Cartridge Description

When selecting X, Q, or H type cartridges, a D or B positioned before the cartridge type will determine the retention efficiency (see chart to the left). For LP and Sintered Stainless Steel Cartridges. the numerical Grade value indicates retention efficiency (see Table 2).

Refer to the chemical compatibility chart on page 38 to confirm compatibility of the filter cartridge material with the sample composition.

Table 2 Retention Efficiency of Filter Cartridges for Gas and Liquid Sample Filtration

Gas Filtration at 0.01 µm Microfibre Filter Cartridges

Grades DX, DQ, DH Grades BX, BQ, BH Grade AQ Grade AAQ

99.99% 99.9999+% 99.99999+%

Liquid and Gas Filtration at Indicated Micron Size

Sintered SS Cartridges

Grade 5M 5 um Nominal Grade 10M 10 um Nominal 20 µm Nominal Grade 20M Grade 40M 40 µm Nominal Grade 70M 70 um Nominal Grade 00M 100 µm Nominal

Liquid Filtration

Microfibre Filter Cartridges (98% retention)

25 μm 8 μm Grades DX, DQ, DH Grades CX, CQ, CH 2 μm 0.9 μm Grades BX, BQ, BH Grade AQ Grade AAQ 0.3 µm

LP Cartridges (80% retention) 75 µm Grade 20 25 µm 10 µm Grade 30


How To Select The Filter Housing

- Select a filter housing in the material appropriate for your application. Please refer to the Application Index on page 76, and the appropriate data sheet.
- Select a filter housing with a port size equal to the line size where the filter is to be located. If the line size at the filter has not yet been selected, determine the gas flow rate and pressure at the point where the filter will be located, and refer to the appropriate flow chart on pages 77 and 78 of this bulletin. Flow rates for liquids are located on page 77 and flow rates for air and gas sample filters are located on page 78.



72 1-800-343-4048

Vapor Adsorption Cartridges

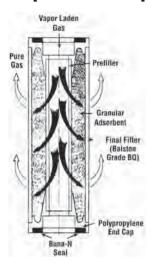

Type CI Vapor Adsorption Cartridges contain a bed of adsorbent granules in the annular space between two Microfibre Filter Tubes, with permanently bonded end caps. Utilizing a wide choice of adsorbents, the Type CI cartridges selectively remove vapors from air and other gases. Flow direction is inside-to-outside through the cartridge, and the outer Microfibre Filter cartridge serves as an integral final filter to prevent carryover of adsorbent particles.

For low flow applications, Disposable Adsorption Units (DAU) provide a means of utilizing the same choice of adsorbents used in the Type CI cartridges in a completely disposable package.

Because the absorbed vapor remains trapped in the solid bed, the Type CI cartridge has a fixed upper limit of total weight of vapor which can be captured. It is usually not feasible to regenerate the cartridge when it has reached its adsorption limit. Type CI cartridges should be used only when small quantities of vapor are to be removed.

Adsorbents used i	in Type CI Cart	ridges
Adsorbent	Grade No.	Use For
Carbon	000	Compressor oil vapors, $\mathrm{C}_{\scriptscriptstyle{5}}$ and heavier hydrocarbons, aromatics, oxygenated hydrocarbons, chlorinated organics, freons, carbon disulfide.
Molecular Sieve Type 13X	103	Most $\mathrm{C_4}$ and lighter hydrocarbons, etylene, propylene, acetylene, ethylene oxide, ammonia, mercaptans, sulfur hexafluoride, triethylamine, and smaller amines.
Mixed Sodium and Calcium Hydroxides	107	all acidic gasses, including sulfur trioxide, sulfur dioxide, nitrogen dioxide, carbon dioxide, hydrogen sulfide, hydrogen chloride, phosphorus trichloride, boron triflouride.

Considerations in Using Adsorbent Cartridges

The following factors should be considered when selecting a vapor adsorbent cartridge:

- 1 Solid adsorbents are effective only for vapors. Since liquids will damage or inactivate most solid adsorbents, the Type CI cartridge or DAU must be preceded by an efficient coalescing filter.
- In contrast with Microfibre Filters, which operate at their initial efficiency throughout their life, adsorbent cartridges have a limited holding capacity. When the adsorption capacity is reached, no further adsorption occurs. The limiting capacity, or "breakthrough" point, is not sharply defined, and the exit vapor concentration will increase rapidly as saturation is approached. To avoid unwanted vapor contaminants downstream, it is necessary to change the adsorbent cartridge well before it has reached its ultimate adsorption capacity.
- 3 Adsorption is reversible, if operating conditions change, a vapor may desorb rather than adsorb. For example, if a temporary surge in vapor impurity concentration causes a relatively high concentration to be absorbed on the solid, a subsequent decrease in inlet vapor composition will result in desorption of vapor from the solid to the gas stream.
- The efficiency of a given adsorbent for a given vapor depends upon the specific operating conditions. Therefore, again in contrast to filtration, it is not possible to assign a single efficiency rating to an adsorbent. While it is not possible to predict or guarantee an adsorption efficiency for any specific set of conditions, it is possible to enhance the conditions beneficial to adsorption and avoid conditions which interfere with adsorption. Conditions which aid adsorption are: low temperature, high pressure, low flow rate, and absence of competing vapors (particularly water vapor).



Stainless Steel Sintered Metal Filter

Remove solids and liquids from gas samples

Remove solids from liquid samples
Filtration efficiencies from 5 to 100 micron
316L stainless steel construction
Long life, cleanable filter cartridges
Temperature resistance to 400°F
Up to 200 psid (differential pressure)



Advantages

The Balston Stainless Steel Sintered Metal Filter is suitable for applications which require a durable, low maintenance reusable stainless steel filter. The filter cartridge is constructed of 316 stainless steel with two molded Viton gaskets. It may be installed in select Balston filter housings which are designed to accommodate an 050-11, 100-12, and 100-25 size filter cartridge. The Balston Stainless Steel Sintered Metal Filters may be used in liquid or gas service, to filter particulate sized from 5 micron to 100 micron, depending on the grade of the filter used.

The Balston Stainless Steel Sintered Metal Filter has excellent chemical resistance characteristics.

Installation of the Balston Stainless Steel Sintered Metal Filter is straightforward and requires approximately 2-3 minutes. First, remove the filter bowl from the filter housing into which the filter will be installed. Next, place the molded Viton gaskets on to the ends of the cartridge. For 050-11 elements, make sure the shoulder of the gasket fits snugly onto the outer diameter of the cartridge. Finally, holding the gaskets in place on the cartridge, slide the cartridge on the support core or tie rod of the housing, and reassemble the filter housing.

Check the filter housing for leaks after reassembling.

The Balston Stainless Steel Metal Filter Cartridge should be removed from service and cleaned annually, or when the pressure drop across the filter is significant enough to adversely affect the user's application.

The cartridge may be cleaned by backflushing or ultrasonic methods. After cleaning, visually inspect the filter cartridge to confirm it's integrity for continued service.

Applications

Samples with heavy loading of solid contaminants

Removal of heavy, viscous liquids from gas samples

Prefilters to final high efficiency filters

Ideal for sample lines that are periodically backflushed

High temperature applications



74 1-800-343-4048

Stainless Steel Sintered Metal Filter

Filter Housing Model	Filter Size	Filter Cartridge Grade	Max Porosity (Micron)	2 psig	20 psig	40 psig	60 psig	80 psig	100 psig	125 psig	160 psig	200 psig	250 psig	300 psig	500 psig
95, 85, 91,48S6	050-11	05M	5	0.8	1.6	2.6	3.6	4.4	5.4	6.6	7.8	10	12	15	24
Series		10M	10	1.2	2.4	3.9	5.4	6.6	8.1	9.9	12	15	19	22	36
		20M	20	1.6	3.2	5.2	7.2	8.8	11	13	16	20	25	30	48
		40M	40	2.4	4.8	7.8	11	13	16	20	23	31	37	44	73
		70M	70	3.4	6.8	11	15	19	23	28	33	43	53	63	103
		00M	100	4.4	8.8	14	20	24	30	36	43	56	68	81	133
31S6, 33S6,	100-12	05M	5	2.4	5.2	8.0	11	14	17	21	24	32	39	47	76
31G,33G,		10M	10	3.6	7.8	12	17	21	26	31	37	48	69	70	114
37/12		20M	20	4.8	10	16	22	28	34	41	49	64	78	93	152
		40M	40	7.2	16	24	33	42	51	62	73	95	118	140	229
		70M	70	10	22	34	47	60	72	88	104	135	167	198	324
		00M	100	13	29	44	61	77	94	113	134	175	216	256	419
41S6, 45S6	100-25	05M	5	3.4	7.2	11	16	20	24	29	34	45	55	66	108
41G, 45G		10M	10	5.1	11	17	23	30	36	44	52	68	83	99	161
37/25		20M	20	6.8	14	23	31	40	48	58	69	90	111	132	215
		40M	40	10	22	34	47	59	72	88	103	135	166	197	323
		70M	70	14	31	48	66	84	102	124	146	191	235	280	457
		00M	100	19	40	63	86	109	132	161	189	248	305	362	592

Specifications	
Balston Sintered Metal Filter	
Filter Efficiency	5 micron to 100 micron (nominal) in gas and liquid
Materials of Construction	316L Stainless Steel Cartridge, Viton Gasket
Maximum Temperature	400°F
Maximum Pressure Drop	200 psid (14 bar)
Dimensions (including gaskets)	
050-11 size	.75"D x 2.28"L
100-12 size	1.21"D x 2.48"L
100-25 size	1.21"D x 6.98"L
Shipping Weight	0.5 lb. (0.2 kg)

Ordering Information for	assistance, call 800	-343-4048. 8am to 5pm	Eastern Time.
	050-11 Size	100-12 Size	100-25 Size
Sintered Metal Filter	050-11-()	100-12-()	100-25-()
Replacement Viton Gaskets Example: 100-12-40M	A05-0045	A05-0046	A05-0046

Sintered Sta	inless Stee	l Cartridges	;
Filter Housing Model	Filter Size	Filter Cartridge Grade	Water Flow Rate in GPH at 1 PSI pressure drop
95, 85, 91	050-11	05M 10M 20M 40M 70M 00M	11 26 30 35 38 38
31S6, 33S6 31G, 33G 37/12	100-12	05M 10M 20M 40M 70M 00M	26 62 71 82 93 93
41S6, 45S6 41G, 45G 37/25	100-25	05M 10M 20M 40M 70M 00M	61 111 128 148 154



Chemical and Temperature Resistance Selection

Chemical or Solvent	X-Type or Q-Type with Fluorocarbon Resin Binder	H-Type With Quartz Construction	LP Cartridge With Polypropylene Suppor
Cold Water	Excellent	Fair	Excellent
Hot Water (to 180°F/82°C)	Excellent	Not Recommended	Excellent
Steam (to 20 psig)	Excellent	Not Recommended	Not Recommended
Acids, except Hydrofluoric:			
Dilute concentrations	Excellent	Excellent	Excellent
Intermediate concentrations	Excellent	Excellent	Good
Concentrated, except phosphoric	Good-Fair	Excellent	Not Recommended
Concentrated phosphoric acid	Not Recommended	Not Recommended	Not Recommended
Hydrofluoric Acid	Not Recommended	Not Recommended	Not Recommended
Caustic, below 45%	Excellent	Not Recommended	Fair
Caustic, above 45%	Fair	Not Recommended	Not Recommended
Chlorine, liquid or gas	Excellent	Excellent	Not Recommended
Ammonia, liquid or gas	Not Recommended	Not Recommended	Fair
Ethylene Oxide, liquid or gas	Not Recommended	Not Recommended	See Pack 5
Aromatic Hydrocarbons	Excellent	Excellent	Good
All other Hydrocarbons	Excellent	Excellent	Excellent
Ketones	Not Recommended	Excellent	Fair
Alcohols	Excellent	Excellent	Excellent
Freons	Excellent	Excellent	Not Recommended
Phenol	Excellent	Excellent	Not Recommended
Chlorinated Solvents	Excellent	Excellent	Fair
Ethylene Diamine	Excellent	Excellent	Not Recommended
Ethanolamine	Not Recommended	Excellent	Not Recommended
Other Amines	Good-Fair	Excellent	Not Recommended
Polar Solvents, including:			
DMF, DMAC, NMP, DMSO	Not Recommended	Excellent	Not Recommended
Maximum Operating Temperature	300°F (150°C)	1000°F (538°C)	180°F (82°C)

^{*}Consult factory for compatibility at elevated temperatures

Application Index	Filter	Stainless Steel, Monel,	Plastic
Operating Requirement	Cartridge Type	or Aluminum Housing	Housing
Severe Operating Conditions			
Pressure 250 to 5000 psig	All	91S6, 97S6, 95M, 85, 37/12, 37/25, 27/35 27/80, 95S6, 95A, 48S6, 49S6, 105S6, 47S6	N/A
Temperature 300°F (150°C) to 600°F (315°C)	H, M	Any stainless steel or Monel housing with Viton seals	N/A
Temperature 600°F (315°C) to 900°F (480°C)	H, M	30/12, 30/25	N/A
Exceptional Chemical Resistance	See chart above	95M/Monel	9922-\(\begin{align*} 9922-\(\begin{align*} 95T/PTFE 90/Polypropylene
NACE Compliance	AII	95\$6, 85, 37/12, 37/25, 27/35, 27/80	NA
Functional Requirements			
Separate liquids from gases	X, Q	All housings except 97S6, 30/12, 30/25, 48S6, 49S6, 47S6	8822-11, 8833-11, 95T
Separate two liquid phases	X, LP	All housings except 97S6, 30/12, 30/25, 48S6, 49S6, 47S6	8822-11, 8833-11, 95T
Remove gas bubbles from liquids	X, Q	All housings except 97S6, 30/12, 30/25, 48S6, 49S6, 47S6	8822-11, 95T
Quantitative measurement of solids in gases	H, Q	30/12, 30/25	N/A
Slipstream or Bypass Filtration	X, Q, LP, M	All housings except 97S6, 30/12, 30/25	8822-11, 95T, 53/18, 53/50
Filter liquids with high solids content	LP, M	All housings	All housings
Filter gas or liquid samples to analyzers	X, Q, LP, M	All housings	9933-05, 9922-05, 90



76 1-800-343-4048

Filter Cartridge, Housing Selection/Flow Rates for Liquid Filters

Flow Rates For Liquid I				Water Flow Q or X Cartr	Rate, Gallons Per l idgesLP Cartridge	Hour			
Model	Gallons		Pressure Drop	DQ, DX	BQ, BX	Grade 10	Grade 20	Grade 30	Grade 50
Stainless Steel, Monel and F	PTFE Housings								
105S6			1 psi	7	2				
10330			5 psi	24	10				
48S6			1 psi	14	4				
4000			5 psi	51	21				
95M, 95S6, 95T, 95A 91S6, 47S6	0.005 .009	0.02 0.036	1 psi	18	5				
85	0.015	0.06	5 psi	64	26				
31S6	0.026	0.098	1 psi	54	13				
31G	0.020	0.000	5 psi	129	56				
49S6			1 psi	57	14				
4300			5 psi	135	60				
33S6 33G	0.042	0.16	1 psi	63	16	50	50	40	10
37/12	0.042	0.10	5 psi	150	66	210	210	180	45
41S6	0.051	0.19	1 psi	95	30				
41G	0.031	0.13	5 psi	260	121				
37/25 45S6	0.111	0.42	1 psi	109	35	75	75	60	15
45G	0.111	0.42	5 psi	300	140	300	300	260	65
27/35	0.394	1.49	1 psi	325	90				
21/33	0.394	1.45	5 psi	875	400				
27/80	0.750	2.84	1 psi	390	170				
21/00	0.730	2.04	5 psi	990	610				
15/80\$6 (2)			1 psi	1650	720				
13/6030 (2)			5 psi	4000	2500				
Plastic Housings									
9922-05	0.003	0.01	1psi	12	3				
9933-05	0.003	0.01	5 psi	30	15				
8822-11, 8833-11	0.005	0.02	1 psi	18	5				
9922-11, 9933-11	0.005	0.02	5 psi	45	26				
8800-12			1 psi	54	13				
			5 psi	129	56				
00			1 psi	23	10				
90			5 psi	46	36				
FOD	0.004	0.10	1 psi			50	50	40	10
58P	0.034	0.13	5 psi			210	210	180	45
F2/10	0.405	0.70	1 psi			100	100	100	40
53/18	0.185	0.70	5 psi			360	360	360	190
53/50	0.040	1.01	1 psi			210	210	210	80
54/50	0.346	1.31	5 psi			720	720	720	390
50/05	0.00:	0.50	1 psi			420	420	420	160
53/95	0.661	2.50	5 psi			1440	1440	1440	780

Notes: 1 For liquids with viscosity higher than the viscosity of water (1 centipoise), divide the flow rates in the above table by the viscosity of the liquid in centipoises. Example: For liquid with 10 centipoise viscosity, flow rate with Model 53/50 housing, Grade 50 filter cartridges at 5 psi drop will be 390/10=39 GPH.

² Flow rates for Model 15/80S6 are estimated.



Flow Rates for Air and Gas Filters

	5000 psig	!	1.1	1		962	256	1180		1400	420	1770	099	1	I	1	1	ı	ŀ	1	l	!	ı	!	1	11900	5630	!	1	1	1	
	4500 psig	!	11	1	988	988	230	1060	440	1260	380	1600	290	1	1	1	1	1	1	1	1	1	1	1	1	10720	2060	1		1	1	l
	4000 psig			!	770	770	205	940	390	1120	340	1420	530	1	1	!	1	2970	770	1	1	!	!	4200	1930	9530	4500	1		1	1	
	3500 psig	1	11	1	674	674	179	830	350	086	300	1245	475	1	1	1	1	2600	969	1	1	1	1	3680	1690	8340	3940	1	1	1	ı	Ì
	3000 psig		11	1	578	578	154	710	310	840	260	1065	400	1	1	1	1	2234	629	1	1	ı	1	3156	1447	7160	3380	1	1	1	ı	Ì
	2500 psig	-	11	!	482	482	128	290	260	700	220	890	325	1	1	1	1	1863	483	1	1	!	!	2631	1207	2970	2820	1	1	1	1	
	2000 psig		1.1	!	386	386	103	470	220	260	180	710	265	1	1	!	1	1493	387	1	1	!	!	2108	926	4780	2260	1		!	ı	
	1500 psig		11	1	290	290	77	357	180	420	130	540	200	1	1	1	1	1122	291	1245	571	1	1	1585	727	3600	1700	3900	2540	1	1	
	1000 psig		11	!	195	195	52	239	132	280	06	360	134	1	1		1	752	195	834	383	!	!	1062	487	2410	1140	2625	1722	1	!	
	ing 750 psig	!	1.1	1	147	147	39	180	88	210	20	270	113	1	1	1	1	267	147	629	288	1	1	800	367	1820	828	1980	1300	1	I	
PSIG	oduct Specification Charts for Maximum Pressure Rating of Each Housing 80 100 125 150 200 250 300 500 750 psig psig psig psig psig psig psig psig		1.1	1	66	66	26	121	29	145	46	182	89	1	1	!	1	381	66	423	194	1	1	538	247	1220	278	1330	873	4940	1390	
Pressure	ating of E 300 psig	!	1.1		09	09	16	74	45	88	58	111	41	1	1	205	54	233	09	259	119	291	139	329	151	748	353	814	534	3020	820	
ated Line	essure Ra 250 psig		1.1	1	52	51	14	62	27	75	25	92	34	1	1	172	46	196	51	218	100	245	115	277	127	629	297	684	449	2540	715	
p at Indica	dmum Pr 200 psig	!	1 1	!	14	41	Ħ	21	23	61	20	9/	28	1	1	140	37	159	41	177	81	199	93	225	103	510	241	255	365	2060	280	
PSI Droj	s for May 150 psig	!		!	32	32	6	39	19	47	16	28	22	1	1	107	29	122	32	135	62	152	72	172	79	392	185	426	280	1580	445	
-IM, at 2	n Chart 125 Psig	10.1	9.9	14.6	7.3	27	7	33	14	40	13	20	18	1	1	06	24	103	27	115	53	129	61	146	29	332	157	362	237	1340	378	
tes, SCF	ecrification 100 psig	8.3	5.4 4.0	12	20	22	9	27	12	33	=	41	15	1	!	74	20	82	22	94	43	106	20	120	22	273	129	297	195	1100	310	
Flow Ra	duct Sp 80 psig	8.9	3.3	10	4.3	18	2	22	10	28	10	32	12	1	!	61	16	70	18	78	35	87	41	66	45	225	107	245	161	806	256	
£	Refer to Pro 40 60 psig psig	5.4	3.5	∞	3.7	14	4	18	∞	23	6	26	10	1	1	48	12	22	4	61	28	69	32	78	36	178	84	193	127	717	202	
ſ		3.9	2.6	9	e 0	10	က	13	7	16	∞	19.5	7.7	1	!	35	တိဖိ	40	10	45	21	20	24	22	26	130	62	142	93	525	148	
	20 psig	2.5	1.6	3.6	1.8	7	1.8	∞	2	10	2	12	4.6	1	!	22	9 4 5	26	7	28	13	32	15	36	17	83	39	06	59	333	94	
	. 2 psig	1.2	0.8	1.8	0.9	က	0.9	3.9	က	2.5	7	5.9	2.2	1	!	9	2,5	12	က	13	9	15	7	17	∞	40	19	43	28	160	45	
Flow Rate (CFM) at	10" Water Press. Drop. 0 psig	0.2	0.1 N/A	0.4	0.2 N/A	0.7	0.2	1.5	1.5	N/A	N/A	2.2	0.4	3.0	0.5	5.6	0.45	3.0	0.5	N/A	N/A	9.9		7.5	1.3	13.3	3.3	20.0	2.8	20.0	5.8	
	Filter Tube Grade	DQ	BQ DAU	XO	BX DAU	DQ	BQ	DQ	ВО	DQ	BQ	XO	BX	DQ, DX	BQ, BX	DQ, DX	BQ, BX	XO	BX	DQ	BQ	DQ, DX	BQ, DX	DQ, DX	BQ, BX	XO	ВХ	XQ	ВХ	DX	BX	
	Volume of Housing (ml)	11 22	Sc:=	000	13.02	77	 Sc:	19.82	0.3	21		50.47	29.47		23.3	02.45	2	0.1	128.38	140	2	79.000	70.022	00 01 0	90.69	1500 80	00.000	CU 098C	70.007	4700	?	
	Filter VHousing I Model	9922-05	4433-05 9900-05 9933-05	8833-11	9933-11 105S6	9020	96/6	95A, 95M	9186, 4786	7806	0000	96	ŝ	G	G	8800-12 (2)	31S6, 31G	30/12, 33S6	33G, 37/12	9008	4800	7106 A1C	4 500,	30/25	37/25	27/35	26/35	08/26	71100	15/80.56		

NA = DATA NOT AVAILABLE 1 For line pressures

1 For line pressures above 150 PSIG, flow rate values are estimated.

2 Maximum operating pressure in gas service is 50 PSIG.

Stainless Steel In-Line Filter Housings: 1/4" and 1/2" Port Size

Stainless steel construction

Pressure to 5000 psig

Temperature to 600°F (315°C)

Ideal end use filter

Model 97S6

Miniature 316 stainless steel filter with 1/4" NPT in-line ports, and 5000 psig rating. Since it does not have a drain port, the Model 97S6 is used as an end-of-the-line compressed gas filter when little or no liquid is expected, or as a cylinder gas filter.

Models 30/12 and 30/25

Designed specifically for quantitative measurement of solids in gases to 600°F (315°C), the filter cartridge and element retainer disc in the Model 30 housings may be weighed as a unit (see notes below).



Model 97S6



Model 30/12 and 30/25

Principal Specifications			
Model	97\$6	30/12	30/25
Inlet and Outlet Ports	1/4" NPT	1/2" NPT	1/2" NPT
Drain Port	None	None	None
Materials of Construction			
Head	316SS	303SS	303SS
Bowl	316SS	304SS	304SS
Internals	316SS	303SS	303SS
Seals	Viton	Carbon Fiber	Carbon Fiber
Maximum Temperature	400°F (204°C)	600°F (315°C) (2)	600°F (315°C)(2)
Maximum Pressure	5000 psig (1)	100 psig (3)	100 psig (3)
Shipping Weight	0.75 lbs. (0.3 kg)	2 lbs. (0.9 kg)	3 lbs. (1.4 kg)
Dimensions	1.25"D X 3.1"L (3.2cm X 7.9cm)	1.9"D X 4.4"L (4.8cm X 11.2cm)	1.9"D X 8.6"L (4.8cm X 22cm)

Ordering Information	For assistance, cal	toll-free at 1-800-343-4048 8	BAM to 5PM Eastern Time
Filter Housing Model	97S6	30/12	30/25
Support Core, Required for Liquid Filtration Filter Cartridges	Included 050-05-□	N/A 100-12-□	N/A 100-25-□
Important Notes:		e not available for the Model 97	.00 =0 =
		e quantitative measurement ap for use with the 30/12 or 100-	pplications order -25-DH/BH-F896 for use with the 30/25.

- 1 Maximum pressure ratings are for temperatures to 200°F (93°C). Please consult factory for maximum pressure ratings at elevated temperatures.
- 2 For temperatures greater than 600°F consult factory for proper recommended seals
- 3 100 psig at 450°F (241°C).



Miniature Disposable Filter Units Constructed of Nylon and PVDF

Prevent cross-contamination of samples

Pressure ratings up to 125 psig

Temperature to 275°F (135°C)

Completely disposable, constructed of recyclable plastics

Models 9922-05, 9933-05, 4433-05 and 9900-05

The 99XX-05 models are the smallest Disposable Filter Units with 11.7 ml internal volume. These models are used in low flow gas or liquid sampling applications, such as liquids to specific-ion analyzers or gases to personal samplers. The model 9900-05-BK has a color indicating feature, which turns the cartridge red when saturated with oil. The model 4433-05 has 1/4" and 3/8" Barb Connections molded into the inlet/outlet ports.

Models 9922-11, 9933-11, and 8800-12

Models 9922-11, 9933-11, and 8800-12 are used for applications similar to the smaller DFUs (Models 9922-05 and 9933-05) which require greater solids holding capacity and can tolerate the increased retention time.

Model 8833-11

These Disposable Filter Units are used as continuous coalescing filters with a third port serving as the drain, slip-stream, or by-pass port.

Parker Hannifin offers a manual drain valve for removal of coalesced liquids from the Type 8833-11-DX.

Drain Valve: 1/8" NPT (male) x 1/8" ID Tubing. (Requires fitting part No. 11977). Part No. 20120.

Model 9953-11

This model snaps together for easy filter cartridge changeouts. It is designed primarily for low pressure or mild vacuum applications. It is ideal for capturing samples and perform analysis or record weights over time. If used with a X-tube, it is a very effective silencer to compress inlet noise to small pumps.



Chemical Compatibility Models 9922-05, 9922-11

Suitable: Water or steam to 200°F (135°C); concentrated nitric, sulfuric, and hydrochloric acids; chlorine (gas or liquid); sodium hypochlorite, ethylene oxide (gas or liquid); Freons; ammonia (gas, liquid, or aqueous solutions); hydrogen peroxide (all concentrations); bromine (dry and aqueous solutions); all chlorinated solvents except methylene chloride; all aromatic and aliphatic solvents; all alcohols and glycols; aniline; phenol.

Limited Use: Acetone, MEK, dioxane, furfural, methylene chloride.

Unsuitable: Water above 200°F (135°C), THF, DMF, ethylene diamine, chlorosulfonic acid, ethanolamine, pyridine, sulfur trioxide.

Chemical Compatibility Model 9933-11, 8833-11, and 8800-12

Suitable: Water to 158°F (70°C); benzene, toluene, other aromatic hydrocarbons; hydrocarbon solvents and fuels, perchloroethylene; trichloroethylene, nitric acid (to 10%); sulfuric acid (to 40%); hydrochloric acid (to 10%); most salt solutions; sodium and potassium hydroxide (to 50%).

Limited Use: Water at 176°F (80°C); acetone; MEK, acetaldehyde; ammonia (to 25%).

Unsuitable: Water above 158°F (70°C); alcohols; glycols, phenol; aniline; DMF; concentrated acids; chlorine.



80 1-800-343-4048

Miniature Disposable Filter Units Constructed of Nylon and PVDF

Flow Rates	W	Water Flow Rate, Gallons per Hour										
DFU Model	Volume of I Gallons	Housing Liters	Initial Pressure Drop	Grade DQ, DX	Grade CQ, CX	Grade BQ, BX	Grade AQ	Grade AAQ				
9922-05	0.000	0.04	1 psi	12	10	3	1.5	0.4				
4433-05 9933-05	0.003	0.01	5 psi	30	25	15	7.3	1.9				
9922-11	0.0005	0.00	1 psi	18	15	5	2.5	0.6				
9933-11	0.0005	0.02	5 psi	45	37	26	12	3.1				
0000 40	000	044	1 psi	54	44	13	6	1.4				
8800-12	.003	.014	5 psi	129	106	56	26	6.5				

Flow Rates Air Flow at 2 psi drop, standard, cu. ft. per min. (SCFM) at indicated line pressure.							
Model	2 psig	20 psig	40 psig	60 psig	80 psig	100 psig	125 psig
9953-11-DX, 8833-11-DX (7)	1.8	3.6	5.8	8.0	10.0	12.0	14.6
9953-11-BX, 8833-11-BX	0.9	1.8	2.9	4.0	5.0	6.0	7.3
9900-05-BK, 4433-05-BX	0.4	0.8	1.3	1.8	2.2	2.7	3.3

Principal Specifications									
Model	9922-05	9900-05	4433-05	9933-05	9922-11	9933-11	8833-11	8800-12	9953-11
Inlet and Outlet Ports	1/4" Tubing	1/4" Tubing	1st Tier/Barb 1/4"Tube 2nd Tier/Barb 3/8"Tube	1/4" Tubing	1/4" Tubing	1/4" Tubing	1/4" Tubing	1/2" Tubing	0.32" OD
Drain	None	None	None	None	None	None	1/4" Tubing	None	None
Material of Construction	PVDF	Nylon	Nylon	Nylon	PVDF	Nylon	Nylon	Nylon	Polypropylene
Filter Cartridge Length	1.25" (3.2 cm)	1.25" (3.2 cm)	1.25" (3.2cm)	1.25" (3.2 cm)	2.25" (5.7 cm)	2.25" (5.7 cm)	2.25" (5.7 cm)	2.5" (5.71 cm)	2.28" 6.35 cm)
Maximum Temperature	275°F (135°C)(1)	230°F (110°C)(1)	230°F (110°C)(1)	230°F (110°C)(1)	275°F (135°C)(1)	230°F (110°C)(1)	230°F (110°C)(1)	150°F (66°C)(1)	125°F (52°C)(1)
Maximum Pressure	125 psig (2)	125 psig (2)	125 psig (2)	125 psig (2)	125 psig (2)	125 psig (2)	125 psig (2)	50 psig (2)(8)	2 psig (2)
Dimensions	1.0"D x 3.25"L (2.5 cm x 8 cm)	1.0"D x 3.25"L (2.5 cm x 8 cm)	1.0"D x 3.43"L (2.5 cm x 8.72 cm)	1.0"D x 3.25"L (2.5 cm x 8 cm)	1.4"D x 4.6"L (3.6 cm x 12 cm)	1.4"D x 4.6"L (3.6 cm x 12 cm)	1.4"D x 4.6"L (3.6 cm x 12 cm)	2.24"D x 6.24"L (5.69 cm x 15.85 cm)	1.22"D x 3.57"L (3.1 cm x 9.07 cm

Ordering Information For assistance, call toll-free at 1-800-343-4048 8AM to 5PM Eastern Time									
Model	9922-05	9900-05	4433-05	9933-05	9922-11	9933-11	8833-11	8800-12	9953-11
Box of 10 DFUs Available only in Q-grades	9922-05-□	9900-05-🗆 (4)	4433-05-🗆 (4)	9933-05-🗆	9922-11-□	9933-11-🗆	8833-11-🗆 (6)	8800-12-□ box of 1	9953-11-🗆 (5)
Box 10 DAU'S (3)	9922-05-□	N/A	N/A	9933-05-□	9922-11-🗆	9933-11-□	N/A	N/A	N/A

Notes:

- 1 At 0 psig 2 At 110°F (43°C)
- 3 To designate adsorbent in the DAU, insert adsorbent numbers after DAU designation. For example, to obtain a miniature clear nylon DAU
- with carbon adsorbent, order 9933-05-000. Adsorbent numbers are listed on page 33.
- 4 Available only in Q grades
- 5 Available in Q or X media. 6 Available only in X media. **7** 9953-11 is designed for maximum pressure of 2 psig.
- 8 Pressure rating in liquid service is 70 PSIG maximum.

Installation Information

To pressure pipe or tubing: Compression fittings for 1/4" O.D. tubing may be obtained from the following manufacturers. Hoke, Inc. ("Gyrolok"); Crawford Fitting Co. ("Swagelok"); Parker-Hannifin Corp. ("CPI"); Legris, Inc. (push-on fittings); Jaco Mfg. Co. (plastic fittings). The following brass fittings which seal by O-ring compression and which may be completely recovered and reused when changing filters may be purchased from Parker/Balston:

1/4" tubing to 1/4" NPT female -Connector: Part No. 11970 (1 per pkg.)

1/4" tubing to 1/4" tubing -Connector:

Part No. 11971 (1 per pkg.)

To low pressure plastic tubing: Tubing with 1/4" ID may be slipped over the DFU and fittings and held with tubing clamps. Parker Hannifin supplies plastic barbs to connect the DFU to smaller diameter plastic tubing. The connection is suitable for pressures to 50 psig.

DFU to 1/16" ID tubing: Part No. 14000 (bag of 20 barbs) DFU to 1/8" ID tubing: Part No. 14001 (bag of 20 barbs)

Filter Cartridge and Housing Selection



Disposable Adsorption Units (DAUs) contain a bed of adsorbent granules. Utilizing a wide choice of adsorbents, the DAUs selectively remove vapors from air and other gases.

Because the adsorbed vapor remains trapped in the solid bed, the DAU has a fixed upper limit of total weight of vapor which can be captured. It is usually not feasible to regenerate the filter when it has reached its adsorption limit. DAUs should be used only when small quantities of vapor are to be removed.

Adsorbent	Grade	Use For
Carbon	000	Compressor oil vapors, C ₅ and heavier hydrocarbons, aromatics, oxygenated hydrocarbons, chlorinated organics, freons, carbon disulfide.
Silica Gel	101	Recommended only for water vapor.
Molecular Sieve Type 13X	103	Most C ₄ and lighter hydrocarbons, ethylene, propylene, acetylene, ethylene oxide, ammonia, mercaptans, sulfur hexafluoride, triethylamine, and smaller amines.
Mixed Sodium & Calcium Hydroxides	107	All acidic gases, including sulfur trioxide, sulfur dioxide, nitrogen dioxide, carbon dioxide, hydrogen sulfide, hydrogen chloride, phosphorus trichloride, boron trifluoride.

Notes:

- 1 Please refer to Ordering Information for complete explanation of nomenclature.
- $2\ \mbox{ln}$ DAU 9933-05-107 and DAU 9933-11-107, color indicator turns violet when adsorbent is spent.
- 3 In DAU 9933-05-101 and 9933-11-101, adsorbent turns pink when vapor capacity is reached.
- 4 Maximum operating temperature is 180°F.

Considerations in Using Adsorbent Cartridges

The following factors should be considered when selecting a DAU:

- 1 Solid adsorbents are effective only for vapors. Since liquids will damage or inactivate most solid adsorbents, the DAU must be preceded by an efficient coalescing filter.
- 2 In contrast with Microfibre Filters, which operate at their initial efficiency throughout their life, adsorbent cartridges have a limited holding capacity. When the adsorption capacity is reached, no further adsorption occurs. The limiting capacity, or "breakthrough" point, is not sharply defined, and the exit vapor concentration will increase rapidly as saturation is approached. To avoid unwanted vapor contaminants downstream, it is necessary to change the adsorbent cartridge well before it has reached its ultimate adsorption capacity.
- 3 Adsorption is reversible, if operating conditions change, a vapor may desorb rather than adsorb. For example, if a temporary surge in vapor impurity concentration causes a relatively high concentration to be adsorbed on the solid, a subsequent decrease in inlet vapor composition will result in desorption of vapor from the solid to the gas stream.
- 4 The efficiency of a given adsorbent for a given vapor depends upon the specific operating conditions. Therefore, again in contrast to filtration, it is not possible to assign a single efficiency rating to an adsorbent. While it is not possible to predict or guarantee an adsorption efficiency for any specific set of conditions, it is possible to enhance the conditions beneficial to adsorption and avoid conditions which interfere with adsorption. Conditions which aid adsorption are: low temperature, high pressure, low flow rate, and absence of competing vapors (particularly water vapor).



Balston OEM Disposable Filter Solutions



Balston Disposable Filter Units

Ideal for the following gas filtration applications:

Final filter for air logic devices
Protection of pneumatic components
Filtration of portable environmental sampling devices
Filtration of samples to on-line analyzers
Protection of Pneumatic temperature controls

Ideal for the following liquid filtration applications:

Filtration of liquid with minimum holdup volume Filtration of liquid samples to analyzers

Additional applications in the following industries:

Instrument & Controls HVAC Dental Automotive Food Packaging Parker Hannifin Corporation, the leader in separation and filtration technologies, is pleased to present a brochure designed to help customers choose the best Balston disposable filter product for industrial, commercial, measurement and control applications.

Balston brand disposable filter units (DFU) consist of a microfibre filter cartridge permanently bonded into a sealed plastic holder with 125 psig pressure ratings, temperatures to 275°F, and available in low and high flow models. The economical DFU offers all of the advantages of microfibre filter cartridges for high efficiency liquid and gas filtration, combined with the economics and convenience of complete disposability.

Our years of experience in fitting products to individual applications has led to the creation of a variety of standard products that can be ordered off the shelf for general purpose filtration requirements or can be custom designed for all types of specialty applications.

If you do not see the specific configuration, size or material that you are looking for, our OEM engineering team will be happy to review your requirements and design product to your exact specifications.


If you have questions, or would like to place an order, please call 1-800-343-4048.



OEM Disposable Filter Solutions

General Purpose DFU - Low Flow Gas



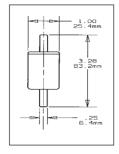

Specifications Max. Pressure at 110°F: 125 psig Max. Temp. at 0 psig: 230°F (110°C) Inlet / Outlet Ports: 1/4" Tube None Housing Material of Construction: Nylon

.01L

Internal Volume:


Ordering Information

9933-05-🖵 Box of 10

Available in Type Q and in the following grades: A, B, C, BK, and D. Also available with adsorbents 000, 101, 103, and 107.

General Purpose DFU - Higher Flow



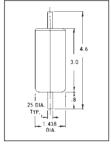


Specifications Max. Pressure at 110°F: 125 psig Max. Temp. at 0 psig: 230°F (110°C) Inlet / Outlet Ports: 1/4" Tube None Housing Material of Construction: Nylon Internal Volume: .02L

Ordering Information

9933-11-Box of 10

Available in Type Q and in the following grades: A, B, C, and D. Also available with adsorbents 000, 101, 103, and 107.



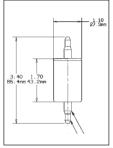


Specifications	
Max. Pressure at 110°F:	125 psig
Max. Temp. at 0 psig:	230°F (110°C)
Inlet / Outlet Ports:	1st Tier: 1/4" Tube 2nd Tier: 3/8" Tube
Drain:	None
Material of Construction:	Nylon
Internal Volume:	.01L

Ordering Information 4433-05-🖵 Box of 10 Available in Type Q and in grades: A, B, C and D.

Model 4433-05

General Purpose with Drain Port



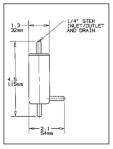

Specifications	
Max. Pressure at 110°F:	125 psig
Max. Temp. at 0 psig:	230°F (110°C)
Inlet / Outlet Ports:	1/4" Tube
Drain:	1/4" Tube
Housing Material of Construction:	Nylon
Internal Volume:	.02L

Ordering Information 8833-11-🖵 Box of 10 Available in Types Q and X and in the following grades: A, B, C, D, and S.

Model 8833-11




84 1-800-343-4048

OEM Disposable Filter Solutions

High Chemical Resistance - Low Flow



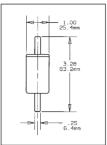

Model 9922-05

Specifications

Max. Pressure at 110°F: 125 psig

Max. Temp. at 0 psig: 275°F (135°C)

Inlet / Outlet Ports: 1/4" Tube

Drain: None

Housing Material of Construction: PVDF

Internal Volume: .01L


Ordering Information

9922-05-□ Box of 10

Available in Type Q and in the following grades: A, B, C, D. Also available with adsorbents 000, 101, 103, and 107.

High Chemical Resistance DFU - Higher Flow



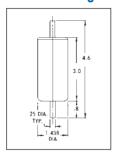

Specifications Max. Pressure at 110°F: 125 psig Max. Temp. at 0 psig: 275°F (135°C) Inlet / Outlet Ports: 1/4" Tube Drain: None Housing Material of Construction: PVDF Internal Volume: .02L

Ordering Information


9922-11-**□** Box of 10

Available in Types Q and in the following grades: A, B, C, and D. Also available with adsorbents 000, 101, 103, and 107.

Model 9922-11

Oil Indicating DFU



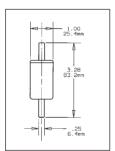

Specifications	
Max. Pressure at 110°F:	125 psig
Max. Temp. at 0 psig:	230°F (110°C)
Inlet / Outlet Ports:	1/4" Tube
Drain:	None
Housing Material of Construction:	Nylon
Internal Volume:	.01L


Ordering Information

9900-05- Box of 10

Available in Type K and in grade B.

Large Capacity High Flow DFU



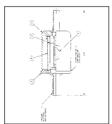

Specifications	
Max. Pressure at 110°F:	50 psig
Max. Temp. at 0 psig:	150°F
Inlet / Outlet Ports:	1/2" Tube
Drain:	None
Housing Material of Construction:	Nylon
Internal Volume	01381


Ordering Information

8800-12-**□** Box of 1

Available in Types Q and X and in the following grades: A, B, C, and D. Also available with adsorbents 000, 101, 103, and 107.

Large Capacity High Flow DFU Intake Filter



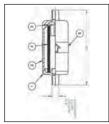

Specifications	
Max. Pressure at 110°F:	2 psig
Max. Temp. at 0 psig:	125°F
Inlet / Outlet Ports:	.032" OD
Drain:	None
Housing Material of Construction:	Polypropylene
Internal Volume:	0.0331

Ordering Information

9953-11
Box of 10

Available in Types Q and X and in the following grades: A, B, C, and D.

High Flow Stainless Steel Filter Housings: Moderate to High Pressure Applications

Stainless steel construction

Pressure to 5000 psig

Temperature to 400°F (204°C)

Ideal for high pressure applications

Models 27/35, 27/80 and 15/80S6

Model 27 housings are among the largest 316 stainless steel filters available with high pressure capability. The 27/35 and 27/80 housings are used when 800 psig rating is required. The 27/35-3000 and 27/80-3000 models are suitable for service up to 3000 psig. The Model 15/80S6 is designed for 2" pipe systems and pressures to 500 psig.

Models 26/35D-3000 and 26/35D-5000

Model 26/35D filter housings are constructed of carbon steel for high pressure applications. The Model 26/35D-3000 is ASME Code stamped at the rated pressure of 3000 psig. The Model 26/35D-5000 complies with ASME Code design criteria.



Models 27/35 and 27/80 (27/35 Shown)



Models 26/35D-3000 and 26/35D-5000



86 1-800-343-4048

High Flow Stainless Steel Filter Housings: Moderate to High Pressure Applications

Principal Specifications							
Model	27/35	27/35-3000	27/80	27/80-3000	26/35D-3000,	26/35D-5000	15/80\$6
Inlet and Outlet Ports	1" NPT	1" NPT	2" NPT				
Drain Port	1/4" NPT	1/4" NPT	1/4" NPT				
Materials of Construction							
Head	316SS (1)	316SS (1)	316SS (1)	316SS (1)	Carbon Steel	Carbon Steel	Stainless Steel
Bowl	316SS (1)	316SS (1)	316SS (1)	316SS (1)	Carbon Steel	Carbon Steel	Stainless Steel
Internals	316SS (1)	316SS (1)	316SS (1)	316SS (1)	Stainless Steel	Stainless Steel	Stainless Steel
Seals	Viton	Viton	Viton	Viton	Buna-N	Buna-N	Viton
Maximum Temperature	400°F(204°C)	400°F(204°C)	400°F(204°C)	400°F(204°C)	250°F(120°C)	250°F(120°C)	400°F(204°C)
Maximum Pressure	800 psig (2)	3000 psig (2)	800 psig (2)	3000 psig (2)	3000 psig (3)	5000 psig (3)	500 psig (2)
Shipping Weight	16 lbs (7.3 kg)	25 lbs. (11 kg)	33 lbs. (14.9 kg)	42 lbs. (19kg)	80 lbs. (36 kg)(4)	170 lbs.	32 lbs. (14.4 kg)
Dimensions	4.0"D X 16"L (10 cm X 41 cm)	4.3"D X 16"L (11 cm X 41 cm)	4.0"D X 27"L (10 cm X 69 cm)	4.3"D X 27"L (11 cm X 69 cm)	7.0"D X 17"L (18 cm X 93 cm)	8.5"D X 16.25"L	6.3"D X 28"L (16 cm X 71 cm)

Ordering Information	For assistance, call toll-free at 1-800-343-4048 8AM to 5PM Eastern Time						
Filter Housing Model	27/35	27/35-3000	27/80	27/80-3000	26/35D-3000,	26/35D-5000	15/80\$6
Support Core, Required for Liquid Filtration	SS-200-35	SS-200-35	SS-200-80	SS-200-80	Included	Included	SS-200-80
Filter Cartridges	200-35-🗆	200-35-□	200-80-□	200-80-□	200-35-🗆	200-35-🗖	200-80-🗆
Use only these cartridge types	X, H, Q, CI (5)	X, H, Q, CI (5)	X, H, Q, CI (5)	X, H, Q, CI (5)	X, H, Q, CI(5)	X, H, Q, CI(5)	X,H,Q,CI(5)
cartiluge types							

- 1 Constructed of materials which comply with NACE Specification MR-01-75. Request certificate of compliance
- 2 Maximum pressure ratings are for temperatures to 200°F (93°C). Please consult factory for maximum pressure ratings at elevated temperatures.
- 3 Vessel is ASME Section VIII, Div. 1 code stamped for rated pressure at 200°F (93°C). For 5000 psig pressure rating without the ASME code stamp, order Model 26/35D-5000
- 4 Shipping weight of Model 26/35-5000 is 170 lbs (77kg)
- 5 To order CI Cartridges, indicate type of adsorbent desired by putting three digit designation after size code. For example, to order a carbon cartridge for Model 27/35 housing, order CI-200-35-000. CI cartridges are sold in boxes of 1.



High Pressure Filter Housings: For High Purity, Low Flow Applications

Stainless steel construction

Pressure to 5000 psig

Temperature to 400°F (204°C)

Ideal for removing solids and large quantities of liquids from gas

Model 85

The Model 85 filter housing is constructed of 316 stainless steel, and has a pressure rating of 5,000 psig. This Model can accommodate extended life, X-type filter cartridges and is used when larger quantities of liquids are expected.

Models 37/12 and 37/25

These T-type filter housings are also constructed of 316 stainless steel, and have a 4000 psig rating. These models are used as sample filters for on-line sample analyzers when a larger line size, higher flow rate, or larger bowl reservoir capacity is required.



Model 85



Models 37/12, 37/25 (37/25 Shown)

Principal Specifications						
Model	85	37/12	37/25			
Inlet and Outlet Ports	1/4" NPT	1/2" NPT	1/2" NPT			
Drain Port	1/4" NPT	1/8" NPT	1/8" NPT			
Materials of Construction						
Head	316SS (1)	316SS (1)	316SS (1)			
Bowl	316SS (1)	316SS (1)	316SS (1)			
Internals	316SS (1)	316SS (1)	316SS (1)			
Seals	Viton	Viton	Viton			
Maximum Temperature	400°F (204°C)	400°F (204°C)	400°F(204°C)			
Maximum Pressure	5000 psig (2)	4000 psig (2)	4000 psig (2)			
Shipping Weight	4 lbs. (2 kg)	6 lbs. (3 kg)	10 lbs. (5 kg)			
Dimensions	2.5"D X 5"L (6cm X 13cm)	2.75"D X 5.75"L (7cm X 14.6cm)	2.75"D X 10.25" L (7cm X 26cm)			

Ordering Information	For assistance, call toll-free at 1-800-343-4048 8AM to 5PM Eastern Time				
Filter Housing Model	85	37/12	37/25		
Support Core, Required for Liquid Filtration	Included	SS-100-12	SS-100-25		
Filter Cartridges	050-11-□	100-12-□	100-25-🖵		
Use only these filter cartridge types	X, H, Q	X, H, Q, CI, SMF (3)	X, H, Q, CI (3)		

- 1 Constructed of materials which comply with NACE Specification MR-01-75. Request certificate of compliance
- 2 Maximum pressure ratings are for temperatures to 200°F (93°C). Please consult factory for maximum pressure ratings at elevated temperatures.
- 3 To order CI Cartridges, indicate type of adsorbent desired by putting three digit designation after size code. For example, to order a carbon cartridge for Model 27/35 housing, order CI-200-35-000. CI cartridges are sold in boxes of 1.



Stainless Steel Filter Housings: For Liquids with a High Solids Content

Stainless steel construction

Pressure to 425 psig

Temperature to 220°F (104°C)

Models 33S6 and 45S6

Models 33S6 and 45S6 Filter Housings are constructed of stainless steel and have 1/2" NPT ports. The Model 33S6 uses a 2 1/2" long filter cartridge, and the Model 45S6 uses a 7" long filter cartridge. Both filters are also available with a transparent Pyrex glass bowl (100 psig rating) with breakageprotecting external plastic shield.

Models 33G and 45G

These models offer a transparent Pyrex glass bowl (100 psig rating) with breakage-protecting external plastic shield. They also offer convenient molded gaskets to ensure quick and safe filter change-outs.

Filter Cartridges

X-type cartridges with integral prefilters are recommended for filtration of all liquids with high solids content, including samples from cooling water, well water, and effluent streams.



Models 33S6 and 45S6 (45S6 Shown)



Models 33G and 45G (45G Shown)

odel	33G	45G	33S6	45S6
let and Outlet Ports	1/2" NPT (1)	1/2" NPT (1)	1/2" NPT (1)	1/2" NPT (1)
Materials of Construction				
Head	316SS	316SS	316SS (5)	316SS (5)
Bowl	Pyrex	Pyrex	316SS (5)	316SS (5)
Internals	316SS	316SS	316SS (5)	316SS (5)
Seals	Viton	Viton	Viton	Viton
Maximum Temperature	160°F (71°C) (2)	160°F (71°C) (2)	400°F (204°C) (3)	400°F (204°C) (3)
Maximum Pressure	125 psig (3)	125 psig (3)	425 psig (3)	250 psig (3)
Shipping Weight	3 lbs (1.4 kg)	5 lbs. (2.3 kg)	3 lbs. (1.4 kg)	5 lbs. (2.3 kg)
Dimensions	2.6"D X 4.5"L (6.7cm X 12cm)	2.6"D X 9.3"L (6.7cm X 24cm)	2.6"D X 4.5"L (6.6cm X 11.4cm)	2.6"D X 9"L (6.6cm X 22.9cm)

- 1 Also available with 1/4" ports. To order with 1/4" NPT ports, use designation Model 33G-1/4, etc.
- 2 Limited by maximum temperature of acrylic bowl guards.
- 3 Maximum pressure ratings are for temperatures to 160°F (71°C). Please consult factory
- for maximum pressure ratings at elevated
- Flow is outside-inside.
- Consult factory for maximum pressure ratings at elevated temperatures.
- 4 Support core for use with X-type cartridges. 5 Materials comply with NACE Specification MR-01-75. Request certificate of compliance.

Ordering Information	For assistance, call toll-free at 1-800-343-4048 8AM to 5PM Eastern Time				
Filter Housing Model	33G	45G	33\$6	45S6	
Filter Cartridge	100-12-□	100-25-□	100-12-□	100-25-□	
Use only these Filter cartridge types	LP, M, X	LP, X	LP, F, X	LP, X	
Support Core	SS-100-12 (4)	SS-100-25 (4)	SS-100-12 (4)	SS-100-25 (4)	

Miniature Filter Housings: Convenient T-type Filters

Stainless steel, PTFE, or Monel construction

Pressure to 5000 psig


T-type construction allows for non-disruptive maintenance

Ideal sample filters for on-line analyzers

Models 91S6, 95A, 95M, 95S6, 95T, 105S6

These models are miniature T-type filters constructed of 316 stainless steel (5000 psig), PTFE (150 psig), and other specialty materials. With only 19 ml internal volume and the opportunity for by-pass or slipstream filtration using the drain port as an exit port, the model 95 filters are ideal sample filters for on-line analyzers. The model 105S6 has a small internal volume of 15 ml, which is ideal for applications requiring fast sampling response time.



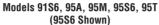



Model 105S6

Model	105S6	91S6	95A	95M	95S6	95T
Inlet and Outlet Ports	1/8" NPT (1)	1/8" NPT (1)	1/8" NPT (1)	1/8" NPT (1)	1/8" NPT (1)	1/8" NPT (1)
Drain Port	1/8" NPT	1/8" NPT	1/8" NPT	1/8" NPT	1/8" NPT	1/8" NPT
Materials of Construction						
Head	316SS (2)	316SS (2)	Aluminum	Monel	316SS (2)	PTFE (2)
Bowl	316SS (2)	316SS (2)	Aluminum	Monel	316SS (2)	PTFE (2)
Internals	316SS (2)	316SS (2)	Aluminum	Teflon	316SS (2)	PTFE (2)
Seals	Viton	Viton	Viton	Viton	Viton	PTFE/Viton
Maximum Temperature	400°F (204°C)	400°F (204°C)	200°F (93°C)	400°F (204°C)	400°F (204°C)	300°F (149°C)
Maximum Pressure	5000 psig (3)	1500 psig (3)	2500 psig (3)	5000 psig (3)	5000 psig (3)	150 psig (3)
Shipping Weight	1 lb. (0.4 kg)	1 lb. (0.4 kg)	0.5 lb. (0.2 kg)	1 lb. (0.4 kg)	1 lb. (0.4 kg)	0.5 lb. (0.2 kg)
Dimensions	1.8"D X 3.3"L (4cm X 8cm)	1.5"D X 3.7"L (3.8cm X 9.4cm)	1.8"D X 4"L (4cm X 10cm)	1.8"D X 4"L (4cm X 10cm)	1.8"D X 4"L (4.6cm X 10.2cm)	1.8"D X 4"L (4.6cm X 10.2cm)

- 1 Also available with 1/4" NPT ports. To order with 1/4" NPT ports, use designation Model 95S6-1/4, etc.
- 2 Constructed of materials which comply with NACE Specification MR-01-75. Request certificate of compliance.
- 3 Maximum pressure ratings are for temperatures to 200°F (93°C). Please consult factory for maximum pressure ratings at elevated temperatures.

Ordering Information	For assistance, call toll-free at 1-800-343-4048 8AM to 5PM Eastern Time					
Model	105\$6	91S6	95A	95M	95\$6	95T
Support Core, Required for Liquid Filtration Filter Cartridges Use only these filter types	Included 050-07-□ Q. H	Included 050-11-🗅 Q. H	Included 050-11-□ Q. H	Included 050-11-□ Q. H. M	Included 050-11-⊡ Q. H. M	Included 050-11-□ Q. H. M



Low Internal Volume Filter Housings: 1/4" and 1/2" Port Size

Stainless steel construction
Pressure to 250 psig
Temperature to 400°F (204°C)
Compact design

Models 91S6, 31S6, 31G, 41S6, 41G

These models offer compact designs and half the dead volume of other sample filters resulting in faster sampling times. They are constructed of stainless steel and available with a variety of seals for easy adaptation to demanding applications. If larger amounts of condensate are expected, specify 33 or 45 series.



Models 31G, 41G (41G Shown)

Models 91S6 Mo



Models 31S6, 41S6 (31S6 Shown)

Principal Specification	Principal Specifications					
Model	91S6	31G	41G	31 S 6	41S6	
Inlet and Outlet Ports	1/8" NPT (1)	1/2" NPT (1)	1/2" NPT (1)	1/2" NPT (1)	1/2" NPT (1)	
Drain Port	1/8" NPT	1/4" NPT	1/4" NPT	1/4" NPT	1/4" NPT	
Materials of Construction						
Head	316SS (2)	316SS	316SS	316SS	316SS	
Bowl	316SS (2)	Pyrex	Pyrex	316SS	316SS	
Internals	316SS (2)	316SS	316SS	316SS	316SS	
Seals	Viton	Viton	Viton	Viton	Viton	
Maximum Temperature	400°F (204°C)	160°F (71°C)	160°F (71°C)	400°F (204°C)	400°F (204°C)	
Maximum Pressure	1500 psig (3)	100 psig (3)	100 psig (3)	425 psig (3)	250 psig (3)	
Shipping Weight	1 lb. (0.4 kg)	2 lbs/0.9 kg	4 lbs/1.8 kg	3 lbs/1.4 kg	5 lbs/2.3 kg	
Dimensions	1.5"D X 3.7"L (3.8cm X 9.4cm)	2.2"D X 5.5"L (5.7cm X 14cm)	2.2"D X 10.0"L (5.7cm X 26cm)	2.25"D X 5.5"L (5.7cm X 14cm)	2.25"D X 10"L (5.7cm X 25.4cm)	

Notes:

1 Also available with 1/4" NPT ports. To order with 1/4" NPT ports, use designation Model 31G-1/4 etc.

2 Constructed of materials which comply with NACE Specification MR-01-75. Request certificate of compliance.

3 Maximum pressure ratings are for temperatures to 200°F (104°C). Please consult factory for maximum pressure ratings at elevated temperatures.

Ordering Information	For assistance, call toll-free at 1-800-343-4048 8AM to 5PM Eastern Time				
Filter Housing Model	91S6	31G	41G	31S6	41S6
Support Core, Required for Liquid Filtration	Included	SS-100-12	SS-100-25	SS-100-12	SS-100-25
Filter Cartridges	050-11-□	100-12-□	100-25-□	100-12-□	100-25-□
Use only these Filter cartridge types	Q, H, M	X, H, Q, M	X, H, Q	X, H, Q, M	X, H, Q



High Internal Volume Filter Housings: For Removing Large Volumes of Contaminants

Stainless steel construction

Pressure to 425 psig


Temperature to 400°F (204°F)

Ideal when a large volume of condensed liquid is expected

Models 33S6, 33G, 45S6, 45G

These models are higher flow rate filters. All models are available with 1/4" or 1/2" NPT ports. These filters are also available with clear Pyrex glass bowls (125 psig rating) with breakage protecting external plastic shields. These housings are useful for gas sampling when a large volume of suspended liquid is expected.



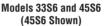



Models 33G and 45G (45G Shown)

odel	33G	33S6	45G	45S6
nlet and Outlet Ports	1/2" NPT (1)	1/2" NPT (1)	1/2" NPT (1)	1/2" NPT (1)
Drain Port	1/8" NPT	1/8" NPT	1/8" NPT	1/8" NPT
Materials of Construction				
Head	316SS	316SS	316SS	316SS
Bowl	Pyrex	316SS	Pyrex	316SS
nternals	316SS	316SS	316SS	316SS
Seals	Viton	Viton	Viton	Viton
Maximum Temperature	160°F (71°C) (2)	400°F (204°C) (3)	160°F (71°C) (2)	400°F (204°C) (3)
Maximum Pressure	125 psig (2)	425 psig (2)	125 psig (2)	250 psig (2)
Shipping Weight	3 lbs/1.4kg	3 lbs./1.4 kg	5 lbs./2.3 kg	5 lbs./2.3 kg
Dimensions	2.6"D X 4.5"L (7cm X 11cm)	2.6"D X 4.5"L (6.6cm X 11.4cm)	2.6"D X 9.3"L (6.6cm X 22.9cm)	2.6"D X 9"L (6.6cm X 22.9cm)

Notes:

1 Also available with 1/4" NPT ports. To order with 1/4" NPT ports, use designation Model 33G-1/4, etc.

2 Limited by maximum temperature of acrylic

3 Maximum pressure ratings are for temperatures to 200°F (93°C). Please consult factory for maximum pressure ratings at elevated temperatures.

4 To order CI Cartridges, indicate type of adsorbent desired by putting three digit designation after size code. For example, to order a carbon cartridge for Model 27/35 housing, order CI-200-35-000. CI cartridges are sold in boxes of 1.

Ordering Information	For assistance, call toll-free at 1-800-343-4048 8AM to 5PM Eastern Time				
Model	33G	33S6	45G	45\$6	
Support Core, Required for Liquid Filtration	SS-100-12	SS-100-12	SS-100-25	SS-100-25	
Filter Cartridges	100-12-□	100-12-🗖	100-25-□	100-25-□	
Use only these filter cartridge types	X, H, Q, M, CI	X, H, Q, M, CI	X, H, Q, CI, M	X, H, Q, CI, M	



Plastic Filter Housings: 1/4" to 3/4" Line Size

Filter solids and liquids from gases with 99.99% efficiency at 0.01 micron

Liquid filtration efficiency to 1 micron

Temperature to 230°F (110°C)



Model 90



Model 58P

Model 90

The Model 90 filter holder is designed to accept grade X or Q type filter cartridges. This model is used as the inlet filter on air, gas or liquid sample analyzers. It can also be used as a vent/breather filter on storage vessels. The disposable filter cartridge is easily replaced in the field, requiring no tools.

Model 58P

The Model 58P housing has a nylon head and internals and a transparent nylon bowl, and replaceable filter cartridges. It is used for filtration of water or mildly acidic or caustic solutions.



The Model 53 housings are constructed of polypropylene, and are designed for a single LP-200 filter cartridge in 5", 10", or 20" lengths. The polypropylene construction provides excellent resistance to non-oxidizing acids, such as HCL in any concentration, sulfuric to 70% concentration, brines, hydrocarbon liquids, alcohols, and concentrated caustic. The Model 53 can be used with certain ketones and chlorinated solvents.

Model 54

The Model 54 housings have a polypropylene head and a transparent styrene-acrylonitrile (SAN) bowl. The transparent bowl is available only in the 10" length. Model 54 housings are used for filtration of water or mildly acidic solutions at temperatures below 100°F (38°C).



Model 53/18



Models 54/50 and 53/50 (53/50 Shown)



Plastic Filter Housings: 1/4" to 3/4" Line Size

odel	90	58P	53/18	53/50	54/50
Inlet and Outlet Ports Materials of Construction	1/4" Tubing	1/4" NPT	3/8" NPT	3/4" NPT	3/4" NPT
Head	Polyprop.	Nylon	Polyprop.	Polyprop.	Polyprop.
Bowl	Polyprop.	Nylon	Polyprop.	Polyprop.	SAN
Internals	_	Nylon	Polyprop.	Polyprop.	Polyprop.
Seals	_		EPR	EPR	EPR
Maximum Temperature	230°F (110°C)	150°F (66°C)	125°F (52°C)	125°F (52°C)	100°F (38°C)
Maximum Pressure	60 psig (1)(2)	125 psig (1)	125 psig (1)	125 psig (1)	125 psig (1)
Shipping Weight	0.2 lbs. (0.1 kg)	1lbs. (0.5 kg)	3 lbs. (1.4 kg)	4 lbs. (1.8 kg)	4 lbs. (1.8 kg)
Dimensions	1.4"D X 3.8"L (4cm X 10cm)	2.7"D X 6.1"L (7cm X 16cm)	5"D X 6.6"L (11cm X 17cm)	5"D X 12"L (13cm X 30cm)	5"D X 12"L (13cm X 30cm)

1 Maximum pressure ratings are for temperatures to 125°F (52°C). Please consult factory from inside to out. Consult factory for other for maximum pressure ratings at elevated

2 60 psig pressure rating with flow direction operating conditions.

Ordering Information	For assistance, call	For assistance, call toll-free at 1-800-343-4048 8AM to 5PM Eastern Time				
Filter Housing	90	58P	53/18	53/50	54/50	
Filter Cartridge	100-12-🗆	LP-100-12-□	LP-200-18-□	LP-200-50-□	LP-200-50-□	



94 1-800-343-4048

Filters for Vehicle Emission Analyzers: Filter System for Gas Engine Analyzers

Complete removal of solid particles, condensed water, and oils

Long filter life, even in high use conditions

No effect by the filter on the composition of the gas

Complete resistance to corrosion



The Model 58N housing is a rugged, economical housing with a 1/8" NPT drain. The transparent polycarbonate bowl and the nylon head, tie rod, and element retainer are resistant and non-absorbent to all components of the sample stream. The Balston 58N filter housing has much better corrosion resistance and is more economical than other filters used in this application.

The Balston Grade 404 Microfibre Filter Cartridges were developed specifically for use in sample lines to Gasoline Engine Analyzers. The filter cartridges are composed of borosilicate glass and polyolefin fibers. They have a 93% retention efficiency at 0.1 micron and offer a significantly higher solids holding capacity and lower pressure drop than conventional resin-bonded glass microfiber filter cartridges. The Balston Grade 404 filter cartridges are hydrophobic and drain water much more rapidly than all-glass fiber cartridges, greatly reducing the possibility of loss of NO_2 and other water-soluble components from the gas sample.

When installed with inside-to-outside flow direction, the Grade 404 filter cartridges are efficient, fast-draining coalescing filters. When installed with outside-to-inside flow direction, the pure white surface of the filter tube permits quick visual estimation of the dirt loading on the filter cartridge.

In addition to the standard 100-12 size, Grade 404 Microfibre Filter Cartridges are available in sizes to fit all Vehicle Emission Analyzer filter housings.



Model 58N

Principal Specifications			
Model	58N		
Inlet and Outlet Ports	1/4" NPT		
Drain Port	1/8" NPT		
Materials of Construction			
Head	Nylon		
Bowl	Polycarbonate		
Internals	Nylon		
Seals	Buna		
Maximum Temperature	150°F (66°C)		
Maximum Pressure	10 psig		
Shipping Weight	1lb. (0.5 kg)		
Dimensions	2.8"D X 6.3"L (7cm X 16cm)		

Ordering Information	
Filter Housing Model	58N
Replacement Filter Cartridges (box of 10)	100-12-404
	Note: Filter cartridge not included. Must be ordered separately



Filters for Diesel Engine Analyzers: Remove Impurities from Gas Stream

Totally inorganic filter cartridge is inert and contains no extractables

Temperature capability to 450°F (232°C)

Filter housing designed for convenient external heating

The Problem:

Diesel engine exhaust has a much higher concentration of suspended solid particles and nonvolatile liquid droplets.

Diesel engine exhaust has a high dew point and must be kept hot to prevent liquid condensation which would affect the accuracy of the analysis. To avoid contamination of sample lines with dirt and oil, most diesel engine analysis systems are designed with the primary filter close to the inlet of the sample system. The filter is externally heated to prevent liquid condensation when the system is started up, but during prolonged operation, the filter often is subjected to engine exhaust gas temperatures, which normally range from 350°F to 450°F (176°C to 232°C) and occasionally get as high as 600°F (315°C).

The Solution:

Model 38 filters, designed specifically for diesel engine exhaust, are all-stainless steel housings with silicone seals (maximum temperature 600°F/315°C). The 1/4" NPT inlet and outlet ports are located at one end of the cylindrical body, and the bayonet closure for changing the filter cartridge is located at the opposite end. To maintain constant temperature, the body may be wrapped in heating tape or enclosed in an oven. The novel closure design permits an operator wearing gloves to replace a filter element rapidly, without disturbing the heating provisions or gas flow connections. The filter housing may be oriented horizontally, vertically, or at any other convenient attitude.

The standard size Model 38/25 housing has a 10-inch (25 cm) long body. Where the installation requires a smaller size housing, the Model 38/12 with 5 1/2 inch (14 cm) long body is available.



Model 38/12, 38/25 (38/25 Shown)

The Grade DH21 filter cartridge, composed of borosilicate glass microfibers and inorganic binder, is inert to all components in the gas and stable to 900°F (482°C). The retention efficiency is 93% of 0.1 micron particles and 100% of 2 micron and larger particles. With flow direction through the filter tube inside-to-outside, the internal prefilter in the Grade DH21 cartridge provides satisfactory life in a relatively dirty environment. Since the dirt is trapped on the inside of the cartridge, the external surface of the cartridge and the filter housing remain free of contaminants.

Principal Specifications		
Model	38/12	38/25
Inlet and Outlet Ports	1/4" NPT	1/4" NPT
Materials of Construction		
Head	Stainless Steel	Stainless Steel
Bowl	Stainless Steel	Stainless Steel
Internals	Stainless Steel	Stainless Steel
Seals	Silicone	Silicone
Maximum Temperature	450°F (232°C)	450°F (232°C)
Maximum Pressure	20 PSIG	20 PSIG
Shipping Weight	5 lbs. / 2.3 kg	4 lbs. / 1.8 kg
Dimensions	2.25"D x 5.5"L (1) (6cm x 14cm)	2.25"D x 10.0"L (1) (6cm x 25cm)

Ordering Information	
Filter Housing Model	Filter Cartridge
38/25 (box of 10) Standard Length	100-25-DH21 (2)
38/12 (box of 10) Short Length	100-12-DH21 (2)
Note: Filter cartridge not included	. Must be ordered separately.

- 1 Dimension without handle. Handle adds 3.75" (9.5 cm).
- 2 If an H-Type filter cartridge is being used, order a modified element retainer kit, P/N 30205.



Series 98 Membrane Filters: Hydrophobic Membrane Protection

Ideal for protecting GCs, Mass Spectrometers, O₂ Analyzers, and Moisture Analyzers

Removes entrained water, submicron sulfuric acid aerosol, and ultra fine particulate

Much lower initial cost and operating costs than other membrane filters



The Series 98 Membrane Filter consists of a housing with a porous membrane filter, which is supported by a sintered porous disk located on the "outlet" side of the housing. Gas enters through the "inlet" port on the upstream side of the membrane, and exits from the "outlet" port on the downstream side. Entrained liquid will not flow through the membrane, and will exit through the "bypass" port on the upstream side of the membrane, completely protecting sensitive instrumentation from moisture. Two models are available: The 98-0 (standard) and the 98-2 (high flow). The 98 Series is identical to other hydrophobic membranes offering the same performance and features but at a much lower price.


The Membrane

Microscopic pores contained within the membrane permit molecules of gas or vapor to flow through easily, allowing the composition of the sample gas to remain unchanged. Even the smallest liquid molecules remain trapped and are unable to flow through the membrane's small passages under normal operating conditions. This is due to the high surface tension which causes liquid molecules to bind tightly together to form a group of molecules, moving together, which is too large to fit through the pores of the membrane.

The membrane is extremely inert, and is recommended for most process liquid applications, with the exception of hydrofluoric acid. It is also recommended for use in systems designed for PPB, PPM, and "percent level" component concentrations, as a result of its very low absorption characteristics. The membrane is strong and durable, but also very soft and pliable.



Series 98 Membrane Filter

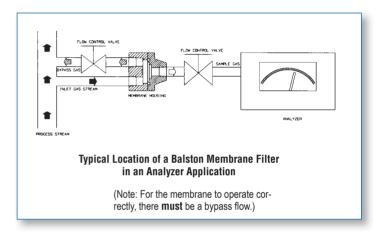



Series 98 Membrane Filters: 1/4" Line Size

How to Select the Membrane and Model

- 1. Determine the following application requirements:
 - A. Gas flow rate to the analyzer excluding the bypass flow.
 - B. Type of suspended liquid to be separated and amount normally present in the sample.
 - C. Gas sample supply pressure at membrane filter inlet.
- 2 Use Table 1 to select a membrane filter model and membrane type which meet your application requirements. Note that the membrane differential pressure for the model and membrane type selected must be lower than the available gas sample supply pressure.

Selecting the Appropriate Type of Membrane

There are two basic types of membranes for the 98 Series Membrane Filters: The Model 98-0 (Standard) is suitable for separation of most liquids from gases. The Model 98-2 (High Flow) is best suited for the separation of water and other high surface-tension liquids from gases.

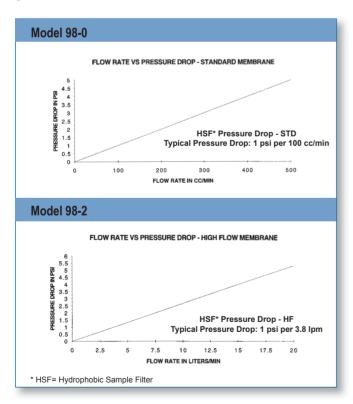


Table 1 Housing and Membrane Selection GuidePrincipal		
Model	98-0	98-2
Membrane Type	Standard (1)	High Flow (2)
Max. Recommended Flow Rate in L/Min.	0.60 (3)	10 (3)
Normal Amount of Liquid Present in Gas	Low to Medium (4)	Low to Medium (4)

Notes:

- 1 Standard membrane is suitable for most suspended liquids.
- 2 High flow membrane is suitable for suspended water, solutions consisting primarily of water, sulfuric acid, caustic, glycols, oily liquids, other high surface-tension type liquids.
- 3 Maximum recommended flow rate of gas through the membrane. Does not include the "bypass" flow rate.
- 4 Amount of liquid normally expected to be present in the sample gas: <u>Low</u>: aerosol or occasional droplets. Medium: continuous droplets. High: continuous flowing liquid.

Model	98
Inlet, Outlet, Bypass Ports	1/4" NPT
Materials of Construction	
Housing	316 Stainless Steel (2)
O-rings	Viton (standard)
	Kalrez, Buna, EPDM (optional)
Maximum Operating Pressure	1000 psig @ 200°F
Maximum Temperature	212°F (100°C)
Maximum Flow Rate	
Standard Membrane	.60 L/Min.
High Flow Membrane	10 L/Min.
Typical Membrane Pressure Drop	
Standard Membrane	1 psig per 100 cc/min.
	flow through membrane (1)
High Flow Membrane	1 psig per 3.8 liters/min.
· ·	flow through the membrane (1)
Outside Dimensions	2"D x 2"L (5cm X 5cm)
Shipping Weight	1.5 lbs. (0.7 kg)

Notes:

1 Pressure Drops are for temperatures to 212°F (100°C).

Ordering Information		
Filter Assembly Maintenance Kits	98-0 (Standard)	98-2 (High Flow)
98014	5 each Membranes & Vito	on O-Rings for 98-0
98015	5 each Membranes & Vito	on O-Rings for 98-2
98002	5 each Membranes 98-0	
98020	5 each Membranes 98-2	



Series A98 Coalescer Membrane Combination Filters

A98 Series offers continuous coalescing of all liquid and the security of hydrophobic membrane protection all in one unit

Fewer fittings required - reducing risk of leaks

More compact - no need for separate coalescers


Less maintenance and downtime as the membrane is fully protected from solids & liquids

Series A98 Coalescer Membrane Combination Filter


The Balston Coalescer Membrane Combination Filter is designed to remove entrained liquid and particulate in gas samples for a wide variety of applications, and thereby prevents contamination or damage to the analyzers and sample system components. Typically located upstream from the analyzer or component it is protecting, the Coalescer Membrane Combination provides protection even if other sample system components fail.

The Coalescer Membrane Combination offers the performance and protection of the 98 Series Membrane Filter with the additional benefits of coalescing liquids and entrapment of particulates, offering maximum protection of the membrane. There is no need for prefiltration which places more volume in the sample system, and requires more space for installation and more potential for leaks.

The Series A98 consists of a housing with a porous membrane filter, which is supported by a sintered porous disk located on the "outlet" side of the housing. Gas enters through the "inlet" port and is directed down through the coalescing filter. The coalescer traps all particulates and continuously drains liquid contaminants. The sample gas then flows upward to the upstream side of the membrane, and exits from the "outlet" port on the downstream side. Entrained liquid will not flow through the membrane, and will exit through the drain port on the downstream side of the coalescer.

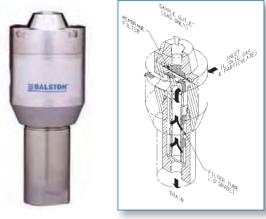

Series A98 Coalescer Membrane Combination Filter

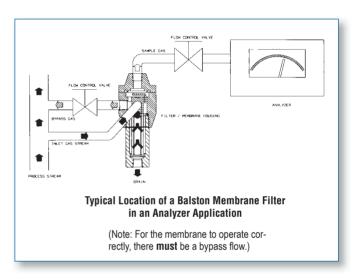

The Membrane

Microscopic pores contained within the membrane permit molecules of gas or vapor to flow through easily, allowing the composition of the sample gas to remain unchanged. Even the smallest liquid molecules remain trapped and are unable to flow through the membrane's small passages under normal operating conditions. This is due to the high surface tension which causes liquid molecules to bind tightly together to form a group of molecules, moving together, which is too large to fit through the pores of the membrane.

The membrane is extremely inert, and is recommended for most process liquid applications, with the exception of hydrofluoric acid. It is also recommended for use in systems designed for PPB, PPM, and "percent level" component concentrations, as a result of its very low absorption characteristics. The membrane is strong and durable, but also very soft and pliable.




A98/11 Series Coalescer: Membrane Combination Filter


How to Select the Membrane and Model

- 1. Determine the following application requirements:
 - A. Gas flow rate to the analyzer excluding the bypass flow.
 - B. Type of suspended liquid to be separated and amount normally present in the sample.
 - C. Gas sample supply pressure at Membrane Filter inlet.
- 2. Use Table 1 to select a Membrane Filter model and Membrane type which meet your application requirements. Note that the membrane differential pressure for the model and membrane type selected must be lower than the available gas sample supply pressure.

Selecting the Appropriate Type of Membrane

There are two basic types of membranes for the A98/11 Series Membrane Filters: The Model A98/11-__Q-0 (Standard) is suitable for separation of most liquids from gases. The Model A98/11-__Q-2 (High Flow) is best suited for the separation of water and other high surface-tension liquids from gases.

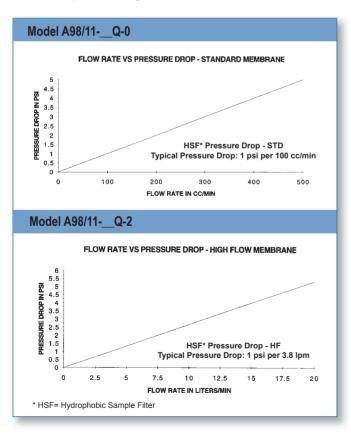

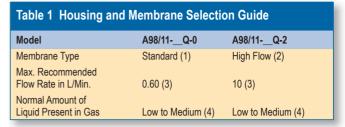

Notes:

- 1 Standard membrane is suitable for most suspended liquids.
- 2 High flow membrane is suitable for suspended water, solutions consisting primarily or water, sulfuric acid, caustic, glycols, oily liquids, other high surface-tension type liquids.
- 3 Maximum recommended flow rate of gas through the membrane. Does not include the "bypass" flow rate.
- 4 Amount of liquid normally expected to be present in the sample gas: <u>Low</u>: aerosol or occasional droplets. <u>Medium</u>: continuous droplets. <u>High</u>: continuous flowing liquid.

Principal Specifications	
Model	A98/11-[]Q-[]
Inlet, Outlet, Bypass Ports	1/4" NPT
Materials of Construction	
Housing	316 Stainless Steel
O-rings	Viton (standard) Kalrez, Buna, EPDM (optional)
Maximum Operating Pressure	1000 psig @ 200°F
Maximum Temperature	212°F (100°C)
Maximum Flow Rate	
Standard Membrane	.60 L/Min.
High Flow Membrane	10 L/Min.
Typical Membrane Pressure Drop	
Standard Membrane	1 psig per 100 cc/min. flow through membrane (1)
High Flow Membrane	1 psig per 3.8 liters/min. flow through the membrane (1)
Outside Dimensions	2"D x 4"L (5cm X 10cm)
Shipping Weight	2.4 lbs. (1.1 kg)

- 1 Pressure Drops are for temperatures to 212°F (100°C).
- 2 Constructed of materials which comply with NACE Specification MR-01-75. Request certificate of compliance.

Ordering Information	
Filter/Membrane Replacement Kits	A98/11Q-0 A98/11Q-2
98011	5 ea. DQ Filters, Viton O-Rings and Membranes for A98/11-DQ-O
98012	5 ea. BQ Filters, Viton O-Rings and Membranes for A98/11-BQ-2
98013	5 ea. DQ Filters, Viton O-Rings and Membranes for A98/11-DQ-2
98010	5 ea. BQ Filters, Viton O-Rings and Membranes for A98/11-BQ-O
98002	5 ea. Membranes for A98-0 or A98/11_Q-O
98020	5 ea. Membranes for A98-2 or A98/11_Q-2
050-11Q	10 ea. Coalescing Filter Cartridges



A39/12 Series Coalescer: Membrane Combination Filter

The A39/12 Series offers continuous coalescing of all liquid and the security of hydrophobic membrane protection all in one unit

Fewer fittings required - reducing risk of leaks

More compact - no need for separate coalescers

Less maintenance and downtime as the membrane is fully protected from solids & liquids


Series A39/12 Coalescer Membrane Combination Filter

The Balston Coalescer Membrane Combination Filter is designed to remove entrained liquid and particulate in gas samples for a wide variety of applications, and thereby prevents contamination or damage to the analyzers and sample system components. Typically located upstream from the analyzer or component it is protecting, the Coalescer Membrane Combination provides protection even if other sample system components fail.


The Coalescer Membrane Combination offers the performance and protection of the A39/12 Series Membrane Filter with the additional benefits of coalescing liquids and entrapment of particulates, offering maximum protection of the membrane. There is no need for prefiltration which places more volume in the sample system, and requires more space for installation and more potential for leaks.

The A39/12 Series consists of a housing with a porous membrane filter, which is supported by a sintered porous disk located on the "outlet" side of the housing. Gas enters through the "inlet" port and is directed down through the coalescing filter. The coalescer traps all particulates and continuously drains liquid contaminants. The sample gas then flows upward to the upstream side of the membrane, and exits from the "outlet" port on the downstream side. Entrained liquid will not flow through the membrane, and will exit through the drain port on the downstream side of the coalescer.



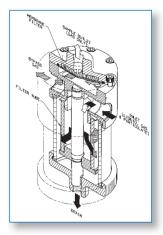

Series A39/12 Coalescer Membrane Combination Filter

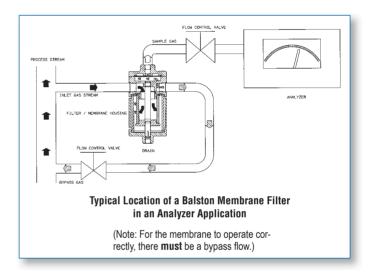

The Membrane

Microscopic pores contained within the membrane permit molecules of gas or vapor to flow through easily, allowing the composition of the sample gas to remain unchanged. Even the smallest liquid molecules remain trapped and are unable to flow through the membrane's small passages under normal operating conditions. This is due to the high surface tension which causes liquid molecules to bind tightly together to form a group of molecules, moving together, which is too large to fit through the pores of the membrane.

The membrane is extremely inert, and is recommended for most process liquid applications, with the exception of hydrofluoric acid. It is also recommended for use in systems designed for PPB, PPM, and "percent level" component concentrations, as a result of its very low absorption characteristics. The membrane is strong and durable, but also very soft and pliable.




A39/12 Series Coalescer: Membrane Combination Filters

How to Select the Membrane and Model

- 1. Determine the following application requirements:
 - A. Gas flow rate to the analyzer excluding the bypass flow.
 - B. Type of suspended liquid to be separated and amount normally present in the sample.
 - C. Gas sample supply pressure at Membrane Filter inlet.
- 2. Use Table 1 to select a Membrane Filter model and Membrane type which meet your application requirements. Note that the membrane differential pressure for the model and membrane type selected must be lower than the available gas sample supply pressure.

Selecting the Appropriate Type of Membrane

There are two basic types of membranes for the A39/12 Series Membrane Filters: The Model A39/12-0 (Standard) is suitable for separation of most liquids from gases. The Model A39/12-2 (High Flow) is best suited for the separation of water and other high surface-tension liquids from gases. A Pyrex bowl is available which offers full visibility of coalescing chamber.

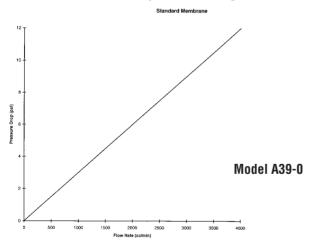

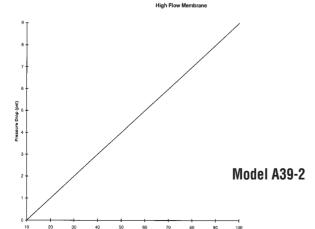


Table 1 Housing and Membrane Selection Guide		
Model	A39-0 Series	A39-2 Series
Membrane Type	Standard (1)	High Flow (2)
Max. Recommended Flow Rate in L/Min.	1.0 lpm (3)	70 lpm (3)
Normal Amount of Liquid Present in Gas	Low to Medium (4)	Low to Medium (4)

- 1 Standard membrane is suitable for most suspended liquids.
- 2 High flow membrane is suitable for suspended water, solutions consisting primarily or water, sulfuric acid, caustic, glycols, oily liquids, other high surface-tension type liquids.
- 3 Maximum recommended flow rate of gas through the membrane. Does not include the
- 4 Amount of liquid normally expected to be present in the sample gas: Low: aerosol or occasional droplets. Medium: continuous droplets. High: continuous flowing liquid.

Principal Specifications	
Model	A39/12 Series
Bypass Ports	1/2" NPT
Sample Port	1/4" NPT
Materials of Construction	
Housing	316 Stainless Steel (2)
O-rings	Viton (standard) Kalrez, Buna, EPDM (optional)
Maximum Operating Pressure	425 psig @ 200°F (100 psig @ 200°F with Pyrex bowl)
Maximum Temperature	212°F (100°C)
Maximum Flow Rate	
Standard Membrane	1 L/Min.
High Flow Membrane	70 L/Min.
Typical Membrane Pressure Drop	
Standard Membrane	1 psig per 250 cc/min. flow through membrane (1)
High Flow Membrane	1 psig per 20 liters/min. flow through the membrane (1)
Outside Dimensions	3.3"D x 7.3"L (8.4 cm X 18.5 cm)
Shipping Weight	7 lbs. (1.1 kg)

Notes:

- 1 Pressure Drops are for temperatures to 212°F (100°C).
- 2 Constructed of materials which comply with NACE Specification MR-01-75. Request certificate of compliance

Ordering Information	
Filter/Membrane Replacement Kits	A39/12X-0, A39/12X-2
39014	5 ea. Viton O-Rings and Membranes for A39/12-0
39015	5 ea. Viton O-Rings and Membranes for A39/12-2
39002	5 ea. Membranes for A39/12-0
39020	5 ea. Membranes for A39/12-2
150-12X	10 ea. Coalescing Filter Cartridges

Notes:

102

1 For Glass Bowl version order: A39/12G-_X-(0)-(2)

39 Series Membrane Filters

Ideal for protecting GCs, Mass Spectrometers, O₂ Analyzers, and Moisture Analyzers

Removes entrained water, submicron sulfuric acid aerosol, and ultra fine particulate

Much lower initial cost and operating costs than other membrane filters



39 Series


The 39 Series Membrane Filter

The 39 Series Membrane Filter consists of a housing with a porous membrane filter, which is supported by a sintered porous disk located on the "outlet" side of the housing. Gas enters through the "inlet" port on the upstream side of the membrane, and exits from the "outlet" port on the downstream side. Entrained liquid will not flow through the membrane, and will exit through the "bypass" port on the upstream side of the membrane, completely protecting sensitive instrumentation from moisture. Two models are available: The 39-0 (standard) and the 39-2 (high flow). The 39 Series is identical to other hydrophobic membranes offering the same performance and features but at a much lower price.

The Membrane

Microscopic pores contained within the membrane permit molecules of gas or vapor to flow through easily, allowing the composition of the sample gas to remain unchanged. Even the smallest liquid molecules remain trapped and are unable to flow through the membrane's small passages under normal operating conditions. This is due to the high surface tension which causes liquid molecules to bind tightly together to form a group of molecules, moving together, which is too large to fit through the pores of the membrane.

The membrane is extremely inert, and is recommended for most process liquid applications, with the exception of hydrofluoric acid. It is also recommended for use in systems designed for PPB, PPM, and "percent level" component concentrations, as a result of its very low absorption characteristics. The membrane is strong and durable, but also very soft and pliable.

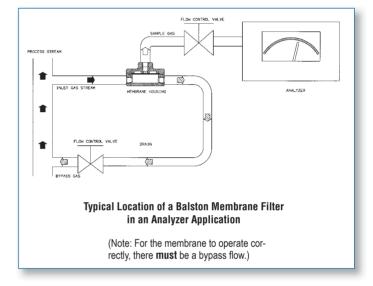




39 Series Membrane Filters: 1/4" Line Size

How to Select the Membrane and Model

- 1. Determine the following application requirements:
 - A. Gas flow rate to the analyzer excluding the bypass flow.
 - B. Type of suspended liquid to be separated and amount normally present in the sample.
 - C. Gas sample supply pressure at membrane filter inlet.
- 2. Use Table 1 to select a membrane filter model and membrane type which meet your application requirements. Note that the membrane differential pressure for the model and membrane type selected must be lower than the available gas sample supply pressure.

Selecting the Appropriate Type of Membrane

There are two basic types of membranes for the 39-2 Series Membrane Filters: The Model 39-0 (Standard) is suitable for separation of most liquids from gases. The Model 39-2 (High Flow) is best suited for the separation of water and other high surface-tension liquids from gases.

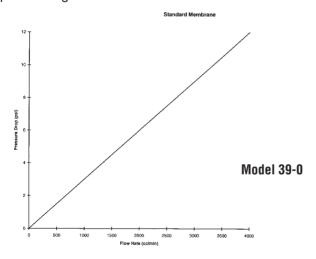

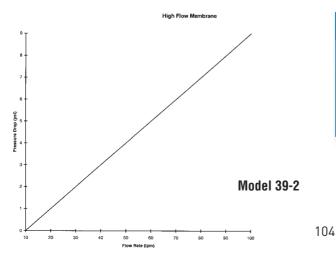


Table 1 Housing and Membrane Selection Guide						
Model	39-0	39-2 Series				
Membrane Type	Standard (1)	High Flow (2)				
Max. Recommended Flow Rate in L/Min.	1.0 lpm (3)	70 lpm (3)				
Normal Amount of Liquid Present in Gas	Low to Medium (4)	Low to Medium (4)				

Notes:

- 1 Standard membrane is suitable for most suspended liquids.
- 2 High flow membrane is suitable for suspended water, solutions consisting primarily of water, sulfuric acid, caustic, glycols, oily liquids, other high surface-tension type liquids.
- 3 Maximum recommended flow rate of gas through the membrane. Does not include the "bypass" flow rate.
- 4 Amount of liquid normally expected to be present in the sample gas: <u>Low</u>: aerosol or occasional droplets. <u>Medium</u>: continuous droplets. <u>High</u>: continuous flowing liquid.

Model	39 Series
Bypass Ports	1/2" NPT
Sample Port	1/4" NPT
Materials of Construction	
Housing	316 Stainless Steel (2)
O-rings	Viton (standard) Kalrez, Buna, EPDM (optional)
Maximum Operating Pressure	500 psig @ 200°F (100 psig @ 200°F with Pyrex bowl)
Maximum Temperature	212°F (100°C)
Maximum Flow Rate	
Standard Membrane	1 L/Min.
High Flow Membrane	70 L/Min.
Typical Membrane Pressure Drop	
Standard Membrane	1 psig per 250 cc/min. flow through membrane (1)
High Flow Membrane	1 psig per 20 liters/min. flow through the membrane (1)
Outside Dimensions	3.3"D x 2"L (8.4cm X 5.1cm)
Shipping Weight	3 lbs.

Notes:

- 1 Pressure Drops are for temperatures to 212°F (100°C).
- 2 Constructed of materials which comply with NACE Specification MR-01-75. Request certificate of compliance.

Ordering Information						
Filter/Membrane Replacement Kits	39-0, 39-2					
39014	5 ea. Viton O-Rings and Membranes for 39-0					
39015	5 ea. Viton O-Rings and Membranes for 39-2					
39002	5 ea. Membranes for 39-0					
39020	5 ea. Membranes for 39-2					

Fast Loop Filters: Filtration Efficiency from 100µm to 0.01µm

All 316 Stainless steel/Pyrex construction

Accepts Balston disposable microfibre filter cartridge and stainless steel cartridge

Compact design for fast response time

Process stream inlet/outlet ports and sample flow ports are identical, eliminating backup pressure in the system



Description

Balston fast loop filters are constructed of 316 stainless steel with an optional stainless steel bowl or pyrex bowl. This flow through design continuously flushes the filter cartridge carrying the contaminates back out to the process stream, thus maximizing the filter cartridge life. The low flow sample stream pulled into the analyzer is filtered to ranges of 100 micron to 0.01 micron (depending on the filtration efficiency required). Two designs are available. The T-type design is suitable for high flow, high volume applications. The In-line design is ideal for heavily contaminated applications.



Model 48S6

Operation

Axial velocity flushes the bulk contaminants through the filter housing back to the process stream. The sample stream passes through the filter cartridge wall with low flow and radial velocity. The clean side of the sample filter system has very low volume which minimizes lag time. A four to one flow rate is recommended to realize the benefits of prolonged filter cartridge life associated with continuous flushing.



Model 49S6



Fast Loop Filters: Filtration Efficiency from $100\mu m$ to $0.01\mu m$

Principal Specifications									
Model	31GCFL-1/4	31S6CFL-1/4	41GCFL-1/4	41S6CFL-1/4	48S6	49S6			
Inlet and Outlet Ports	1/4" NPT	1/4" NPT	1/4" NPT	1/4" NPT	1/4" NPT	1/2" NPT			
Drain Port	1/4" NPT	1/4" NPT	1/4" NPT	1/4" NPT	_	_			
Materials of Construction									
Head	316 SS	316 SS (2)	316 SS	316 SS (2)	316 SS (2)	316 SS (2)			
Bowl	Pyrex (1)	316SS (1)(2)	Pyrex (1)	316 SS (1)(2)	316 SS (1)(2)	316 SS (1)(2)			
Internals	316SS	316 SS (2)	316 SS	316 SS (2)	316 SS (2)	316 SS (2)			
Seals	Viton	Viton	Viton	Viton	Viton	Viton			
Maximum Temperature	160°F (71°C)	400°F (204°C)	160°F (71°C)	400°F (204°C)	400°F (204°C)	400°F (204°C)			
Maximum Pressure	100 psig (2)	425 psig (2)	100 psig (2)	250 psig (2)	5,000 psig (2)	1,500 psig (1)			
Shipping Weight	2 lbs/0.9 kg	3 lbs/1.4 kg	4 lbs/1.8 kg	5 lbs/2.3 kg	1.1 lbs/0.2 kg	2.5 lbs/0.4 kg			
Dimensions	2.2"D x 5.5"L (5.7cm x 14cm)	2.2"D x 5.5"L (5.7cm x 14cm)	2.2"D x 10"L (5.7cm x 25cm)	2.2"D x 10"L (5.7cm x 25cm)	1.35"D x 4"L (3.2cm x 10cm)	1.9"D x 7"L (4.8cm x 17.8cm)			

Notes:

² Constructed of materials which comply with NACE Specification MR-01-75. Request certificate of compliance.

Ordering Information	For Assistance, call toll-free at 1-800-343-4048 8AM to 5PM Eastern Time						
Filter Housing Model	31GCFL-1/4	31S6CFL-1/4	41GCFL-1/4	41S6CFL-1/4	48\$6	49S6	
Support Core, Required for Liquid Filtration	SS-100-12	SS-100-12	SS-100-25	SS-100-25	Included		
Filter Cartridges	100-12-🗆	100-12-🗆	100-25-🖵	100-25-□	050-11-□	100-185-🗆	
Use only these Filter types	X, H, Q, M	X, H, Q, M	X, H, Q, M	X, H, Q, M	X, H, Q, M	X, H, Q	



¹ Maximum pressure ratings are for temperatures to 200°F (104°C). Please consult factory for maximum pressure ratings at elevated temperatures.

Horizontally Mounted Sample Filter: Minimal Panel Space Required

Horizontal mounting minimizes space requirement on panel

All connections are made to the head eliminating the need to break the lines for filter changeouts

The only filter available that is mounted at an angle to ensure complete removal of all liquids

Includes cadmium plated steel mounting bracket



Model 47S6

Model 47S6

The Model 47S6 is designed to filter particulates and liquids from a gas sample, protecting on-line process analyzers from contamination. This unique design allows the filter to be mounted horizontally which minimizes the amount of space taken up on the panel.

It is also angled at 10° which ensures all collected liquids drain back to the drain port and not carried downstream to the analyzer. The drain port is drilled and tapped at an opposing angle eliminating the need to bend tubing.

Additionally, all connections (including the drain connection) are made to the head which eliminates the need to break the lines for filter changeouts.

This is an ideal filter for those applications requiring high efficiency filtration with the need for convenient filter changes on crowded panels.

Principal Specifications						
Model	47S6					
Inlet and Outlet Ports Drain Port Materials of Construction Seals Maximum Temperature Maximum Pressure Shipping Weight	1/4" NPT 1/4" NPT 316 SS (2) Viton 400°F (204°C) 1500 psig (1) 1lb. (0.4 kg)					
Dimensions	1.5"D X 3.7"L (4cm X 9cm)					

Ordering Information						
Filter Housing Model	47S6					
Filter Cartridges	050-11-□					
Use only these filter types	Q, H					
Support Core required for liquid filtration	Included					

- 1 1500 psig @ 200°F consult factory for pressure ratings at elevated temperatures.
- 2 Constructed of materials which comply with NACE Specification MR-01-75. Request certificate of compliance.



Application Notes



Balston Vacuum Pump Filters

Balston Vacuum Pump Exhaust Filters remove 99.9% of 0.1 micron oil mist and smoke particles. Balston Grade 30 Vacuum Pump Inlet Filters remove 90% of all 0.1 micron particles and droplets. Balston Grade 102 Vacuum Pump Inlet Filters prevent oil backstreaming from the pump to the evacuated chamber, and protect the pump from damage by submicron particles (at relatively low concentrations).

All Balston filters are available for hazardous and non-hazardous applications, and offer superior chemical and solvent resistance. Balston Vacuum Pump Filters increase productivity by eliminating costly shutdown time and maintenance.



Product Features:

- Exhaust filters eliminate oil mist and smoke from vacuum pump exhaust
- Prevent oil backstreaming
- Prevent oil accumulation in ductwork
- Protect vacuum pumps and reduce costly maintenance
- Easy to install and maintain

Small Scale Laboratory Vacuum Pumps

Specialized Vacuum Electronics Manufacturing

High Volume Vacuum for Process Packaging



Exhaust Filters for Hazardous/Corrosive Applications

Eliminate 99.9% oil mist and smoke from vacuum pump exhaust

Prevent oil accumulation in ductwork

Recover expensive lubricating oils, and automatically return filtered oil to pump

Eliminate potential OSHA and EPA violations



CV-0118

Balston Vacuum Pump Exhaust Filters

Balston Vacuum Pump Exhaust Filters remove all visible oil mist and smoke from vacuum pump exhaust, even when it is saturated with oil. The high efficiency filter cartridge continuously drains the collected liquid, allowing the user to recover expensive lubricating fluid.

How To Select The Filter

For most applications, simply select the filter assembly which has a flow capacity equal to or greater than the vacuum pump exhaust flow output (see chart on the next page). The Filter Assemblies are shipped with filter cartridges, and final filter pad. Optional adaptors are available for KF and NW connections.

Filter Selection Chart (for hazardous/corrosive applications)						
Max. Pump Flow Rate (CFM)	Recommended Filter Model Number					
3	CV-0112-371H					
9	CV-0118-371H					



Exhaust Filters for Hazardous/Corrosive Applications

Model	CV-0112-371H	CV-0118-371H
ort Size	1/2" NPT	3/4" NPT
Max. Flow Rate	3 CFM	9 CFM
Materials of Construction		
Head	_	
Bowl	304 SS	304 SS
Internals	304 SS	304 SS
Seals	None	None
Maximum Temperature	250°F (121°C)	250°F (121°C)
Maximum Pressure	15 psig	15 psig
Shipping Weight	0.5 lbs. (0.2 kg)	0.8 lbs. (0.4 kg)
Dimensions	2.9"Dia. X 4.2"H (7cm X 11cm)	4.0"Dia. X 5.3"H (10cm X 13cm)

Ordering Information							
For assistance, call toll-free at 1-800-343-4048 8AM to 5PM Eastern Time							
Model	CV-0112-371H (1)	CV-0118-371H (1)					
Number of Filter Cartridges Required	_	_					
Replacement Filter Cartridges							
Box of 3							
Box of 7							
Box of 10							
Number of Pressure Relief Retainers #20222	_	_					
Optional Accessories:		#11015 Back Pressure Gage, Stainless Steel, 0-15 psi rating,1/4" NPT fitting. Vacuum Pump-to-Filter Adaptors: Please refer to Pages 133 - 134.					

Notes

1 Filter cartridge is permanently sealed into housing. The entire unit is disposable. Pressure relief filter tube retainer not available in these models.



Exhaust Filters for Non-Hazardous/Non-Corrosive Applications

Eliminate 99% oil mist and smoke from vacuum pump exhaust

Prevent oil accumulation in ductwork

Recover expensive lubricating oils, and automatically return filtered oil to pump

Eliminate potential OSHA and EPA violations

Balston Vacuum Pump Exhaust Filters

Balston Vacuum Pump Exhaust Filters remove all visible oil mist and smoke from vacuum pump exhaust, even when it is saturated with oil. The high efficiency filter cartridge continuously drains the collected liquid, allowing the user to recover expensive lubricating fluid. Filters are available for pumps with flow ratings ranging from 3 to 850 cfm.

How To Select The Filter

For most applications, simply select the filter assembly which has a flow capacity equal to or greater than the vacuum pump exhaust flow output (see chart below). The filter assemblies are shipped with filter cartridges, pressure gage (20 cfm and larger), and final filter pad. Optional adaptors are available for KF and NW connections.

Filter Selection Chart (for non-hazardous/non-corrosive applications)						
Max. Pump Flow Rate (CFM)	Recommended Filter Model Number					
3	9955-12-371H, 9956-12-371H					
9	AR-009-371H					
15	AR-015-371H					
20	AR-0316-371H					
43	AR-0335-371H					
100	AR-0735-371H					
200	AR-0780-371H					
300	AR-1280-371H					
450	AR-1680-371H					
850	AR-3080-371H					





Exhaust Filters for Non-Hazardous/Non-Corrosive Applications

Model	PortSize	Max.Flow Rate	Materialsof Head	Constructio Bowl	n Internals	Max. Seals	Max. Temp.	Shipping Press.	Dimensions Wt.	
9955-12-371H	1/2"NPT	3CFM		Nylon	Nylon	None	250°F(121°C)	15PSIG	.25lbs(0.1kg)	2"Dia.X3.7"H
9956-12-371H	KF-16	3CFM		Nylon	Nylon	None	250°F(121°C)	15PSIG	.25lbs(0.1kg)	2"Dia.X3.7"H
AR-009-371H	3/4"NPT	9CFM	Aluminum	Aluminum	Alum./SS/Nylon	Viton	300°F(149°C)	15PSIG	1.0lbs((0.45kg)	3.95"Dia.X5.13"
AR-015-371H	3/4"NPT	15CFM	Aluminum	Aluminum	Alum./SS/Nylon	Viton	300°F(149°C)	15PSIG	1.25lbs(0.57kg)	3.95"Dia.X8.13"
AR-0316-371H	1"NPT	20CFM	Steel	Steel	Anod.Alum.	Buna/Neo	300°F(149°C)	15PSIG	8lbs(4kg)	7.4"Dia.X8.8"H
AR-0335-371H	11/2"NPT	43CFM	Steel	Steel	Anod.Alum.	Buna/Neo	300°F(149°C)	15PSIG	11lbs(5kg)	7.4"Dia.X15"H
AR-0735-371H	3"NPT	100CFM	Steel	Steel	Anod.Alum.	Buna/Neo	300°F(149°C)	15PSIG	17lbs(8kg)	10"Dia.X18"H
AR-0780-371H	3"NPT	200CFM	Steel	Steel	Anod.Alum.	Buna/Neo	300°F(149°C)	15PSIG	23lbs(10kg)	10"Dia.X28"H
AR-1280-371H	4"Flg.(1)	300CFM	Steel	Steel	Anod.Alum.	Buna/Neo	300°F(149°C)	15PSIG	90lbs(41kg)	19"Dia.X43"H(5
AR-1680-371H	4"Flg.(1)	450CFM	Steel	Steel	Anod.Alum.	Buna/Neo	300°F(149°C)	15PSIG	100lbs(45kg)	19"Dia.X43"H(5
AR-3080-371H	6"Flg.(1)	850CFM	Steel	Steel	Anod.Alum.	Buna/Neo	300°F(149°C)	15PSIG	150lbs(68kg)	23"Dia.X43"H(5

For assistance, call to	II-free at 1-800-343-4048 8	AM to 5PM Eastern Time				
Model	No. of Filter Cartridges Required				Cover (2) (Optional)	No. Pressure Relief Retainers #20222
9955-12-371H (3)	1	3/9955-12-371H	_	9955-12-371H		(4)
9956-12-371H (3)	1	3/9956-12-371H		9956-12-371H		(4)
AR-009-371H	1	2/BE200-168-371H (6)		BE200-168-371H		(4)
AR-015-371H	1	2/BE200-248-371H (6)		BE200-248-371H		(4)
AR-0316-371H	3	3/200-16-371H			19158	1
AR-0335-371H	3	3/200-35-371H			19158	1
AR-0735-371H	7		7/200-35-371H		19206	2
AR-0780-371H	7		7/200-80-371H		19206	2
AR-1280-371H	12			200-80-371H	Included	4
AR-1680-371H	16	_		200-80-371H	Included	4
AR-3080-371H	30	_	_	200-80-371H	Included	6
Optional Accessories:	#20217 Pressure Relief #11010 Pressure Gage, Vacuum pump-to-filter a #19291 Stand for AR-16 #19202 Weather Cap fo	Filter Cartridge Retainer, 4- Valve, 3-7 psig, 1/4" NPT m 0-15 psig, 1/4" male fitting (idaptors: refer to pages 133 80-371H, #19290 Stand for or AR-0735-371H, AR-0780- AR-009-371H, AR-015-371	ale fitting. incl. on Type AR Filte -134. AR-3080-371H. 371H.	r Assemblies)		

- 1 ANSI 150 lb. hole pattern.
- 2 Cover does not provide leak tight seal.
- 3 Filter cartridge is permanently sealed into housing. The entire unit is disposable.
- 4 Pressure relief filter tube retainer not available in these models.
- 5 Height dimension represents filter housing alone. When assembled with a stand, the height is adjustable from 46" to 56" (117cm to 142 cm).
- 6 This model comes in box of 2, not box of 3.



Inlet Filters for Vacuum Service to 10⁻⁶ Torr

Protect vacuum pumps from damage by solids and liquids

Prevent loss of valuable or hazardous materials

Prevent oil backstreaming



CF-0118-30

Model CF-0112 and CF-0118 for Vacuum Service to 10-6 Torr

Stainless steel housings with welded KF flange inlet and outlet ports and no drain ports. They are designed to be used primarily with the Grade 102 adsorbent cartridges for prevention of oil backstreaming (see cartridge selection chart to the right). They may also be used with Grade 30 cartridges for removal of high concentrations of solids, but the absence of drain ports precludes the use of CF housings for liquid removal in vacuum applications.

Filter Selection Chart	
Grade 30 Cartridges	For removal of relatively high concentrations of solids
Efficiency: Loss in pumping speed: Materials of construction: Maximum temperature:	90% at 0.1 micron 9% at maximum flow rate Polypropylene cartridge, EPR seals 180°F (82°C)
Grade 102 Cartridges	For prevention of oil backstreaming and filtration of relatively low concentrations of solids
Efficiency for preventing oil backstreaming: Life: vacuum	99.99% Approximately 1000 hours at 10 microns
Efficiency for solids filtration: Materials of construction: Maximum temperature:	99.99% at 0.1 micron Molecular Sieve Type 4A adsorbent, EPR seals 100°F (38°C)



Inlet Filters for Vacuum Service to 10⁻⁶ Torr

CF-0112	CF-0118
10 ⁻⁶ Torr	10 ⁻⁶ Torr
3 CFM	9 CFM
KF-25	KF-25
304 SS	304 SS
304 SS	304 SS
304 SS	304 SS
None	None
180°F (82°C) (1)	180°F (82°C) (1)
0.5 lbs. (0.2 kg)	0.8 lbs. (0.4 kg)
2.9"W X 4.4"L	3.9"W X 5.9"L (10cm X 15cm)
	KF-25 304 SS 304 SS 304 SS None 180°F (82°C) (1) 0.5 lbs. (0.2 kg)

- 1 Maximum temperature grade 102 Cartridge is 100°F (38°F).
- 2 Filter Cartridge is permanently sealed into housing. The entire unit is dispos-

Ordering Information		
For assistance, call toll-free at 1-80	0-343-4048 8AM to 5PM Eastern Time	
Assembly with Grade 30 Particulate Filter	Assembly with Grade 102 Backstreaming Filter	Number of Filter Cartridges Required (2)
CF-0112-30	CF-0112-102	N/A
CF-0118-30	CF-0118-102	N/A



Inlet Filters for Vacuum Service to 2 Torr

Protect vacuum pumps from damage by solids and liquids

Prevent loss of valuable or hazardous materials

Prevent oil backstreaming



Models CV-0112-30 and CV-0118-30 for hazardous/corrosive applications and low flow applications

Stainless steel housings with NPT inlet, outlet and drain ports. Used only with Grade 30 filter cartridges.

Models R-009-30 and R-015-30 for nonhazardous/non-corrosive applications and higher flow applications

Steel housing with NPT inlet, outlet and drain ports. Used only with Grade 30 filter cartridges.

Filter Selection Chart						
Grade 30 Cartridges	For removal of relatively high concentrations of solids and liquids					
Efficiency:	90% at 0.1 micron					
Loss in pumping speed:	9% at maximum flow rate					
Materials of construction:	Polypropylene cartridge, EPR seals					
Maximum temperature:	180°F (82°C)					



Inlet Filters for Vacuum Service to 2 Torr

Model	CV-0112-30	CV-0118-30	R-009-30	R-015-30
Recommended Vacuum Service	2 Torr	2 Torr	2 Torr	2 Torr
Max. Flow Rating of Vacuum Pump	3 CFM	9 CFM	9 CFM	15 CFM(1)
nlet and Outlet Ports	1/2" NPT	3/4" NPT	3/4" NPT	3/4" NPT
Drain Port	1/8" NPT (2)	1/8" NPT (2)	1/8" NPT (2)	1/8" NPT (2)
Materials of Construction				
Head	304 SS	304 SS	Aluminum	Aluminum
Bowl	304 SS	304 SS	Aluminum	Aluminum
Internals	304 SS	304 SS	Aluminum/SS/Nylon	Aluminum/SS/Nylon
Seals	None	None	Viton	Viton
Maximum Temperature	180°F (82°C)	180°F (82°C)	180°F (82°C)	180°F (82°C)
Shipping Weight	0.5 lbs. (0.2 kg)	0.8 lbs. (0.4 kg)	1.0 lbs. (0.45 kg)	1.25 lbs. (0.57 kg)
Dimensions	2.9"W X 4.4"L (7cm X 11cm)	3.9"W X 5.9"L (10cm X 15cm)	3.95"W X 5.13"L (10cm X 13cm)	3.95"W X 8.13"L (10cm X 21cm)

Ordering Information	Ordering Information							
For assistance, call toll-free at 1-800-343-4048 8AM to 5PM Eastern Time								
Assembly with Grade 30 Particulate Filter	Number of Filter Cartridges Required	Box of 2	Box of 10					
CV-0112-30	(3)							
CV-0118-30	(3)							
R-009-30	1	2/100-163-30	100-163-30					
R-015-30	1	2/100-235-30	100-235-30					

- 1 For higher flow capacity inlet filters, please consult factory.
- 2 Drain port must be downward for liquid removal.
- 3 Filter cartridge is permanently sealed into housing. The entire unit is disposable.



Recommended Exhaust Filters for Vacuum Pumps

Pump Model No.	Pump Rating CFM (Free Air)	Pump Exhaust (NPT Female Unless Otherwise Noted)	Recommended Balston Filter Non-Hazardous Non-Corrosive Applications	Balston Anodized Aluminum Pump-To- Filter Adaptor (1)	Recommended Balston Filter Hazardous and Corrosive Applications	Balston Stainless Steel Pump-To- Filter Adaptor (1)
Alcatel Pumps						
ZM/ZT 1004A/AC ZM/ZT 1012A ZM/ZT 1030 ZM/ZT 1033 ZT 1060 ZT 1063 ZT 1200A ZM/ZT 2004A ZM/ZT 2007 ZM/ZT 2008A/AC ZM/ZT 2012A/AC/H UM/UT 2020 ZM/ZT 2030/H ZM/ZT 2033/C ZT 2060/H/HUS ZT 2063/C ZT 2100A/AC 2002A 2005 2015 2021 2010 AMD1 AMD4 A100L	3.2 11 17 27 30 50 150 3.2 7 7 11 15.9 17 27 30 50 90 1.4 3.8 10.6 14.6 6.8 0.82 2.36 55.8	NW 25 NW 25 1" OD Tube NW 40 1.63" OD Tube NW 40 1.63" OD Tube NW 25 NW 25 NW 25 NW 25 NW 25 1" OD Tube NW 40 1.63" OD Tube NW 40 1.63" OD Tube NW 40 1.63" OD Tube NW 40 NW 50 DN16 DN25 DN25 DN25 DN25 DN25 DN16 DN16 DN25	R-009 R-015 AR-0316 AR-0335 AR-0335 AR-0735 AR-0780 R-009 R-009 R-009 R-015 R-015 AR-0316 AR-0335 AR-0735 AR-0735 AR-0735 R-015 R-015 R-015 R-015 R-015 R-015 R-015 R-0735 AR-0735 AR-0735 AR-0735 AR-0735 R-015	14175 14173 14174 14174 (2) 14173 14173 14173 14173 14174 14174 (2)	CV-0112 CV-0112 CV-0118 CV-0118 CV-0118 CV-0118 CV-0112 CV-0112 CV-0112 ACV-0735	14182 14182 14182 14182
Roots Vaccuum	Pumps					
RSV 151 RSV 301 RSV 601 RSV 1002 RSV 1200 LRS1 RSV 151B+RVP2033D RSV 301B+2033D RSV 301B+RVP 2063D LRS2 RSV 151+RVP 2021 RSV 601+RVP 2033 MRS1 RSV 301B+AMV 200/300 RSV 601B+AMV 200/300	89 177 354 594 ISO/DN160 106 212 212 106 424 212 212 424	ISO/DN63 ISO/DN63 ISO/DN100 ISO/DN100 DN40 DN40 DN40 DN40 DN25 DN40 DN50 DN40 DN40	AR-0735 AR-0780 AR-1680 ACV-0780(multiple) AR-0780 AR-1280 AR-1280 AR-1680 AR-1280 AR-1280 AR-1280 AR-1680			

Notes



¹ If no part number is listed, adaptor is not supplied by Parker. In most cases, customer can assemble adaptor from standard pipe fittings. Refer to pages 133-134.

² Requires 3" Male x 1 1/2" Female reducing bushing supplied by customer.

Recommended Exhaust Filters for Vacuum Pumps

Pump Model No.	Pump Rating CFM (Free Air)	Pump Exhaust (NPT Female Unless Otherwise Noted)	Recommended Balston Filter Non-Hazardous Non-Corrosive Applications	Balston Anodized Aluminum Pump-To- Filter Adaptor (1)	Recommended Balston Filter Hazardous and Corrosive Applications	Balston Stainless Steel Pump-To- Filter Adaptor (1)
Balzers Pumps	s					
UNO/DUO 1.5A	1.0	KF10	9955-12		CV-0112	
UNO/DUO 004A/B	2.7	KF25	9955-12	14175	CV-0112	14182
UNO/DUO 008A/B	5.2	KF25	R-009	14173	CV-0118	14182
UNO/DUO 012A	8.2	KF25	R-009	14173	CV-0118	14182
UNO/DUO 016B	10.6	KF25	R-015	14173		
UNO/DUO 030A	19.7	KF40	AR-0316	14174		
UNO/DUO 060A	39.3	KF40	AR-0335	14174		
UNO/DUO 250A	157	ISO 100	AR-0780			
UNO 100 DUO 100	56 57	32mm OD Tube (4)	AR-0735 AR-0735			
UNO/DUO 120A	57 75.3	32mm OD Tube (4) ISO 63	AR-0735 AR-0735			
UNO 170	91.2	32mm OD Tube (4)	AR-0735 AR-0735			
DUO 170	100	32mm OD Tube (4)	AR-0735 AR-0735			
BA 251	158.9	ISO 63	AR-0780			
BA 501	320.7	ISO 100	AR-1680			
UNO 2.5	1.7	DN16	9955-12, 9956-12		CV-0112	
UNO 6	3.5	G 3/8	R-009		CV-0118	
UNO 20	12.4	ISO-KF25	R-015			
UNO 60	36.5		AR-0735			
UNO 90	55.3	DN40	AR-0735			
UNO 200	123.6	DN	AR-1280			
UNO 240	158.9	DN	AR-1280			
UNO 400	270.7	DN63 ISO-F	AR-3080			
UNO 630	400.2	DN63 ISO-F	AR-3080			
DUO 5	3.5	DN16	R-009		CV-0118	
DUO 10	7	DN25	R-015		CV-0118	
DUO 20	14.1	DN25	R-015			
DUO 35	21.2	DN40	AR-0335			
DUO 65	41.2	DN100	AR-0735			
DUO 120	84.7	DN63	AR-0780			
DUO 250	176.6	DN100	AR-1280			
Beach-Russ Po	umps					
SS 1	6	3/4"	R-009		CV-0118	
SS 1 1/2	9	3/4"	R-009		CV-0118	
SS 2	15	3/4"	R-015			
SS 3	28	1"	AR-0335			
SS 4	45	1 1/4"	AR-0735			
SS 5	60	1 1/2"	AR-0735			
RP/RV 6	8.5	1/2"	R-009		CV-0118	
SS 6	75	1 1/2"	AR-0735			
SS 7	110	2"	AR-0780			
SS 8	150	2 1/2"	AR-0780			
SS 9	225	4"	AR-1280			
SS 10	375	6"	AR-1680			
RP/RV 12	18	3/4"	AR-0316			
RP 15	30	1 1/2"	AR-0335			
RP 15-6	30	1"	AR-0335			
RP 30	50	1 1/2"	AR-0735			
RP 30-6	50 80	1" 2"	AR-0735 AR-0735			
RP 50/50-6						

Notes:

⁶ Multiple filters piped in parallel are required.



119 www.balstonfilters.com

 $^{3 \ \}text{Requires 2"} \ \text{Male x 1 1/2"} \ \text{Female reducing bushing supplied by customer.}$

⁴ Exhaust port is horizontal. Customer should provide elbow so that filter is mounted vertically.

⁵ Requires 1" Male x 1 1/2" Female bushing supplied by customer.

Recommended Exhaust Filters for Vacuum Pumps

		Recommended		Recommended			
Pump	Pump Rating CFM	Pump Exhaust (NPT Female Unless Otherwise	Balston Filter Non-Hazardous Non-Corrosive	Balston Anodized Aluminum Pump-To-	Balston Filter Hazardous and Corrosive	Balston Stainless Steel Pump-To-	
Model No.	(Free Air)	Noted)	Applications Filter Adaptor (1)		Applications	Filter Adaptor (1)	
Beach-Russ P	umps						
RP 135/135-12	140	3"	AR-0780				
RP-150/150-12	175	3"	AR-0780				
RP 250	310	5"	AR-1280				
RP 250-12	310	4"	AR-1280				
RP 325	375	5"	AR-1680				
RP 325-12	375	4"	AR-1680				
RP 375	500	6"	AR-3080				
RP 375-50	500	4"	AR-3080				
RP 750	900	8"	AR-1680 (2)				
RP 750-50	900	5"	AR-1680 (2)				
RP 1000	1100	8"	AR-3080 (2)				
RP 1000-50	1100	5"	AR-3080 (2)				
84-A-RVF	250		AR1280				
98-A-RVF	410		AR1680				
14	8.5	4"	R-009		CV-0118		
20	12	4"	R-015				
25	17	4"	AR-0316				
42	25	4"	AR-0335				
60	38	4"	AR-0335				
82	49	4"	AR-0735				
128	75	4"	AR-0735				
170	103	4"	AR-0780				
240	141	4"	AR-0780				
320	189	4"	AR-0780				
480	285	4"	AR1280				
642	378	4"	AR1680				
910	540	4"	AR-3080				
1210	710	4"	AR-3080				
OTL/VP30	50	1.5"	AR-0735				
OTL/VP50	80	2"	AR-0735				
OTL/VP135	140	3"	AR-0780				
OTL/VP150	175	3"	AR-0780				
OTL/VP250	310	5"	AR-1680				
OTL/VP325	375	5"	AR-1680				
3P	48	1.5"	AR-0735				
4P	73	1.5"	AR-0735				
5P	100	2.5"	AR-0780				
6P	125	2.5"	AR-0780				
7P	175	3"	AR-0780				
8P	225	3"	AR-1280				
9P	300	4"	AR-1280				
0	1	1/4"	9955-12, 9956-12		CV-0112		
1	2	1/4"	9955-12, 9956-12		CV-0112		
•	_	11-1	0000 12, 0000-12		3 7 0 1 1 2		

Notes



¹ If no part number is listed, adaptor is not supplied by Parker. In most cases, customer can assemble adaptor from standard pipe fittings. Refer to pages 133-134.

² Multiple filters piped in parallel are required.

Vacuum Pump Filters

Vacuum Pump Inlet & Exhaust Filters

Recommended Exhaust Filters for Vacuum Pumps

Pump Model No.	Pump Rating CFM (Free Air)	Pump Exhaust (NPT Female Unless Otherwise Noted)	Recommended Balston Filter Non-Hazardous Non-Corrosive Applications	Balston Anodized Aluminum Pump-To- Filter Adaptor (1)	Recommended Balston Filter Hazardous and Corrosive Applications	Balston Stainless Steel Pump-To- Filter Adaptor (1)
Busch Pumps						
002-192	1.4	KF-16	9956-12		CV-0112	14181
004-192	2.8	KF-16	9956-12		CV-0112	14181
008-192	5.6	KF-16	R-009	14172	CV-0118	14181 (4)
010-112/118	6	3/4"	R-009	17112	CV-0118	14101 (4)
016-192	11.2	KF-16	R-015	14180	04-0110	
016-112/118	8	3/4" (3)	R-009	11100	CV-0118	
021-336/338	15	3/4" (3)	R-015		0 0 0 1 1 0	
025-132/138	20	1 1/4" (3)	AR-0316			
040-132/138	28	1 1/4" (3)	AR-0335			
063-132/138	41	1 1/4" (3)	AR-0335			
110-132/138	63		AR-0735			
160-112/118/132/138	117	1 1/4" (3) 2" (3)	AR-0780			
216-002	125	2"	AR-0780 AR-0780			
216-002 225-002	200	2"	AR-0780 AR-0780			
225-002 240-002	300	2"				
			AR-1280			
250-112/118/132/138 263-002	174 500	2" (3)	AR-0780			
		2"	AR-3080			
400-212/218	300	2"	AR-1280			
630-212/218	430	3" (3)	AR-1680			
1000-212/228	650	6" (3)	AR-3080			
1600-212/228	1100	6" (3)	AR-3080 (2)			
429	125	2"	AR-0780			
433	200	2"	AR-0780			
437	310	2"	AR-1280			
141	580	2"	AR-3080			
145	780	6" (3)	AR-3080			
0004	3.3	3/8"	R-009		CV-0118	
0006	4.2	3/8"	R-009		CV-0118	
0012	7.1	3/4"	R-009		CV-0118	
0016	11.2	3/4"	R-015			
0100	63	3/4"	AR-0735			
0165	117	2"	AR-0780			
0205	141	2"	AR-0780			
0255	180	2"	AR-0780			
0305	212	2"	AR-1280			
0400	330	3"	AR-1680			
0502	413	3"	AR-1680			
0630	490	3"	AR-3080			
1000	704	6"(ASA)	AR-3080			
1600	1130	6(ASA)	AR-3080(2)			
HO 0429	113	2"	AR-0780			
HO 0433	176	2"	AR-0780			
HO 0437	282	3"	AR-1280			
HO 0441	444	3"	AR-1680			
LC 0030	20.6	G1	AR-0335			
LC0060	38.3	G1	AR-0335			
LC0080	54.1	DIN40	AR-0735			
LC0110	74.7	DIN40	AR-0735			
LC0150	100	DIN40	AR-0735			
LC0220	153	DIN50	AR-0780			
	100	211100	, 11 (0) 0 0			
LC0280	200	DIN65	AR-0780			

⁴ Requires 3/4 Male x 1/2 Female reducing bushing supplied by customer.



¹ If no part number is listed, adaptor is not supplied by Parker. In most cases, customer can assemble adaptor from standard pipe fittings. Refer to pages 133-134.

² Multiple filters piped in parallel are required.

³ Requires flange to NPT adaptor from pump manufacturer.

Recommended Exhaust Filters for Vacuum Pumps

Pump Model No.	Pump Rating CFM (Free Air)	Pump Exhaust (NPT Female Unless Otherwise Noted)	Recommended Balston Filter Non-Hazardous Non-Corrosive Applications	Balston Anodized Aluminum Pump-To- Filter Adaptor (1)	Recommended Balston Filter Hazardous and Corrosive Applications	Balston Stainless Steel Pump-To- Filter Adaptor (1)
Central Scientif	ic Pumps	s (Cenco, Boekel,	HYVAC)			
HYVAC 1 (91105)	0.35	3/8"	9955-12		CV-0112	
HYVAC 2 (91305/8)	0.88	1/2"	9955-12		CV-0112	
HYVAC 4 (91482)	1.70	1/2"	9955-12		CV-0112	
HYVAC 7	2.79	1/2"	9955-12		CV-0112	
(91506, 91502)						
HYVAC 7S (91138)	2.79	1/2"	9955-12		CV-0112	
HYVAC 14 (91705)	5.6	3/4"	R-009		CV-0118	
HYVAC 14S (91140)	5.6	3/4"	R-009		CV-0118	
HYVAC 28 (91905)	10.6	1 1/2"	R-015			
HYVAC 28S (91142)	10.6	1 1/2"	R-015			
HYVAC 45 (91955)	17.7	1 1/2"	AR-0316			
HYVAC 150 (91957)	53	3"	AR-0735			
HYVAC 300 (91960)	106	3"	AR-0780			
MEGAVAC (92003) PRESSOVAC	2.0	1/2"	9955-12		CV-0112	
(90510/15/16)	1.23	3.8" OD Tube	9955-12		CV-0112	
DIRECT DRIVE (90703)	1.9	3/8"	9955-12		CV-0112	
DIRECT DRIVE (90700)	1.06	3/8"	9955-12		CV-0112	
2120	4.4	KF25	R-009		CV-0118	
2200	7.3	KF25	R-009		CV-0118	
HYPERVAC400	13.4	NW25	R-015			
HYPERVAC600	21	NW25	AR-0335			
HYPERVAC1000	32	NW40	AR-0335			
HYPERVAC1500	53	NW40	AR-0735			
HYVAC30L	1.1		9955-12, 9956-12		CV-0112	
HYVAC50L	2		9955-12, 9956-12		CV-0112	
PRESSOVAC(90510)	1.2	5/8"	9955-12, 9956-12		CV-0112	
MEGAVAC92001	2	1/2"	9955-12, 9956-12		CV-0112	
MEGAVAC1500	50	PORTS ADAPTABLE	AR-0735			
MEGAVAC2500	88	PORTS ADAPTABLE	AR-0735			
MEGAVAC4500	150	PORTS ADAPTABLE	AR-0780			
MEGAVAC7500	250	PORTS ADAPTABLE	AR-1280			
MEGAVAC15000	300	PORTS ADAPTABLE	AR-1280			
SUPRVAC012	7.5	1/2" FNPT	R-009		CV-0118	
SUPRVAC021	15	1/2" FNPT	R-015			
SUPRVAC025	20	1"	AR-0335			
SUPRVAC040	30	1"	AR-0335			
SUPRVAC063	45	1"	AR-0735			
SUPRVAC100	70	1"	AR-0735			
SUPRVAC160	110	2"	AR-0780			
SUPRVAC250	150	2"	AR-0780			
0505	9.5	1"	R-015			
1505	19	1"	AR-0316			
2010	27	1"	AR-0335			
7530	59	2"	AR-0735			
10030	84	2"	AR-0735			

Notes

- 1 If no part number is listed, adaptor is not supplied by Parker. In most cases, customer can assemble adaptor from standard pipe fittings. Refer to pages 133-134.
- 2 Exhaust port is horizontal. Customer should provide elbow so that filter is mounted vertically.
- 3 Multiple filters piped in parallel are required
- 4 Reducing bushing required. Customer to provide.



Recommended Exhaust Filters for Vacuum Pumps

Pump Model No.	Pump Rating CFM (Free Air)	Pump Exhaust (NPT Female Unless Otherwise Noted)	Recommended Balston Filter Non-Hazardous Non-Corrosive Applications	Balston Anodized Aluminum Pump-To- Filter Adaptor (1)	Recommended Balston Filter Hazardous and Corrosive Applications	Balston Stainless Steel Pump-To- Filter Adaptor (1)
Edwards Hig	h Vacuum I	Pumps				
SPEEDIVAC 2	1.9	3/8 BSPT	9955-12	14157	CV-0112	
E2M1	1.3	3/8 BSPT	9955-12	14157	CV-0112	
E2M2	2	3/4 BSPT	9955-12	14158	CV-0112	
E1/E2M5	4	3/4 BSPT	R-009	14159	CV-0118	
EDM6	5	1/2"	R-009	444=0	CV-0118	
E1/E2M8	6.7	3/4 BSPT	R-009	14159	CV-0118	
EDM12	10.3	1/2"	R-015			
E1/E2M18 EDM20	14.7 14.5	3/4" 1/2"	R-015 R-015			
E2M30	30	KF25	AR-0335	14183		
E1/E2M40	30	KF25	AR-0335 AR-0335	14183		
ED/ES 50	3.5	1/4"	R-009	14100	CV-0118	
ED/ES 50 ED/ES65	2.3	1/4" (2)	9955-12		CV-0110	
E1/E2M80	57	KF25	AR-0735	14183 (4)	0 0 0 112	
ED/ES100	3.5	1/4" (2)	R-009	11100 (1)	CV-0118	
E1/E2M175	125	1 1/2"	AR-0780		0.0	
ED/ES200	6.7	3/8" (2)	R-009		CV-0118	
E1/E2M275	145	1 1/2"	AR-0780			
ES330	11.8	3/8" (2)	R-015			
SC 450	19.6	1/2"	AR-0316			
ED 500	17.7	1/2"	AR-0316			
ED660	23.3	1/2" (2)	AR-0335			
ISC 900	39.2	3/4"	AR-0335			
ES2000	71	1 1/2"	AR-0735			
ES4000	145	1 1/2"	AR-0780			
ES7500	275	2 1/2"	AR-1280	4.00		
RV3	2.7	3/4"	9955-12	(4)	CV-0112	(4)
RV5 RV8	4.1	NW25	R-009	14173	CV-0118	14182
RV8 RV12	6.9 10.0	NW25 NW25	R-009 R-015	14173 14173	CV-0118	14182
RV 12	10.0	INVVZO	R-015	14173		
Gast Pumps						
0211	1.1	1/4"	9955-12		CV-0112	
0240	1.9	1/4"	9955-12		CV-0112	
0322	2.5	1/4"	9955-12		CV-0112	
0440	4.0	1/4"	R-009		CV-0118	
0465	4.0	3/8"	R-009		CV-0118	
0522 0740	4.0	1/4"	R-009		CV-0118 CV-0118	
0740 0765	5.9 5.9	3/8" 3/8"	R-009 R-009		CV-0118 CV-0118	
0765 0822	5.9 7.2	3/8"	R-009		CV-0118	
1022	10.0	3/8"	R-009 R-015		GV-0110	
1065	8.3	1/2"	R-009		CV-0118	
1550	11.5	1/2"	R-015		010110	
2065	17.0	3/4"	AR-0316			
2067	17.0	3/4"	AR-0316			
2565	21.0	3/4"	AR-0335			
3040	31.0	1"	AR-0335			
4565	48.0	3/4"	AR-0735			
5565	55.0	1"	AR-0735			

¹ If no part number is listed, adaptor is not supplied by Parker. In most cases, customer can assemble adaptor from standard pipe fittings. Refer to pages 133-134.

² Exhaust port is horizontal. Customer should provide elbow so that filter is mounted vertically.

³ Multiple filters piped in parallel are required

⁴ Reducing bushing required. Customer to provide.

Recommended Exhaust Filters for Vacuum Pumps

Pump Model No.	Pump Rating CFM (Free Air)	Pump Exhaust (NPT Female Unless Otherwise Noted)	Recommended Balston Filter Non-Hazardous Non-Corrosive Applications	Balston Anodized Aluminum Pump-To- Filter Adaptor (1)	Recommended Balston Filter Hazardous and Corrosive Applications	Balston Stainless Steel Pump-To- Filter Adaptor (1)
Gast Pumps						
4BA-1-G482X 4AB-1-G482X 4BA-1-G499 4BA-1-G511X 4BA-1-G538X 5BA-1-G482X 5AB-1-G482X 5AB-1-G482X 5AB-1-G482X 6BA-1-G535X 6AB-1-G506X 7AB-1-G506X 8AB-G506X 1531 0532 1032 1532 2032 3032 0211 2070 0323-1423 0533 1033 1034 1534 0240-0740 0456 0765 1550 1065-2565 2067-2567 3040 4565 5565	1.8 1.8 1.8 1.8 1.8 1.8 1.8 3.5 3.5 3.5 3.5 7.0 7.0 10.6 10.6 14.1 14.1 1.5 0.6 1.1 1.5 2.5 2.6 1.3 20 13 0.6 1.1 1.6 2.2 6 4 6 14.5 8.5-21 17-21 40 47.5 55	1/2" 1/2" 1/2" 1/2" 1/2" 1/2" 1/2" 1/2"	9955-12 9955-12 9955-12 9955-12 9955-12 9955-12 9955-12 R-009 R-009 R-009 R-015 R-015 R-015 R-015 R-015 9955-12, 9956-12 R-009 R-009 R-009 R-009 R-015 AR-0335 AR-0335 AR-0335 AR-0335 AR-0335 AR-0735		CV-0112 CV-0112 CV-0112 CV-0112 CV-0112 CV-0112 CV-0118 CV-0118 CV-0118 CV-0112 CV-0112 CV-0112 CV-0112 CV-0112 CV-0112 CV-0112 CV-0112 CV-0112 CV-01118 CV-01118 CV-01118 CV-01118 CV-01118 CV-01118 CV-01118	
6066 1290	55 112	1" 1"	AR-0735 AR-0780			
Hitachi Pumps						
SVF 10F SVR 16F 100 VPS 160 VPD/VPS 16 VP 3 VPC 4 VPC	3.6 5.7 3.6 5.7 5.7 1.8 3.5	M24 x 1 M24 x 1 M24 x 1 M24 x 1 M24 x 1 M14 x 1 M14 x 1	R-009 R-009 R-009 R-009 R-009 9955-12 R-009	14168 14168 14168 14168 14168	CV-0118 CV-0118 CV-0118 CV-0118 CV-0118 CV-0112 CV-01118	

Notes



¹ If no part number is listed, adaptor is not supplied by Parker. In most cases, customer can assemble adaptor from standard pipe fittings. Refer to pages 133-134.

² Multiple filters piped in parallel are required.

Recommended Exhaust Filters for Vacuum Pumps

Pump Model No.	Pump Rating CFM (Free Air)	Pump Exhaust (NPT Female Unless Otherwise Noted)	Recommended Balston Filter Non-Hazardous Non-Corrosive Applications	Balston Anodized Aluminum Pump-To- Filter Adaptor (1)	Recommended Balston Filter Hazardous and Corrosive Applications	Balston Stainless Steel Pump-To- Filter Adaptor (1)
Ingersoll-Rand	d Pumps					
AV/AVX2 BV/BVX2 V23A/V23AX7 V235/V235X1 V244/V244X2 V255/V255X3 V255X5 7V/7VX5 15V/15VX7 20VX10 20V/20VX15 15VD7.5 20VX15 2V235D1.5 2-V244D2 2-V255031D5 2-7E7.5 2-15VE7.5 2-20VA15 2-20VA20 255	2.7 5.4 9 18 32 60 60 99 133 214 294 132 214 36 36 120 198 264 428 588 60	3/8" 3/8" 3/4" 1" 1 1/4" 1 1/2" 1 1/2" 2 1/2" 2 1/2" 2 1/2" 2 1/2" 3 1/5"	9955-12 R-009 R-009 AR-0316 AR-0335 AR-0735 AR-0735 AR-0780 AR-1280 AR-1280 AR-1280 AR-0335 AR-0335 AR-0780 AR-1280 AR-0335 AR-0780 AR-1280 AR-0335 AR-0780 AR-0780 AR-0780 AR-0780 AR-0780 AR-0780 AR-0780 AR-0780 AR-1280 AR-0780 AR-1280 AR-0780		CV-0112 CV-0118 CV-0118	
ITT Pneumoti	ve (Leiman	Brothers)				
B C 29-3J 195-2 C-3 30-3 C-6 29-6J 30-6 100 100J 107/107J	10 18 20 20 22 35 37 50 60 112 125 200	3/4" 1" 3/4" 1" 1" 1 1/2" 1 1/2" 1 1/2" 1 1/2" 1 1/2" 1 1/2" 3'	R-015 AR-0316 AR-0316 AR-0316 AR-0335 AR-0335 AR-0735 AR-0735 AR-0780 AR-0780			



¹ If no part number is listed, adaptor is not supplied by Parker. In most cases, customer can assemble adaptor from standard pipe fittings. Refer to pages 133-134.

² Multiple filters piped in parallel are required.

Recommended Exhaust Filters for Vacuum Pumps

Pump Model No.	Pump Rating CFM (Free Air)	Pump Exhaust (NPT Female Unless Otherwise Noted)	Recommended Balston Filter Non-Hazardous Non-Corrosive Applications	Balston Anodized Aluminum Pump-To- Filter Adaptor (1)	Recommended Balston Filter Hazardous and Corrosive Applications	Balston Stainless Steel Pump-To- Filter Adaptor (1)
Kinney Pumps						
KC/KVS/KVC-2 KC/KVC-3 KC-5 KVC-6 KC-8 KS-13 TCS-14 KC-15 KS-15 KTC-21 TCS-21 TCS-21 KD-30 TCS-35 KD-50 TCS-55 KTC-60 KDH-65 TCS-70 KDH-80 TCS-90 KTC-112 KDH-130 KDH-150 KT-150 KT-150 KT-500 KT-500 KT-500 KT-500 KT-500 KT-500 KT-500 KT-500 KT-505LP KT-505LP KT-840FP KT-135VFP	2 3 5 5.8 8 13 14 15 15 21 21 21 33 30 52 54 60 69 71 83 88 107 134 165 144 221 296 494 778 100 162 300 490 780	3/4" 3/4" 3/4" 3/4" 1 1/4" 1 1/4" 1 1/4" 1 1/4" 1 1/4" 1 1/4" 1 1/2" 1 1/2" 1 1/2" 2" 2" (2) 2" 2" 2" (2) 3" (2) 3" (2) 3" (2) 3" (2) 4" Flange 2" 2" 2" 3" 4" 5"	9955-12 9955-12 R-009 R-009 R-009 R-015 R-015 R-015 R-015 R-015 AR-0335 AR-0335 AR-0335 AR-0735 AR-0780 AR-1280 AR-1280 AR-1280 AR-3080 AR-3080 AR-3080 AR-3080 AR-3080 AR-3080 AR-3080	14174	CV-0112 CV-0118 CV-0118	
10301 10302 10305/01131 10307/01133 10310/02131 02133 03131/03231 04231/04131 03133/03233 04133/04233 05131/05231 06231/05133/05233 07231 06233/08231 07233 08233/09231 09233	2 2 5 7.5 10 15 20 30 30 50 75 100 125 150 200 250 350	1/2" 1/2" 3/4" 1" 3/4" 1 1/4" 1 1/4" 1 1/4" 1 1/4" 2" 2" 3" 3" 3" 3" 3"	9955-12 9955-12 R-009 R-009 R-015 R-015 AR-0316 AR-0335 AR-0735 AR-0735 AR-0735 AR-0736 AR-0780 AR-0780 AR-1280 AR-1280 AR-1680		CV-0112 CV-0112 CV-0118 CV-0118	

¹ If no part number is listed, adaptor is not supplied by Parker.In most cases, customer can assemble adaptor from standard pipe fittings. Refer to pages 133-134.

² Exhaust port is horizontal. Customer should provide elbow so that filter is mounted vertically.

³ Multiple filters piped in parallel are required.

Recommended Exhaust Filters for Vacuum Pumps

Pump Model No.	Pump Rating CFM (Free Air)	Pump Exhaust (NPT Female Unless Otherwise Noted)	Recommended Balston Filter Non-Hazardous Non-Corrosive Applications	Balston Anodized Aluminum Pump-To- Filter Adaptor (1)	Recommended Balston Filter Hazardous and Corrosive Applications	Balston Stainless Steel Pump-To- Filter Adaptor (1)
Leybold Hei	raeus Pumps					
D/S 2A	2.2	KF 16	9956-12	444=0	CV-0112	14181
D/S 4A	4.5	KF 16	R-009	14172	CV-0118	14181 (3)
D/S 8A	7.0	KF 25	R-009	14173	CV-0118	14182
D 4B	3.4	KF 16	R-009	14172	CV-0118	14181 (3)
D 8B	6.9	KF 16	R-009	14172	CV-0118	14181 (3)
D/S 16A	14.1	KF 25 KF 25	R-015	14173		
D25	20		AR-0316	14173		
D/S 30A	26.8 30	KF 40 1 1/4"	AR-0335	14178		
SV 40	30 32	1 1/4" KF 50	AR-0335 AR-0335			
DK 50 D/S 60A	32 36.7	KF 50 KF 40	AR-0335 AR-0335	14178		
D/S 60A D 65	36.7 53	KF 40 KF 40	AR-0335 AR-0735	14178		
SV 65	53 45	1 1/4"	AR-0735 AR-0335	14174 (4)		
5 V 65 E 75	45 49	KF 50	AR-0335 AR-0735			
E 75 D/S 90A	49 55	KF 40	AR-0735 AR-0735	14174 (4)		
DK 100	65	KF 40 KF 50	AR-0735	14174 (4)		
SV 100	70	2"	AR-0735			
E 150	94	KF 50	AR-0735			
SV 180	125	2"	AR-0780			
DK 200	130	3" ASA Flange	AR-0780			
E 250	162	3" ASA Flange	AR-0780			
SV 280	200	2"	AR-0780			
SV 500	318	3"	AR-1280			
SV 580	339	3"	AR-1680			
D25BCS	20	v	AR-0316			
D40BCS	32.5		AR-0335			
D65BCS	53		AR-0735			
D25B	20.9		AR-0335			
SV16B	11.2		AR-0316			
SV25B	18.3	1/2" NPT	AR-0136			
SV65B	41.8		AR-0335			
SV100B	68.9		AR-0735			
SV200	129.5		AR-0780			
SV300	200	2" BSP	AR-0780			
SV500	336		AR-1680			
SV630	494.8		AR-3080			
SV1200	677		AR-3080			
SP250	177		AR-0780			
SP630	371		AR-1680			
SV40B	31.2		AR-0335			
D10E	9.3		R-015			



¹ If no part number is listed, adaptor is not supplied by Parker. In most cases, customer can assemble adaptor from standard pipe fittings. Refer to pages 133-134.

² Requires 2" Male x 1 1/2" Female reducing bushing supplied by customer.

³ Requires 3/4" Male x 1/2" Female reducing bushing supplied by customer.

⁴ Requires 3" Male x 1 1/2" Female reducing bushing supplied by customer.

⁵ Requires Multiple Filters piped in parallel.

Recommended Exhaust Filters for Vacuum Pumps

Pump Model No.	Pump Rating CFM (Free Air)	Pump Exhaust (NPT Female Unless Otherwise Noted)	Recommended Balston Filter Non-Hazardous Non-Corrosive Applications	Balston Anodized Aluminum Pump-To- Filter Adaptor (1)	Recommended Balston Filter Hazardous and Corrosive Applications	Balston Stainless Steel Pump-To- Filter Adaptor (1)
Marvac Pumps						
A-1 A-2 A-10 A-20 A-222 B-2 B-3 B-6 B-20 B-30 B-222 R-10 R-20 R-22 R-55	1.06 1.06 1.6 1.6 3.5 2.65 5.5 20 3.53 8.8 7 1.5 1.5 2.65 5.5	3/8" 3/8" 3/8" 1/2" 1/2" 1/2" 3/4" 1 1/4" 1/2" 1" 3/4" 3/8" 3/8" 3/8"	9955-12 9955-12 9955-12 9955-12 R-009 9955-12 R-009 AR-0316 R-009 R-009 R-009 9955-12 9955-12 9955-12 R-009		CV-0112 CV-0112 CV-0112 CV-0118 CV-0118 CV-0118 CV-0118 CV-0118 CV-0118 CV-0112 CV-0112 CV-0112 CV-0112	
Maxima Pumps (F	isher Scient	ific)				
D2A (01-057-2A) D4A (01-057-4A) D8A (01-057-8A) D16A (01-057-16A) D30A (01-057-30A) D60A (01-057-60A) D90A (01-057-90A) M4C M6C M8C	2.2 4.5 7.0 14.1 26.8 36.7 55 2.6 3.4 6.1	KF 16 KF 16 KF 25 KF 25 KF 40 KF 40	9956-12 R-009 R-009 AR-0316 AR-0335 AR-0735 9955-12, 9956-12 R-009 R-009	14172 14173 14173 14174 14174 (4)	CV-0112 CV-0118 CV-0118 CV-0112 CV-0118 CV-0118	14181 14181 (3) 14182
Precision Scien	tific Pumps	•				
DD-20 D-25 S/PV-35 DD-50 D-75 DD-90 DD-100 D-150 DD/DDC-195 S/D-300 DD/DDC 310 DD/DDC 310 DD/DDC 475 S/D-500 S/D-1000 S/D-1500	0.7 0.9 1.25 1.77 2.7 3.2 3.54 5.3 7 10.6 11 17 17.6 35.3 53	3/4" 3/4" 3/4" 3/4" 3/4" 3/4" 3/4" 3/4"	9955-12 9955-12 9955-12 9955-12 9955-12 R-009 R-009 R-009 R-015 R-015 AR-0316 AR-0316 AR-0335 AR-0735		CV-0112 CV-0112 CV-0112 CV-0112 CV-0118 CV-0118 CV-0118 CV-0118	

Notes

- 1 If no part number is listed, adaptor is not supplied by Parker. In most cases, customer can assemble adaptor from standard pipe fittings. Refer to pages 133-134.
- 2 Multiple filters piped in parallel are required.
- 3 Requires 1 1/2" Male x 1" Female reducing bushing supplied by customer.
- 4 Requires 3" Male x 1 1/2" Female reducing bushing supplied by customer.
- 5 Requires 2" Male x 1 1/2" Female reducing bushing supplied by customer.



Recommended Exhaust Filters for Vacuum Pumps

Pump Model No.	Pump Rating CFM (Free Air)	Pump Exhaust (NPT Female Unless Otherwise Noted)	Recommended Balston Filter Non-Hazardous Non-Corrosive Applications	Balston Anodized Aluminum Pump-To- Filter Adaptor (1)	Recommended Balston Filter Hazardous and Corrosive Applications	Balston Stainless Steel Pump-To- Filter Adaptor (1)
Quincy Pum	ıps					
QSVB-10	79	1 1/4"	AR-0735			
QSVB-20	134	1 1/4"	AR-0780			
QSVI-20	159 315	2 1/2" 2 1/2"	AR-0780			
QSVI-40 QV75	8.5	.5" NPT	AR-1280 R-009		CV-0118	
QV75 QV-1	12	.5" NPT	R-015		CV-0110	
QV-1.5	25	.75" NPT	AR-0335			
QV-2	38	1" NPT	AR-0335			
QV-3	50	1" NPT	AR-0735			
QV-5	75	1.5" NPT	AR-0735			
QV-5.5	103	1.5" NPT	AR-0780			
QV-7.5	141	2" NPT	AR-0780			
QV-10	189	2" NPT	AR-0780			
QV-15	245	3" NPT	AR-1280			
QV-20	378	3" NPT	AR-1680			
QV-30	540	4" NPT	AR-3080			
QV-40	716	4" NPT	AR-3080			



¹ If no part number is listed, adaptor is not supplied by Parker. In most cases, customer can assemble adaptor from standard pipe fittings. Refer to pages 133-134.

² Multiple filters piped in parallel are required.

³ Requires 1 1/2" Male x 1" Female reducing bushing supplied by customer.

⁴ Requires 3" Male x 1 1/2" Female reducing bushing supplied by customer.

⁵ Requires 2" Male x 1 1/2" Female reducing bushing supplied by customer.

Recommended Exhaust Filters for Vacuum Pumps

Pump Model No.	Pump Rating CFM (Free Air)	Pump Exhaust (NPT Female Unless Otherwise Noted)	Recommended Balston Filter Non-Hazardous Non-Corrosive Applications	Balston Anodized Aluminum Pump-To- Filter Adaptor (1)	Recommended Balston Filter Hazardous and Corrosive Applications	Balston Stainless Steel Pump-To- Filter Adaptor (1)
Rietschle Pump	ps					
VAL/VL/VE 10	6.8	NW 25	R-009	14173	CV-0118	14182
VF/VFE/CLFG 11	6.8	1/2"	R-009		CV-0118	
VF/VFE 16	10.2	1/2"	R-015			
CLFG/CLF/CLFE 16	10.2	1/2"	R-015	444=0		
VAL/VL/VLV 25	16.9	NW 25	AR-0316	14173		
VF/VFE 26	16.9 16.9	3/4" 3/4"	AR-0316			
CLFG/CLF/CLFE 26 VL/VLV 40	30	3/4 NW 25	AR-0316 AR-0335	14183		
VF/VFE 41	27	3/4"	AR-0335 AR-0335	14103		
CLFG/CLF/CLFE 41	27	3/4"	AR-0335			
VL/VLV 60	40	3/4"	AR-0335			
VF/VFE 61	40	3/4"	AR-0335			
CLFG/CLF/CLFE 61	40	3/4"	AR-0335			
VL/VLV 80	54	NW 40	AR-0735	14174 (4)		
VF/VFE 81	54	1	AR-0735	()		
CLFG/CLF/CLFE 81	54	1	AR-0735			
VL/VLV 100	67	NW 40	AR-0735	14174 (4)		
VF/VFE 101	67	1 1/4"	AR-0735			
CLFG/CLF/CLFE 101	67	1 1/4"	AR-0735			
VWZ 102	67	NW 65	AR-0735			
CLF/CLFE 141	94	1 1/2"	AR-0735			
VFH/VFEH 161	108	2	AR-0780			
VWZ 162	108	NW 65	AR-0780			
CLF/CLFE 181	108	2"	AR-0780			
VWZ 252	169	NW 65 3"	AR-0780			
CLFH/CLFEH 341 VWZ 402	230 270	5 NW 65	AR-1280 AR-1280			
CLFH/CLFEH 501	338	3"	AR-1680			
CLFH/CLFEH 631	426	3"	AR-1680			
CLFH/CLFEH 1001	677	3"	AR-3080			
VLV25-2	18	3/4" NPT	AR-0316			
VLV25-3	18	37.7.11.1	AR-0316			
VLV40-2	28	3/4" NPT	AR-0335			
VLV40-3	28		AR-0335			
VWZ702	494		AR-3080			
VWZ1002	706		AR-3080			
VGD10	7		R-009		CV-0118	
VGD15	11		R-015			
VCE15	11	1/2" NPT	R-015			
VCE25	18	3/4" NPT	AR-0316			
VCE40	28	1" NPT	AR-0335			
VC50	35	1-1/4" NPT	AR-0335			
VCE60 VC75	42 49	1" NPT 1-1/4" NPT	AR-0335 AR-0735			
VC100	49 71	1-1/4 NPT 1-1/2" NPT	AR-0735 AR-0735			
VC150	105	1-1/2 NPT 1-1/2" NPT	AR-0780			
VC200	141	2" NPT	AR-0780			
VC300	212	2" NPT	AR-1280			
VC400	282	3" NPT	AR-1280			
VC500	388	3" NPT	AR-1680			
VC700	494	3" NPT	AR-3080			
VC900	636	4" NPT	AR-3080			
VC1100	777	4" NPT	AR-3080			
VC1300	918	4" NPT				
VLR100	72	1-1/2" NPT	AR-0735			
VLR250	166	2" NPT	AR-0780			
VL5300	212	2" NPT	AR-1280			
VLR400	272	3" NPT	AR-1280			
VLR500	353	3" NPT	AR-1680			

		Recommended		Recommended			
	Pump	Pump Exhaust	Balston Filter	Balata a Assalt and	Balston Filter	Balata a Otaliala a	
Pump Model No.	Rating CFM (Free Air)	(NPT Female Unless Otherwise Noted)	Non-Hazardous Non-Corrosive Applications	Balston Anodized Aluminum Pump-To- Filter Adaptor (1)	Hazardous and Corrosive Applications	Balston Stainless Steel Pump-To- Filter Adaptor (1)	
RO-FLO Pu	mps (Allis-Ch	almers)					
5CCA	55	1 1/2"	AR-0735				
5CCB	86	1 1/2"	AR-0735				
7DB	151	3"AR-0780	7111 07 00				
7DC	235	3"AR-1280					
8DB	275	3"AR-1280					
8DE	345	3"AR-1680					
10GB	411	4"AR-1680					
10GC	593	4"AR-3080					
118	738	5"AR-3080					
11L	838	5"AR-3080					
12S	970	6"AR-3080 (2)					
12L	1080	6"AR-3080 (2)					
17S	1228	6"AR-3080 (2)					
17L	1420	6"AR-3080 (2)					
17L 19S	1693	8"AR-3080 (2)					
19L	1920	8"AR-3080 (2)					
23C	2270						
23D	2270 2740	8"AR-3080 (2) 8"AR-3080 (2)					
27D	3300	0 AR-3000 (2) 10"	AD 2000 (2)				
33D	5950	14"	AR-3080 (2) AR-3080 (2)				
	elch Pumps		711 0000 (2)				
		4.00	D 045	44400			
1373	10.6	1-20	R-015	14163			
1374	23	1-3/4-20	AR-0335	14164			
1375	35	Square Flange	AR-0335	44400			
1376	10.6	1-20	R-015 (3)	14163	CV 0440		
1380	5.6	1-20	R-009	14162	CV-0118		
1392 1395	0.9 71	3/4-20	9955-12 AR-0735	14165	CV-0112		
1396	100	Square Flange	AR-0735 AR-0735				
1397	17.7	Square Flange 1-3/4-20	AR-0735 AR-0316	14160			
1398	53		AR-0316 AR-0735	14100			
1399	1.2	Square Flange 3/4-20	9955-12	14165	CV-0112		
1400 1402	0.9 5.6	3/4-20 1-20	9955-12 R-009	14165 14162	CV-0112		
1403	3.5	1-20	R-009 R-009	14162	CV-0118 CV-0118		
1405	3.5 2.1	3/4-20	9955-12				
				14165	CV-0112		
1410	0.7	1/2" Hose	9955-12 9955-12	44405	CV-0112		
8802	0.9	3/4-20		14165	CV-0112		
8803B/8804B	0.9	3/4-20	9955-12	14165	CV-0112		
8803K/8804K	0.7 1 g	3/4-20	9955-12	14165	CV-0112		
8805	1.8	1-20 NW 25	9955-12	14166	CV-0112	1/192	
8806B/K	1.8	NW 25	9955-12	14175	CV-0112	14182	
8810	3.5	1-20	9955-12	14166	CV-0118	1/100	
8811B	3.5	NW 25	R-009	14173	CV-0118	14182	
8811K	2.9	NW 25	9955-12	14175	CV-0112	14182	
8814	5.6	NW 25	R-009	14173	CV-0112	14182	
8815	5.3	1-20	R-009	14162	CV-0118	44400	
8816B/K	5.3	NW 25	R-009	14173	CV-0118	14182	
8821	7.4	NW 25	R-009	14173	CV-0118	14182	
8830	10.6	1-3/4-20	R-015	14160			
8834	12	NW 40	R-015	14174			
8851	18	NW 40	AR-0316	14174			
8861	35.3	NW 50	AR-0335	14179			
8871	53	NW 50	AR-0735	14179	0)/0446	11100	
8890	7.7	3/4-20	R-009	14173	CV-0118	14182	
8905	1.8	NW 16	9956-12	44470	CV-0112	14181	
8910	3.8	NW 16	R-009	14172	CV-0118	14181 (4)	
	3.1	NW 16	R-009	14172	CV-0118	14181 (4)	
8910A							
8910A 8915 8920	5.6 7.7	1-20 NW 25	R-009 R-009	14162 14173	CV-0118 CV-0118	14182	

¹ If no part number is listed, adaptor is not supplied by Parker. In most cases, customer can assemble adaptor from standard pipe fittings. Refer to pages 133-134.

² Multiple filters piped in parallel are required.
3 Consult factory for piping considerations.
4 Requires 3/4" male x 1/2" female reducing bushing supplied by customer.

Recommended Exhaust Filters for Vacuum Pumps

Pump Model No.	Pump Rating CFM (Free Air)	Pump Exhaust (NPT Female Unless Otherwise Noted)	Recommended Balston Filter Non-Hazardous Non-Corrosive Applications	Balston Anodized Aluminum Pump-To- Filter Adaptor (1)	Recommended Balston Filter Hazardous and Corrosive Applications	Balston Stainless Steel Pump-To- Filter Adaptor (1)			
Stokes Pun	nps								
V-005 V-009 V-013-2 V-017-2 V-23 146H 148H 149H 149HS 212HS 412H 612H 912H 212J 412J 612J	7 11 20 36.7 55 30 50 80 100 150 300 600 728 150 300 600	NW 25 NW 25 NW 40 NW 40 NW 40 1 1/4" 1 1/2" 1 1/2" 2 " 3 " 3 " 5" 2" NPT 3" NPT	R-009 R-015 AR-0316 AR-0335 AR-0735 AR-0735 AR-0735 AR-0735 AR-0735 AR-0780 AR-1280 AR-3080 AR-3080 AR-1280 AR-3080 AR-3080 AR-3080 AR-3080	14173 14173 14174 14174 14174 (3)	CV-0118	14182			
Ulvac Pumps									
G-5 G-15 G/GC-25S G/GC-20D G-50S/D GC-50D GC-100D GVD-050 GVD-100 GVD-165 DA-30S DA-60S D-330D D-650D D-950D PKS-016 PKS-030 PKS-070 PVD-180 PDV-360	0.21 0.63 0.84 0.84 2.1 2.1 4.2 4.2 2.1 5.6 7 1.1 2.5 9 18 27 57 107 250 6.4 13	M17 x 1 3/4" 3/4" 3/4" 3/4" 1" 1" 3/4" 1" 3/4" 1 1/2" 1 1/2" 2" 3" 4" 3/4" 1"	9955-12 9955-12 9955-12 9955-12 9955-12 9955-12 R-009 R-009 9955-12 R-009 R-009 9955-12 R-009 AR-0316 AR-0335 AR-0735 AR-0735 AR-0780 AR-1280 R-009 R-009		CV-0112 CV-0112 CV-0112 CV-0112 CV-0112 CV-0118 CV-0118 CV-0118 CV-0118 CV-0118 CV-0118 CV-0118 CV-0112 CV-01118				
Varian Pum	ips								
CS/SS/SD-90 EVAC 200 EVAC 300 CD/SD-200 CD/SS/SD-300 CD/SS/SD-700 CD/SS/SD-1400 CD/SD-2500	3.2 7 11 7 11 27 50 90	NW 25 3/4" 3/4" NW 25 NW 25 NW 40 NW 40 NW 50	R-009 R-009 R-015 R-009 R-015 AR-0335 AR-0735 AR-0735	14173 14173 14173 14174 14173 (3) 14179 (3)	CV-0118 CV-0118 CV-0118	14182 14182			


¹ If no part number is listed, adaptor is not supplied by Parker. In most cases, customer can assemble adaptor from standard pipe fittings. Refer to pages 133-134.

² Multiple filters piped in parallel are required.

³ Requires 3" Male x 1 1/2" Female reducing bushing supplied by customer.

⁴ Requires 2" Male x 1 1/2" Female reducing bushing supplied by customer.

Pump to Filter Adaptors - Straight Thread to NPT Thread

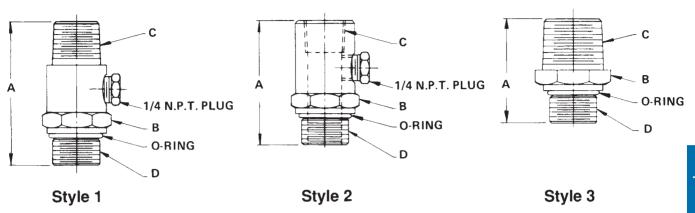


		Materials of Co	onstruction	Dimensions (In	Dimensions (Inches)				
Туре	Adaptor Style	Adaptor	Seals	(A) Height	(B) Hex Size	(C) NPT Thread	(D) Thread		
14168	1	Alum.	Buna-N	3.0	1.25	3/4	M24 x 1		
14166	2			2.6		1/2 F (1)	1-20		
14165	2			2.44	•	1/2 F (1)	3/4-20		
14164	3			2.88	2.0	1 1/2	1 3/4-20		
14163	3			2.19	1.38	1	1-20		
14162	1			3.0	1.25	3/4	1-20		
14160	3		\	2.3	2.0	1	1 3/4-20		
14159	1		_	3.15	1.25	3/4	3/4 BSPT		
14158	2		_	2.80		1/2 F (1)	3/4BSPT		
14157	2	\	_	2.56	—	1/2 F (1)	3/8 BSPT		


Notes


1 Female NPT - all others Male



Pump to Filter Adaptors - Flange to NPT Thread

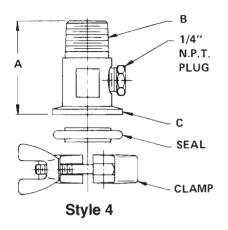

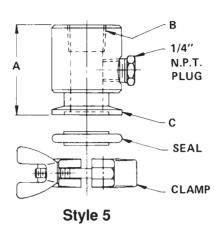

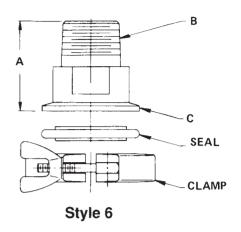

		Materials of	Construction	1	Dimensions	Dimensions			
Туре	Adaptor Style	Adaptor	Clamp	Seals	(A) Height (inches)	(B) NPT Thread (Inches)	(C) KF Flange (2)	Other Fittings Included	
14184	6	Stain. St.	Alum.	Viton	2.0	1	KF-40		
14183	6	Alum.			2.38	1 1/2	KF-25		
14182	4	Stain. St.			2.06	1/2	KF-25	3/4" x 1/2" Reducing Bushing	
14181	4	Stain. St.			2.12	1/2	KF-16		
14180	6	Alum.			2.0	1	KF-16		
14179		Stain. St.			2.62	1 1/2	KF-50		
14178					2.38	1 1/2	KF-40		
14177					2.0	1	KF-25		
14176	+	+				1	KF-16		
14175	5	Alum.				1/2 F (1)	KF-25		
14174	6				↓	1	KF-40	1 1/2" x 1" Reducing Bushing	
14173	4				2.06	3/4	KF-25	1" x 3/4" Reducing Bushing	
14172	4	+	+	+	2.12	1/2	KF-16	1/2" coupling and 3/4" x 1/2 Reducing Bushing	

¹ Female NPT - all others are Male

² The designation "KF" and "NW" are interchangeable

Balston LP Depth Filters:

The LP-Grades 10,20, and 30 depth filter cartridges are constructed entirely of polypropylene, and the LP-Grades 50, 60, 70, and 80 depth filter cartridges are constructed of polypropylene, borosilicate glass and polyethylene binder. Both types of cartridges provide excellent chemical and solvent resistance. All LP cartridges have a graded efficiency construction: the filtration efficiency increases from the inside surface to the outside surface. in the direction of flow. This construction provides exceptionally high solids holding capacity, which translates into a longer life of the filter cartridge. The seven retention efficiency grades offered cover the ranges from 75 micron to 0.22 micron (see table, on next page).

The Balston LP depth filter cartridges may be used for fine filtration of liquids with heavy dirt loading, when chemical or solvent resistance is required, or as prefilters to ultra-high efficiency or membrane filtration applications.



Product Features:

- Filtration to 0.22 micron with exceptional filter life, even for the dirtiest liquids
- Excellent chemical and solvent Seven retention efficiency resistance
- Compliance with FDA regulations for food contact surfaces
- grades cover the range from 75 micron to 0.22 micron

Gas and Liquid Sample Filtration

Process Filtration

Specialized Chemical or Solvent Filtration



Filter Cartridge and Housing Selection

How To Select The Filter Cartridge

- 1 Specify the level of final filtration required, within the range of 75 micron to 0.22 micron.
- 2 Select the filter system using the Final Filter Selection Table below.

Note: The recommendations are based on the assumption that the initial liquid feed is relatively dirty. If the feed has been prefiltered to about 10 micron, the first stage of filtration may be omitted

How To Select The Filter Housing

- Determine the number of LP Filter Cartridge stages and Grade of filter at each stage, using the Final Filter Selection Table below.
- Use the flow chart (next page) to determine the sizes of housings required based on the grade of filter cartridge and the liquid flow rate.
- Select the housings of the correct size which are constructed of materials suitable for the application.

Retention Efficiency Ratings


LP Depth Filter Cartridges Grade 80% Capture Rating

75 micron
 25 micron
 10 micron
 1 micron


60 0.6 micron 70 0.4 micron

80 0.22 micron

Retention efficiency v. particle size for the four finer grades of LP depth filters

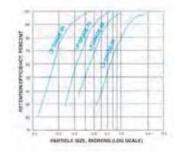

Cross Section of LP-200-50 and LP-200-95 cartridges. Construction of LP-100-12 and LP-100-25 cartridges is similar, but without end caps and gaskets.

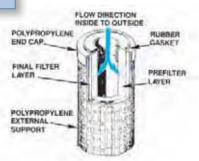

the Final Filtration tration Requirement is:	Use This LP Cartridge System 1st Stage	2nd Stage	3rd Stage
5 micron	LP Grade 10		
25 micron	LP Grade 20		
10 micron	LP Grade 10	LP Grade 30	
1 micron	LP Grade 20	LP Grade 50	
0.6 micron	LP Grade 10	LP Grade 30	LP Grade 60
0.4 micron	LP Grade 20	LP Grade 50	LP Grade 70
0.22 micron	LP Grade 20	LP Grade 50	LP Grade 80

Notes

1 For a liquid with viscosity higher than the viscosity of water (1 centipoise), divide the flow rates in the above table by the viscosity of the liquid in centipoises. Example: for liquid with 10 centipoise viscosity, flow rate with C-0395 housing, Grade 20 cartridges at 10 psi drop will be 132/10 = 13.2 GPM.

ilter ousing lodel	Number of Cartridges	Cartridge Length & Designation	Initial Pressure Drop	Water Flow Grade 10	Rate, Gallons Grade 20	per Minute LP Grade 30	Cartridges Grade 50	Grade 60	Grade 70	Grade
		2 1/2"	5 psi	3.5	3.5	3.0	0.75	0.60	0.30	0.07
3S6, 33G 8P	1	LP-100-12	10 psi	4.3	4.2	3.9	0.95	0.80	0.37	0.10
		7"	5 psi	5.0	5.0	4.3	1.1	0.90	0.45	0.11
1586 15G	1	LP-100-25	10 psi	6.2	6.2	5.4	1.4	1.2	0.60	0.15
-040		5"	5 psi	6	6	6	3.2	1.3	0.6	0.5
53/18	1	LP-200-18	10 psi	11	11	11	6	2.5	1.0	0.9
27/50 53/50, 54/50	1 1 1	10" LP-200-50 20"	5 psi 10 psi 5 psi	12 22 24	12 22 24	12 22 24	6.4 12 13	2.5 5 5	1.2 2.0 2.4	1.0 1.7 2.0
3/95, 27/95	1	20" LP-200-95	5 psi 10 psi	24 44	24 44	24 44	13 24	5 10	2.4 4.0	2.0 3.4

Filter Cartridge and Housing Selection

Liquid	LP Cartridge	Liquid	LP Cartridge
Acetic Acid (Glacial)	NR	Hydrochloric Acid (35%)	R
Acetic Acid (5%)	R	Hydrofluoric Acid	NR
Acetone	R	Hydrogen Peroxide	NR
Acetonitrile	R	N-Methyl Pyrrolidone (NMP)	R
Alcohols	R	Methyl Ethyl Ketone (MEK)	R
Ammonia, Liquid or Gas	R (1)	Methyl Isobutyl Ketone (MIBK)	R
Amyl Acetate	N	Methylene Chloride	NR
Ammonium Hydroxide (6N)	R	Metal Etch (H ₃ PO ₄ /HAC/HNO ₃)	N
B.O.E. (NH ₄ F/HF)	NR	Nitric Acid (30%)	R
Butyl Acetate	N	Nitrobenzene	R
Carbon Tetrachloride	NR	Pentane	NR
Chlorine, Liquid or Gas	NR	Perchlorethylene	NR
Chloroform	NR	Phenol	NR
Cyclohexane	NR	Plating Solutions	R
Dimethyl Acetamide(DMAC)	R	Phosphoric Acid (50%)	R
Dimethyl Formamide(DMF)	R	Silicone Oils	R
Dimethyl Sulfoxide (DMSO)	R	Sodium Hydroxide	
Esters	NR	Below 20%	R
Ethanolamine	R	20-45%	R
Ethyl Acetate	R	Above 45%	NR
Ethylene Diamine	R	Steam	NR
Ethylene Glycol	R	Sulfuric Acid (50%)	R
Ethylene Oxide	R	Toluene	NR
Formaldahyde (37%)	R	Trichloroethane	NR
Freon TF	NR	Trichloroethylene	NR
Freon TMC	NR	Water to 180°F (82°C)	R
Hexane	NR	Xylene	NR

1 Grades 10, 20, 30 large diameters only. In LP200- sizes only. R - Recommended

NR - Not Recommended

N - No data available; consult factory

Chemical Compatibility:

The above compatibility data is for the filter cartridges only, at an operating temperature of 70°F (21°C). The filter housing is not necessarily compatible with the same chemicals and

Food Grade Applications:

All LP Filter Cartridges are constructed entirely of materials which are in compliance with FDA regulations for food contact surfaces. All stainless steel liquid filter in this bulletin comply with FDA regulations for food contact applications.



1/4" to 3/4" Line Size

Miniature Model 58P Housing

Has a nylon head, nylon internals, and a clear nylon bowl. The Model 58P Housing accepts a single LP cartridge, and may be used to filter water, mildly acidic, or caustic solutions.

Model 53 Housings

Are all-polypropylene, designed for a single LP-200 filter cartridge. Polypropylene construction provides excellent resistance to non-oxidizing acids, such as HCL in any concentration, sulfuric to 70% concentration, brines, hydrocarbon liquids, alcohols and concentrated caustic.

The Model 53 Housings may be used with certain ketones and chlorinated solvents. Please see page 105 or contact the Technical Services Dept. for specific recommendations.







Models 53/18, 53/50, and 53/95 (shown)



Model 58P



1/4" to 3/4" Line Size

Ordering Information					
Model	58P	53/18	53/50	53/95	54/50
Port Size (NPT)	1/4"	3/8"	3/4"	3/4"	3/4"
Material of Construction					
Head	Nylon	Polypropylene	Polypropylene	Polypropylene	Polypropylene
Bowl	Nylon	Polypropylene	Polypropylene	Polypropylene	SAN
Internals	Nylon	_	_	_	_
Seals	EPR	EPR	EPR	EPR	EPR
Max. Temperature	150°F (66°C)	125°F (52°C)	125°F (52°C)	125°F (52°C)	125°F (52°C)
Max. Pressure	125 psig (1)	125 psig (1)	125 psig (1)	125 psig (1)	60 psi (1)
Max. Differential Press.	60 psi (2)	60 psi (2)	60 psi (2)	60 psi (2)	60 psi (2)
Shipping Weight	1 lb. (0.5 kg)	3 lbs. (1.3 kg)	4 lbs. (1.8 kg)	6 lbs. (2.7 kg)	4 lbs. (1.8 kg)
Dimensions	2.7"D x 6.1"L (6.9cm x 15cm)	4.4"D x 6.6"L (11cm x 17cm)	5.0"D x 12"L (13cm x 30cm)	5.0"D x 22"L (13cm x 56cm)	5.0"D x 12"L (13cm x 30cm)

Ordering Information						
For assistance, call toll-free at 1-800-343-4048 8AM to 5PM Eastern Time						
Model LP Filter Cartridges,	58P	53/18	53/50	53/95	54/50	
Depth Filters (3)	LP-100-12-□	LP-200-18-□	LP-200-50-□	LP-200-95-□	LP-200-50-□	
Number of Cartridges required	_	1	1	1	1	

Notes:

- 1 Maximum pressure ratings are for temperatures to 125°F (52°C). Please consult the Technical Services Dept. for maximum pressure ratings at elevated temperatures.
- 2 Inside-out flow, LP filter cartridges.
- 3 To order filter cartridges, indicate grade by putting appropriate grade number after size designation. For example, to obtain 0.22 micron depth filter cartridges for the model 53/18, order LP-200-18-80.



1" Line Size

Model 27 Housings

Model 27 housings are constructed of 316 stainless steel. These models have 1" NPT ports and are rated to 800 psig. The model 27 housings hold a single LP-200 filter cartridge, available in a 10" or 20" length.

Principal Specifications					
Model	27/50	27/95			
Port Size (NPT) Material of Construction	1" (1)	1" (1)			
Head	316 SS	316 SS			
Seals	Viton	Viton			
Max. Temperature	180°F (82°C) (2)	180°F (82°C) (2)			
Max. Pressure	800 psig	800 psig			
Max. Differential Press.	60 psi (3)	60 psi (3)			
Shipping Weight	16 lb. (7.3 kg)	20 lb. (9 kg)			
Dimensions	4.0"D X 16"L (10cm X 41cm)	4.0"D X 27"L (10cm X 69cm)			



Models 27/50, 27/95

Ordering Information					
For assistance, call toll-free at 1-800-343-4048 8AM to 5PM Eastern Time					
Model	27/50	27/95			
LP Filter Cartridges Depth Filters (4)	LP-200-50-□	LP-200-95-□			
Number of Cartridges Required	1	1			

Notes

- 1 Adaptors are available which convert threaded ports to sanitary type clamp connections.
- 2 Limited by maximum temperature of LP Filter Cartridges.
- 3 Inside-out flow, LP filter cartridge.
- 4 To order filter cartridges, indicate grade by putting appropriate grade number after size designation. For example, to obtain 0.22 micron depth filter cartridges for the model 27/50, order LP-200-50-80.



1/2" to 2" Line Size

Model 33S6 and 45S6 Filters

All-stainless steel with 1/2" NPT inlet and outlet ports. Both filters are also available with clear Pyrex® glass bowl (100 psig rating) with breakage-protection external plastic shield.

Principal Specifications	S			
Model	33 S 6	33G	45 S6	45G
Port Size (NPT)	1/2" (1)	1/2" (1)	1/2" (1)	1/2" (1)
Material of Construction				
Head	316SS	316SS	316SS	316SS
Bowl	316SS	Pyrex	316SS	Pyrex
Internals	316SS	316SS	316SS	316SS
Seals	Viton	Viton	Viton	Viton
Max. Temperature	180°F (82°C) (2)	160°F (71°C) (2)	180°F (82°C) (2)	160°F (71°C) (2)
Max. Pressure	425 psig (3)	100 psig (3)	250 psig (3)	100 psig (3)
Max. Differential Press.	60 psi (4)	60 psi (4)	60 psi (4)	60 psi (4)
Shipping Weight	3 lb. (1.3 kg)	3 lb. (1.3 kg)	5 lb. (2.3 kg)	5 lb. (2.3 kg)
Dimensions	2.6"D x 4.8"L (7cm x 12cm)	2.6"D x 4.5"L (7cm x 11cm)	2.6"D x 9.0"L (7cm x 23cm)	2.6"D x 9.3"L (7cm x 23cm)



Models 33S6 and 45S6

Ordering Information						
For assistance, call toll-free at 1-800-343-4048 8AM to 5PM Eastern Time						
Model LP Filter Cartridges,	33S6	33G	45\$6	45G		
Depth Filters (5) Number of	LP-100-12-□	LP-100-12-□	LP-100-25-□	LP-100-25-□		
Cartridges required	1	1	1	1		

Notes

- 1 Adaptors are available which convert threaded ports to sanitary type clamp connections.
- 2 Limited by maximum temperature of LP Filter Cartridges.
- 3 Maximum pressure ratings are for temperatures to 200 $^{\circ}$ F (93 $^{\circ}$ C). Please consult the Technical Services Dept. for maximum pressure ratings at elevated temperatures.
- 4 Inside-out flow, LP filter cartridges.
- 5 To order filter cartridges, indicate grade by putting appropriate grade number after size designation. For example, to obtain 0.22 micron depth filter cartridges for the model 33S6, order LP-200-12-80.

Adaptor Ordering Information:

P/N 73803 1" NPT x 1" Sanitary P/N 73804 1 1/2" NPT x 1 1/2" Sanitary P/N 73805 2" NPT c 2" Sanitary



Disposable Filter Units for Liquids

Filter samples to on-line liquid analyzers

Prevent cross-contamination of samples

Pressure ratings up to 125 psig

Temperature to 275°F (135°C)

Completely disposable, constructed of recyclable plastics

Disposable Filter Units

Balston Microfibre® Disposable Filter Unit (DFU) consists of a Microfibre Filter Cartridge permanently bonded into a sealed plastic holder with 125 psig pressure rating. The economical DFU offers all the advantages of Microfibre Filter Cartridges for high efficiency liquid filtrations, combined with the convenience of complete disposability. The 1/4" O.D. ports permit pressure-tight connections using standard compression fittings. Slipon 1/4" timbing or plastic barbs may be used for low pressure applications.

The housings are available in two different materials of construction: clear nylon or corrosion-resistant (opaque) PVDF. The nylon DFU's are designated with the prefix 9933, and the PVDF DFU's are designated with the prefix 9922.

Model 9922-05

The Model 99XX-05 DFU's are the smallest DFU's available. They have an internal volume of less than 12 ml. the DFU's may be used in low flow liquid applications or sampling systems which require short retention times.

Model 9933-11

The Model 99XX-11 DFU's are similar in construction to the Model 99XX-05 DFU's, but they have approximately twice the solids holding capacity. The 99XX-11 DFU's may be used in higher flow liquid applications or in sampling applications where longer retention times are acceptable.





Model 9922-11

Retention Efficiency Ratings			
DFU Grade	98% retention particle size		
DQ	25 micron		
CQ	8 micron		
BQ	2 micron		
AQ	0.9 micron		
AAQ	0.3 micron		



Disposable Filter Units for Liquids

Flow Rate	es							
DFU Model	Volume of I Gallons	Housing Liters	Initial Pressure Drop	Water Flow Grade DQ, DX	v Rate, Gallons Grade CQ, CX	per Hour Grade BQ, BX	Grade AQ	Grade AAQ
9922-05 4433-05	0.003	0.01	1 psi	12	10	3	1.5	0.4
9933-05	0.003	0.01	5 psi	30	25	15	7.3	1.9
9922-11	0.005	0.02	1 psi	18	15	5	2.5	0.6
9933-11	0.005	0.02	5 psi	45	37	26	12	3.1

Ν	ote	s:	
1	At	0	psig

2 At 110°F (43°C)

Installation Information:

Please contact the Technical Services Department for manufacturers of compression and brass fittings.

To Pressure Pipe or Tubing:

1/4" tubing to 1/4"NPT Connector female P/N 11970 (1 per pkg)

Connector 1/4" tubing to 1/4"

tubing P/N 11971 (1 per pkg)

To Low Pressure Plastic Tubing:

Tubing with 1/4" ID may be slipped over the DFU and fittings and held with tubing clamps. Parker supplies plastic barbs to connect the DFU to smaller diameter plastic tubing. The connection is suitable for pressures to 50 psig.

DFU to 1/16" ID tubing P/N 14000 (bag of 20 barbs)

DFU to 1/8" ID tubing P/N 14001 (bag of 20 barbs)

Principal Specifications					
Model	9922-05	9933-05	4433-05	9922-11	9933-11
Inlet and Outlet Ports	1/4" Tubing	1/4" Tubing	1st Tier/Barb 1/4"Tubing 2nd Tier/Barb 3/8"Tubing	1/4" Tubing	1/4" Tubing
Construction Material	PVDF	Nylon	Nylon	PVDF	Nylon
Max. Temperature (1)	275°F (135°C)	230°F (110°C)	230°F (110°C)	275°F (135°C)	230°F (110°C)
Max. Pressure	125 psig (2)	125 psig (2)	125 psig (2)	125 psig (2)	125 psig (2)
Dimensions	1.0"D x 3.25"L (2.5cm x 6cm)	1.0"D x 3.25"L (2.5cm x 6cm)	1.0"D x 3.43"L (2.5cm x 8.72cm)	1.4"D x 4.6"L (3.6cm x 12cm)	1.4"D x 4.6"L (3.6cm x 12cm)

Ordering Information					
For assistance, call toll-free at 1-800-343-4048 8AM to 5PM Eastern Time					
Model	9922-05	9933-05	4433-05	9922-11	9933-11
Box of 10 DFUs	9922-05-□	9933-05-□	4433-05-□	9922-11-🗆	9933-11-🗆
Grades supplied	DQ, CQ, BQ, AQ, AAQ				

Chemical Compatibility

Models 9922-05, 9922-11

Suitable: Water or steam to 275°F (135°C); concentrated nitric, sulfuric, and hydrochloric acids; chlorine (gas or liquid); sodium hypochlorite, ethylene oxide (gas or liquid); Freons; ammonia (gas, liquid, or aqueous solutions); hydrogen peroxide (all concentrations); bromine (dry and aqueous solutions); all chlorinated solvents except methylene chloride; all aromatic and aliphatic solvents; all alcohols and glycols; aniline; phenol.

Limited Use: Acetone, MEK, dioxane, furfural, methylene chloride.

Unsuitable: Water above 275°F (135°C), THF, DMF, ethylene diamine, chlorosulfonic acid, ethanolamine, pyridine, sulfur trioxide.

Models 9933-05, 9933-11, 4433-05

Suitable: Water to 158°F (70°C); benzene, toluene, other aromatic hydrocarbons; hydrocarbon solvents and fuels, perchloroethylene; trichloroethylene, nitric acid (to 10%); sulfuric acid (to 40%); hydrochloric acid (to 10%); most salt solutions; sodium and potassium hydroxide (to 50%).

Limited Use: Water at 176°F (80°C); acetone; MEK, acetaldehyde; ammonia (to 25%).

Unsuitable: Water above 158°F (70°C). alcohols; glycols, phenol; aniline; DMF; concentrated acids; chlorine.

Water Filter

Remove contaminants to 5 micron

Prevent fixture discoloration

Materials comply with USFDA regulations

Constructed of non-corrosive materials

Ideal for drinking water systems

Inexpensive replacement filter cartridges

Transparent bowl for visual monitoring



Model 57-501

Balston Water Filter

The Balston 57-501 Series water filters provide economical, efficient liquid filtration in a one-step filter. These filters are designed to fit most 3/4" water supply lines and are available in three different efficiency ranges.

Retention Efficiency Ratings					
Model	Retention efficiency Nominal µm rating	Water Flow 5 psi	Rate 10 psi		
57-501-C	80 (course grade)	15 GPM	30 GPM		
57-501-M	30 (medium grade)	10 GPM	20 GPM		
57-501-F	5 (fine grade)	8 GPM	16 GPM		

Principal	Specificat	tions						
Model	Materials Head	of const Bowl	ruction Cartridge	Max. Press. (1)	Max. Temp.	Port Size	Shipping Weight	Dimensions
57-501-C	Polypro.	SAN	Polypro.	150 psi	125°F (52°C)	3/4" NPT	3.5 lbs.	5.5"D x 17"L (14cm x 43cm)
57-501-M	Polypro.	SAN	Polypro.	150 psi	125°F (52°C)	3/4" NPT	3.5 lbs.	5.5"D x 17"L (14cm x 43cm)
57-501-F	Polypro.	SAN	Polypro.	150 psi	125°F (52°C)	3/4" NPT	3.5 lbs.	5.5"D x 17"L (14cm x 43cm)

Notes:

1 Maximum pressure at 70°F (21°C)

Ordering Information										
For assistance, call toll-free at 1-800	For assistance, call toll-free at 1-800-343-4048 8AM to 5PM Eastern Time									
Model	Replacement Filter Cartrid	lges								
	Box of 3	Box of 10								
57-501-C (Course grade)	WF-3/200-50-C	WF-200-50-C								
57-501-M (Medium grade)	WF-3/200-50-M	WF-200-50-M								
57-501-F (Fine grade)	WF-3/200-50-F	WF-200-50-F								
Mounting Bracket Kit	P/N 11057									



Filters for Steam Sterilization Systems

Balston Steam Filters:

The 23R Steam Filter contains a patented Microfibre® Filter Cartridge in a rugged stainless steel housing designed especially for steam service. Included as standard items with the 23R Steam Filter are a stainless steel condensate drain and a high quality bleeder valve. The unit, as received, is complete and ready for installation.



Product Features:

- Eliminate instrument staining, spotting, and rusting
- Reduced contamination of sterilizer interiors
- Reduced maintenance

Clean In Place (CIP) Steam Filtration

Room Humidification

Steam Filtration to Sterilizers and Autoclaves



for Steam Sterilization Systems



Model 23/75R

How the Balston Steam Filter Works

The 23/75R Steam Filter contains a patented Microfibre® Filter Cartridge in a rugged stainless steel housing designed especially for steam service. Included as standard items with the 23/75R Steam Filter are a stainless steel condensate drain and a high quality bleeder valve. The unit, as received, is complete and ready for installation.

Steam enters the housing and moves into an expansion chamber, where much of the condensate is removed from the steam by the abrupt change in flow direction and velocity. The steam then flows upward in the housing, through the Grade R Microfibre filter cartridge, and downward to the exit port. The water draining from the filter cartridges and expansion chamber is removed from the housing by the automatic condensate drain.

The Grade R Microfibre filter cartridge, the heart of the 23/75R Steam Filter, combines sturdy construction with remarkably efficient filtration of solid particles and liquid droplets. The cartridge is rated at 98+% at 0.1 micron. Solid particles remain trapped in the depth of the filter cartridge, and liquid water drips from the filter cartridge to the automatic drain. The Microfibre filter cartridge is constructed from chemically inert borosilicate glass fibers and fluorocarbon resin binder. The filter cartridge is completely free of impurities which could extract into the steam.

The Balston 23/75R Steam Filter is recommended for use on 3/4" and 1" steam lines (line sizes for the vast majority of steam sterilization systems). Please consult our technical support department for recommendations on filters for larger steam lines. Use only products designed specifically for steam filtration in steam installations.



for Steam Sterilization Systems


Principal	Specification	ns						
Model	Port Size	Filter Cartridge Designation	Materials of Head	Materials of Construction Head Bowl Internals Seals				Shipping Weight
23/75R	1" NPT (1)	200-75-R (2)	304SS	304SS	304SS	EPR	80 psig	25 lbs. (11 kg)

Ordering Informat	tion		
For assistance, call to	II-free at 1-800-343-4048 8AM to 5PM E	Eastern Time	
Model	Automatic Drain	No. Filter Cartridges Required	Replacement Filter Cartridges (box of 15)
23/75R	Included	1	200-75-R

Notes

1 The 1" port size can be installed in a 3/4" line by using the appropriate reducing bushings.

2 Each filter is supplied with one filter cartridge installed. Replacement filter cartridges are sold in boxes of 15. To order, use complete size and grade designation; for example 200-75-R.

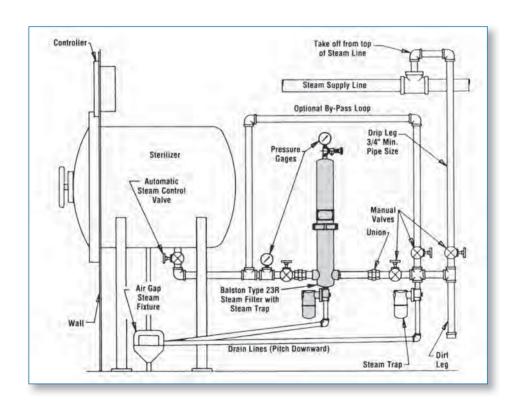

Typical Sterilizer Recommended Installation



for Steam Sterilization Systems

Water Filters for Washer Sterilizers

Unique, graded efficiency design provides exceptionally long filter life

Reduces costly sterilizer maintenance

Easy to change filter cartridge - no tools required

Safe, inert materials of construction

Filtering Water with the Balston LP-20 Water Filter

Dirt and rust in the hot or cold water supply to washersterilizers leave deposits and stains on valuable instruments and sterilizers. In most hospitals, the cleanliness of the water depends upon the efficiency of the municipal water treatment system. Excessive dirt in the water can be an intermittent problem caused by a drought, a fire in the neighborhood, water main problems, or scores of other random events well beyond the control of the hospital engineers. This unpredictable, expensive problem can be permanently solved by installing an inexpensive and easily maintained Balston LP Grade 20 water filter on the water line to the washer-sterilizer. On any washersterilizer, installing a Balston 23/75R Steam Filter on the steam line and a Balston LP Grade 20 Water Filter on the water line guarantees freedom from the outside contaminants.

How the cartridge works

The LP Grade 20 liquid filter cartridge is constructed entirely from polypropylene, rendering it safe and inert for use in hospital water supplies. The polypropylene construction makes this filter acceptable for use in cold and hot (to 180°F/82°C) water supplies. The filter cartridge consists of a polypropylene external support structure with EPR seals and an internal filtering element. The internal filter is made of self-bonded polypropylene fibers which are graded from coarse to fine in the direction of flow (inside-to-outside). Since the coarse inner layer acts as a prefilter for the finer outer layer, the life of this cartridge is exceptionally long. For example: Approximately 50,000 gallons of water







Model 53/95

Filter Assembly Selection Recommendations

Water Cold Water (below 125°F/52°C)
3/4" 53/95 with LP-200-95-20
1/2" 53/50 with LP-200-50-20

can be filtered by a single 20" liquid filter cartridge.

Models 53/50 and 53/95

These models are constructed entirely of polypropylene and designed for a single filter cartridge in the 10" and 20" lengths. The Model 53 housings are used for cold water service only.



for Steam Sterilization Systems

Water Filters for Washer Sterilizers

Principal Specifications												
Model	Port Materials of Construction Maximum Maximum Maximum Shipping Dimensions Model Size Head Bowl Internals Seals Temperature Pressure Diff. Press. (1) Weight											
COLD WA	TER FILTER											
53/50	3/4" NPT	Polypro.	Polypro.		EPR	125°F (52°C)	125 psig	60 psig	4 lbs (2 kg)	5"D x 12"L (13cm x 31cm)		
53/95	3/4" NPT	Polypro.	Polypro.		EPR	125°F (52°C)	125 psig	60 psig	6 lbs (3 kg)	5"D x 22"L (13cm x 56cm)		

Ordering Info	rmation											
For assistance, c	For assistance, call toll-free at 1-800-343-4048 8AM to 5PM Eastern Time											
Model	No. Filter Cartridges Required (2)	Filter Cartridge Designation										
53/50	1	LP-200-50-20										
53/95	1	LP-200-95-20										

Notes

- 1 LP Grade 20 Filter Cartridge. Inside-to-outside flow.
- 2 Filter Cartridge not included with housing and must be ordered separately.



for Steam Sterilization Systems

EtO Filters

Long filter life

Easy to change filter cartridge

Eliminate unexpected downtime due to clogged components

Stainless steel and PTFE provide safe, trouble-free operation



Model A34

Model A34

The cleanliness of Ethylene Oxide (EtO) typically varies from supplier to supplier and from delivery to delivery. In addition, EtO inherently polymerizes, causing valves to clog and regulators to malfunction. Filtering EtO at the point of use assures the delivery of clean EtO to the sterilizers, significantly improves sterilizer performance, and reduces sterilizer maintenance.

Balston EtO Filters, specifically designed for ethylene oxide service, are constructed of stainless steel with PTFE seals. The ET Grade 30 filter cartridge is inexpensive and simple to replace when necessary.

The model A34 is sized for most hospital sterilizer applications.

Princip	oal Specificatio	ns						
Model	Port Size	Filter Cartridge Designation	Materials of Head	f Construction Bowl	Internals	Seals	Maximum Steam Pressure	Shipping Weight
A34	1/4" NPT	ET-100-12-30 (1)	316SS	316SS	316SS	PTFE (2)	250 psig	4 lbs. (2 kg)

Ordering Information

For assistance, call toll-free at 1-800-343-4048 8AM to 5PM Eastern Time

Model Filter Cartridge Designation

A34 Included ET-100-12-30

Notes:

1 Each filter is supplied with one filter cartridge 2 Each filter is supplied with one spare installed. 2 Fach filter is supplied with one spare PTFE seal set.



Balston Compressed Gas Filters:

Balston high flow rate compressed gas filters offer exceptionally high efficiency coalescing filtration of compressed gas at high flow rates. Specifically designed to remove suspended liquids and dirt from pipeline natural gas, the housings are ASME Code Stamped up to 1440 psig. Equipped with Balston Microfibre® Grade DX Disposable Filter Cartridges, the filters are rated at 93% retention of 0.01 micron.



Product Features:


- Pressure rating to 1440 psig
- Meets US and Canadian codes for natural gas filters
- Flow rates to 183 million standard cubic feet per day

 High efficiency removal of suspended liquid and solid impurities

Sample and Instrumentation Filtration

High Pressure Process Gas Filtration Stainless Steel Filtration Vessels for Corrosive Environments

High Volume Gas Filtration

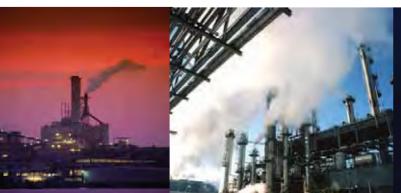





2" Through 10" Line Size Filters



Model AKH-0280



Model AKH-0880

Balston Compressed Gas Filters

Balston high flow rate compressed gas filters offer exceptionally high efficiency coalescing filtration of compressed gas at high flow rates. Specifically designed to remove suspended liquids and dirt from pipeline natural gas, the housings are ASME Code Stamped up to 1440 psig. Equipped with Balston Microfibre® Grade DX Disposable Filter Cartridges, the filters are rated at 93% retention of 0.01 micron and essentially 100% retention of 5 micron liquid droplets and particles.

Since the coalesced liquid drains continuously from the filter cartridges as rapidly as it is collected, the filters have an unlimited capacity for liquid removal.

Each filter cartridge is mounted on a rigid permanent filter holder with a vibration-resistant removable tube retainer. The filter cartridge is self-gasketing, and the filter holder is designed so that a perfect seal is easily made, even when the tube is replaced by an operator unfamiliar with the equipment.

Series AKH, and AHC housings are available with inlet and outlet ports covering the range from 2" to 10" pipe sizes. The standard carbon steel units have pressure ratings from 665 to 1440 psig.

Each AHC assembly is equipped with internal support cores and one set of filter cartridges. Also available is a complete line of stainless steel filter housings ASME code stamped for a rated maximum operating pressure of 200 psig.



2" Through 4" Line Size Filters

Model	Port Size Flange (7)	Closur Type*	e Maximum Temperature (3)	Maximum Pressure (1)	Shipping Weight	Dimensions	(7, 10) Dimension	Flange to Flange
AHC-0180-[]	2"	SD	130°F (54°C)	1440 psig	98 lbs.(44 kg)	32"H x 15"W	. ()
AKH-0280-[]	3"	FSO	250°F (121°C)	665 psig	235 lbs.(107 kg)	(81cm x 38cm 41"H x 16"W	k 8" 15.63" (40cr	m)
AHC-0280-[]	3"	SD	130°F (54°C)	1440 psig	220 lbs.(100 Kg)	(104cm x 41c 43"H x 17"W	(12" 16.63" (42cr	m)
AKH-0480-[]	4"	FSO	250°F (121°C)	665 psig	270 lbs.(122 kg)	(109cm x 43c 40"H x 21"W :	c 6" 20.63" (52cr	n)
AHC-0480-[]	4"	SD	130°F (54°C)	1440 psig	450 lbs.(204 kg)	(102cm x 53c 50"H x 21"W : (127cm x 53c	(15"20.63" (52cm)	
Model	Port Size Flange (12)	Materia Constr		Maximum Temperature	Maximum Pressure (9)	Shipping Weight	Dimensions (7, 10)	Flange to Flange Dimension
KS-0280-3	3"	316SS	Housing, Viton Seals	200°F (93°C)	200 psig	140 lbs.	36"h x 15.6"w x 7.75"	15.62" (40cm)
KS-0480-4	4"	316SS	Housing, Viton Seals	200°F (93°C)	200 psig	210 lbs.	(91cm x 40cm x 20cm) 35.5"h x 20.6"w x 6.25" (90cm x 52cm x 16cm)	20.63" (52cm)

Notes

- 1 Vessel is ASME Section VIII, Div. 1 code stamped for rated pressure.
- 2 All vessels are constructed of carbon steel with Type 303 stainless steel filter cartridge holders and Buna-N seals.
- 3 Maximum operating temperature of carbon steel vessel is 650°F (343°C). Minimum operating (process and ambient) temperature is -20°F (-30°C).
- Max. Temp.
 Seal Material

 250°F (121°C)
 Buna

 400°F (204°C)
 Viton

 500°F (260°C)
 Silicone
- 4 Model 20-211 drain is installed on all AKS housings. Maximum operating pressure for the 20-211 drain is 400 psig.
- 5 Differential Pressure Indicator and Auto-

matic Drain are not included with AHC and AKH Assemblies. Series AHC Assemblies are equipped with internal support cores and one set of filter cartridges.

6 ANSI Flange Classes:

AKH Series: 300 lbs. R.F.S.O. AHC Series: 600 lbs. R.F.S.O.

- 7 Dimensions are height x width x center of flange-to-floor height.
- *Closure Abbreviations:
- SD: Screw type closure with Buna N "O" ring
- FSO: Flat (flanged) top with swing bolts and Buna N "O" ring.

Ordering Information													
For assistance, call toll-free at 1-800-343-4048 8AM to 5PM Eastern Time													
Automatic Differential Filter Cartridges Model Float Drain Pressure Indicator (5) No. Required Box of 10 Cartridges (8)													
AHC-0180-DX			1	200-80-DX									
AKH-0280-DX	20-211 (13)		2	200-80-DX									
AHC-0280-DX		_	2	200-80-DX									
AKH-0480-DX	20-211 (13)	_	4	200-80-DX									
AHC-0480-DX	_	_	4	200-80-DX									
AKS-0280-DX	20-211 or 20-440 (13)		2	200-80-🗆									
AKS-0480-DX	20-211 or 20-440 (13)		4	200-80-□									

Notes

- 8 To order filter cartridges, indicate Grade by putting appropriate letters after size designation. For example, to order Grade DX cartridges for KS-0280-3 housing, order 200-80-DX. Microfibre Filter Cartridges are sold in boxes of 10.
- 9 Vessel is ASME Section VIII, Division 1 code stamped for rated pressure at 200°F. Maximum pressure ratings are for temperatures to 200°F. Please consult factory for maximum pressure ratings at elevated temperatures.
- 10 All dimensions are approximate. Request certified drawing for installation dimensions.
- 11 Requires element retainer #27900, one for each cartridge. Order separately.
- 12 All flanges are ANSI 150#RFSO.
- 13 20-211 Auto Float Drain, 20-440 Auto Electric Solenoid Drain.



153

6" Through 10" Line Size Filters

Principal Sp	ecifications	;								
Model	Port Size Flange (7)	Closure Type*	Maximum Temperature ((3)	Maximum Pressure			Dir	nensions (8)	Flange to Flange Dimension
AKH-0880-[]	6"	FS0	250°F (121°C))	665 psig	560	lbs.(254 kg)		'h x 25"w x 8.5" 19cm x 64cm x 22cm)	24.75" (63cm)
AHC-0880-[]	6"	SD	130°F (54°C)		1440 psig	980	lbs.(445 kg)	54	"h x 25"w x 18" 17cm x 64cm x 46cm)	24.75" (63cm)
AKH-1480-[]	8"	FS0	250°F (121°C))	665 psig	1120) lbs.(508 kg)	54	"h x 34"w x 16" 17cm x 86cm x 41cm)	34" (86cm)
AKH-2280-[]	10"	FS0	250°F (121°C))	665 psig	1430) lbs.(649 kg)	57	'h x 36"w x 17" -5cm x 91cm x 43cm)	36" (91 cm)
Model	Port Size Flange (13)	Materials of Construction		Maxim Tempe		Maximum Pressure (10	Shipping) Weight		Dimensions (8, 11)	Flange to Flange Dimension
AKS-0880-[]	6"	316SS Housing,	Viton Seals	200°F ((93°C)	200 psig	360 lbs.(16	3 kg)	38"h x 24.75"w x 7.5" (97cm x 63cm x 19cm)	24.75" (63cm)
AKS-1480-[]	8"	316SS Housing,	Viton Seals	200°F ((93°C)	200 psig	590 lbs.(26	8 kg)	54"h x 34"w x 16.25" (137cm x 86cm x 41cm)	34" (86cm)
AKS-2280-[]	10"	316SS Housing,	Viton Seals	200°F ((93°C)	200 psig	880 lbs.(40	0 kg)	56"h x 36"w x 17.25" (142cm x 91cm x 44cm)	36" (91cm)

Ordering Information				
For assistance, call toll-free	e at 1-800-343-4048 8AM to 5PM E	astern Time		
Model	Automatic Float Drain	Differential Pressure Indicator (5)	Filter Cartridges No. Required	Box of 10 Cartridges
AKH-0880-DX	20-211 (4)		8	200-80-DX
AHC-0880-DX			8	200-80-DX
AKC-1480-DX	20-211	41-071	14	200-80-DX
AKC-2280-DX	20-211	41-071	22	200-80-DX
AKS-0880-DX or BX	20-211 or 20-440 (14)		8	200-80-DX or BX
AKS-1480-DX or BX	20-211 or 20-440 (14)		14	200-80-DX or BX
AKS-2280-DX or BX	20-211 or 20-440 (14)	_	22	200-80-DX or BX



Flow Rates

High Pressure Filter Housings

Flow Rate	at 2 psi D	rop at l	ndicated L	ine Pre	ssure with	200-80	-DX filter	Cartridg	jes					
Assembly	40 MM SCFD	psig SCFM	100 MM SCFD		200 MM SCFD	psig SCFM	400 p MM SCFD	•	600 p MM SCFD	•	1000 MM SCFD		1400 MM SCFD	
AHC-0180	0.8	595	1.8	1250	3.3	2340	6.5	4515	9.4	6700	15.9	11050	22.2	15400
AKH-0280 AHC-0280	1.7	1190	3.6	2500	6.7	4680	13.0	9030	19.2	13400	31.8	22100	44.4	30800
AKH-0480 AHC-0480	3.5	2430	7.3	5100	13.8	9550	26.5	18400	39.5	27300	64.9	45100	90.5	62900
AKH-0880 AHC-0880	7.0	4910	14.8	10300	27.8	19300	53.6	37200	79.5	55200	131	91100	183	127000
AKH-1480	12.3	8580	25.9	18000	48.5	33700	93.6	65050	139	96400	_	_	_	_
AKH-2280	19.2	13350	40.3	28000	75.4	52400	145	101000	216	150000	_	_	_	_

MM SCFD = Million Standard Cubic Feet per Day SCFM = Standard Cubic Feet per Minute

Stainless Steel Filter Housings

Assembly	Grade	2 psig	20 psig	60 psig	80 psig	100 psig	150 psig	200 psig
AKS-0280	DX	364	760	1630	2065	2500	3600	4680
	ВХ	90	190	400	510	620	890	1160
AKS-0480	DX	760	1540	3320	4210	5100	7300	9550
	ВХ	180	380	810	1025	1240	1780	2320
AKS-0880	DX	1500	3120	6710	8505	10300	14800	19300
	ВХ	360	750	1620	2050	2480	3560	4640
AKS-1480	DX	2620	5450	11720	14860	18000	25800	33700
	ВХ	630	1310	2830	3585	4340	6230	8120
AKS-2280	DX	4080	8470	18230	23115	28000	40200	52400
	ВХ	1000	2070	4460	5655	6850	9840	12800



Low Pressure Natural Gas Filters

New LF/FF Series Multiple Cartridge Filter Assemblies

These filter assemblies provide high efficiency filtration of gas at very high flow rates. With inlet and outlet ports accommodating 3" to 10" pipe sizes, the new LF/ FF Series housings are capable of flow rates up to a maximum capacity of 37,350 SCFM at 100 psig. The standard carbon steel units, which are generally in stock (through 6" line sizes), have pressure ratings up to 250 psig.



All LF/FF series housings are ASME Code Stamped for the rated maximum operating pressure. All FF Series vessels have built-in legs for floor mounting. Selected models have swing bolt enclosures for easy access to the internals. The filter cartridges in all models are sealed by tightening the threaded retainer cap onto the rigid tie rod, ensuring a leak tight seal on both ends of the cartridge.

Each assembly is equipped with a stainless steel automatic float drain, differential pressure indicator, and a set of filter cartridges (except where noted).

High Flow Coalescing Filter Media HFC Grade

Efficiency: 99.5% @ 0.5 micron

Balston's HFC media consists of two layers. The outer layer features a dense matrix of glass fibers. It provides highly efficient coalescing aerosol removal and very low pressure drop. The inner layer, or initial stage of filtration, effectively traps dirt particles,



protecting and extending the life of the outer layer. A metal retainer is used for strength and stability. This media is used in bulk coalescing applications and when relatively high efficiency and low pressure drop are required.

High Efficiency Coalescing Media HEC Grade

Efficiency: 99.97% @ 0.3 micron

Air Flow: Inside to Outside

This coalescing element is composed of an epoxy saturated borosilicate glass micro-fiber tube. The HEC grade filter has a pleated cellulose inner layer as a built-in prefilter. This element is metal retained for added strength, and includes a synthetic fabric layer.



HEC filters are used when "total removal of liquid aerosols and suspended fines" is required. Because of its overall performance characteristics, this grade is most often recommended.

Benefits

Lower Change out/Labor Costs Heat and Chemical Resistant No Wet Zone Oleophobic/Hydrophobic High Burst Strength

Lower Energy Costs High Dirt Holding Capacity



Low Pressure Natural Gas Filters

HFC MEDIA Max. Rated Flows (SCFM) at Various Operating Pressures (0.25 psi pressure drop)

Model Number	2 PSIG	20 PSIG	40 PSIG	80 PSIG	100 PSIG	125 PSIG	150 PSIG	175 PSIG	200 PSIG	220 PSIG	250 PSIG
ALN3-0128-HFC	363	753	1187	2056	2490	3033	3575	4118	4661	5095	5746
ALF3-0128-HFC	363	753	1187	2056	2490	3033	3575	4118	4661	5095	5746
ALF4-0125-HFC	483	1004	1583	2741	3320	4044	4767	5491	6215	6793	N/A
ALF6-0136-HFC	725	1507	2375	4112	4980	6065	7151	8236	9322	10190	N/A
ALF6-0336-HFC	1088	2260	3562	6167	7470	9098	10726	12354	13983	15285	N/A
AFN3-0128-HFC	363	753	1187	2056	2490	3033	3575	4118	4661	5095	5746
AFF3-0128-HFC	363	753	1187	2056	2490	3033	3575	4118	4661	5095	5746
AFF4-0125-HFC	483	1004	1583	2741	3320	4044	4767	5491	6215	6793	N/A
AFF6-0136-HFC	725	1507	2375	4112	4980	6065	7151	8236	9322	10190	11493
AFF6-0328-HFC	1088	2260	3562	6167	7470	9098	10726	12354	13983	15285	N/A
AFF8-0428-HFC	1450	3013	4750	8223	9960	12131	14302	16472	18644	20380	22984
AFF10-0728-HFC	2538	5273	8312	14391	17430	21229	25028	28826	32627	35665	40222
AFF12-1128-HFC	3988	8286	13062	22614	27390	33360	39330	45298	51271	56045	63206
AFF16-1528-HFC	5438	11299	17812	30837	37350	45491	53632	61770	69915	76425	86190

HEC MEDIA Max. Rated Flows (SCFM) at Various Operating Pressures (1.5 psi pressure drop)


Model Number	2 PSIG	20 PSIG	40 PSIG	80 PSIG	100 PSIG	125 PSIG	150 PSIG	175 PSIG	200 PSIG	220 PSIG	250 PSIG
ALN3-0128-HEC	218	454	715	1238	1500	1827	2154	2481	2808	3069	3462
ALF3-0128-HEC	218	454	715	1238	1500	1827	2154	2481	2808	3069	3462
ALF4-0125-HEC	219	605	954	1651	2000	2436	2872	3308	3744	4092	N/A
ALF6-0136-HEC	437	908	1431	2477	3000	3654	4308	4962	5616	6139	N/A
ALF6-0328-HEC	654	1362	2145	3714	4500	5481	6462	7443	8424	9207	N/A
AFN3-0128-HEC	218	454	715	1238	1500	1827	2154	2481	2808	3069	3462
AFF3-0128-HEC	218	454	715	1238	1500	1827	2154	2481	2808	3069	3462
AFF4-0125-HEC	291	605	954	1651	2000	2436	2872	3308	3744	4092	N/A
AFF6-0136-HEC	437	908	1431	2477	3000	3654	4308	4962	5616	6139	6923
AFF6-0328-HEC	654	1362	2145	3714	4500	5481	6462	7443	8424	9207	N/A
AFF8-0428-HEC	872	1816	2860	4952	6000	7308	8616	9924	11232	12276	13848
AFF10-0728-HEC	1526	3178	5005	8666	10500	12789	15078	17367	19656	21483	24234
AFF12-1128-HEC	2398	4994	7865	13618	16500	20097	23694	27291	30888	33759	38082
AFF16-1528-HEC	3270	6810	10725	18570	22500	27405	32310	37215	42120	46035	51930

Housing Selection Chart

Model Number	HFC Replacement Element	HEC Replacement Element	Port Size	Port Type	# of Elements	. ^ .
LINE MOUNT VES: ALN3-0128-H?C ALF3-0128-H?C ALF4-0125-H?C ALF6-0136-H?C ALF6-0328-H?C FLOOR MOUNT VE AFN3-0128-H?C AFF3-0128-H?C AFF4-0125-H?C AFF6-0136-H?C AFF6-0328-H?C AFF8-0428-H?C AFF10-0728-H?C AFF12-1128-H?C AFF16-1528-H?C	510-28- HFC 510-28- HFC 850-25- HFC 850-36- HFC 510-28- HFC	510-28-HEC 510-28- HEC 850-25- HEC 850-36- HEC 510-28- HEC 510-28- HEC 850-25- HEC 850-36- HEC 510-28- HEC 510-28- HEC 510-28- HEC 510-28- HEC 510-28- HEC	3 3 4 6 6 3 3 4 6 6 8 10 12	NPT FLANGE FLANGE FLANGE FLANGE FLANGE FLANGE FLANGE FLANGE FLANGE FLANGE FLANGE FLANGE	1 1 1 1 3 1 1 1 1 3 4 7 11 15	



Drawings, Dimensions & Specifications

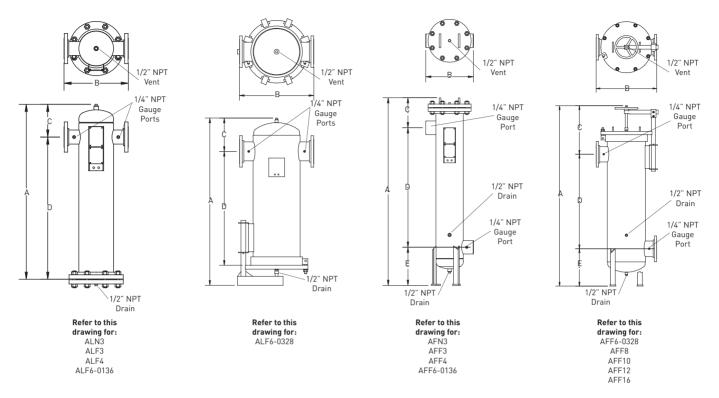

Dimensions	A	В	С	D	E	Element Removal Clearance (Inches/centimeters)	Sump Capacity (gallons/liters)	Weight (pounds/kilograms
ALN3	43.1/109.5	15.0/38.1	7.7/19.5	35.4/89.9	-	28/71.1	0.81/3	190/86
ALF3	43.1/109.5	16.0/40.6	7.7/19.5	35.4/89.9	_	28/71.1	0.81/3	190/86
ALF4	42.7/108.5	20.0/50.8	9.7/24.6	33.0/83.8	-	25/63.5	2.0/7	380/173
ALF6-0136	56.4/143.3	20.0/50.8	11.4/29.0	45.0/114.3	-	36/91.4	2.0/7	380/173
ALF6-0328	57.8/146.8	26.0/66.0	11.0/27.9	39.8/101.1	_	28/71.1	2.0/7	340/155
ALFN3	58.9/149.6	15.0/38.1	9.4/23.8	37.5/95.2	12.0/30.4	28/71.1	1.1/4	190/86
AFF3	58.9/149.6	16.0/40.6	9.4/23.8	37.5/95.2	12.0/30.4	28/71.1	1.2/4	200/91
AFF4	63.3/160.7	20.0/50.8	12.3/31.2	35.0/88.9	16.0/40.6	25/63.5	4.2/16	370/168
AFF6-0136	75.3/191.2	20.0/50.8	12.3/31.2	47.0/119.3	16.0/40.6	36/91.4	3.6/14	410/186
AFF6-0328	77.3/196.3	26.0/66.0	20.8/52.8	40.5/102.8	16.0/40.6	28/71.1	5.0/19	340/155
AFF8	87.3/221.7	30.0/76.2	25.8/65.5	42.5/108.0	19.0/48.3	28/71.1	8.7/33	550/250
AFF10	96.0/243.8	34.0/86.3	28.5/72.4	45.5/115.5	22.0/55.8	28/71.1	14.8/56	750/341
AFF12	101.0/256.5	44.0/111.7	27.5/69.8	47.5/120.6	26.0/66.0	28/71.1	25.5/97	1300/591
AFF16	112.0/28.4	52.0/132.0	32.0/81.3	50.0/127.0	30.0/76.2	28/71.1	56.2/213	1700/773

Materials of Construction

Body: Carbon Steel

Paint: Epoxy Enamel (Gray)

Internals: Epoxy powder painted carbon steel

Seals: Inorganic flange gasket (single element vessels)

Fluorocarbon o-ring (multi element vessels)

Internal Coating: Epoxy enamel

Specifications

Max Pressure: Up to 220-250 PSIG (Consult Flow Chart)

Max Temperature: 225°F(107°C)

Meets A.S.M.E. Code, Section VIII, Division 1 code

stamped for rated pressure.

Note: Consult factory for special requirements



GS Series Membrane Filters

Balston GS Series Membrane Filters

The Balston GS Series Membrane Filter Cartridges combine absolute membrane filtration down to 0.01 μ m, with an integral pre-filter to protect the membrane.

Ideally suited for high purity compressed air and gas requirements, these membrane cartridges are available in several housing configurations shown above.

Use as a Final Filter for:

Ultra-high purity gases
Corrosive or toxic gases
Cylinder gases
Doping gases



Product Features:


- Filtration to 0.01 micron
- · No particle shedding
- Integral prefilter protects the membrane
- Corrosion resistant housings
- Pressure to 5,000 psig
- No particle shedding
- PTFE membrane with glass and fluorocarbon prefilter
- Chemically inert to most gases
- · Easy to install

Specialty Gas Filtration Analytical Gas Filtration Process Gas Filtration Critical Blow Off Applications




0.01 µm Membrane Filters

The GS Membrane Cartridges represent state-of-the-art membrane filtration technology. An integral prefilter, bonded to a porous PTFE membrane, provides the user with extended membrane life, 0.01 µm filtration rating, and, most importantly, zero fiber shedding. The Balston GS Membrane filter also offers excellent chemical compatibility as a result of the inert materials of construction. All of these features combine to make the Balston GS cartridges the ideal choice for critical process gas filtration requirements.

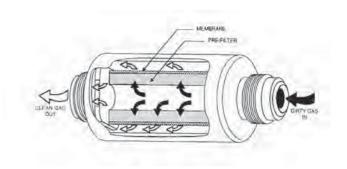

Membrane Life Expectancy Comparison

Balston GS Membrane Cartridges, with their unique integral prefilter, offer up to 18 times the operating life of conventional membrane cartridges (as indicated in the life expectancy comparison below).

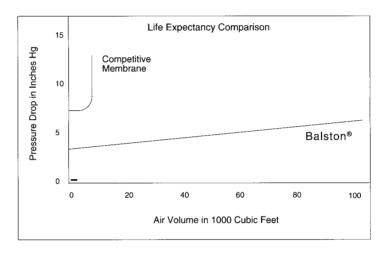

Physical Properties, GS Membrane Cartridges

Temperature Range -40°F to 250°F (-40°C to 121°C)

Maximum pressure differential

across membrane, 20 psi (size code 100 and 200) Inside-to-outside flow: 60 psi (size code 050)

Materials of Construction: Borosilicate glass with

fluorocarbon resin binder prefilter and PTFE membrane

Retention Efficiency: 0.01 μm



Retention Efficiency Rating

The retention efficiencies of the Balston GS Series membrane cartridges were derived by John McCarthy, a staff research scientist at M.I.T. Dr. McCarthy used a submicron particle detection and sizing device to collect and analyze the filter efficiency data. The test procedure consisted of challenging the membrane filter with a sodium chloride aerosol solution which contained aerosol particles in a narrowly defined size range. Downstream from the filter, the effluent gas was evaluated for particulate contaminant size using a condensation nucleus counter.

There was no detectable penetration of 0.01 μm particles through the membrane filters. Bulletin TI-834 details the efficiency rating procedure and experimental results of this study.

Chemical Compatibility								
The GS Series Membrane Filter cartridges are compatible with the following gases (when installed in a stainless steel filter housing with PTFE seals).								
Ammonia	Chlorine (dry)	Hydrogen Bromide						
Air (Compressed)	Diborane	Methylene Chloride						
Argon	Dichlorosilane	Nitrogen						
Arsine	Fluorine (dry)	Nitrous Oxide						
Boron Trichloride	Freon	Phosphorous Oxychloride (dry)						
Carbon Dioxide	Helium	Phosphine						
Carbon Tetrafluoride	Hydrogen	Silane						



Disposable Membrane Assemblies

Disposable Filter Units (DFU's)

Consist of a membrane filter and an integral prefilter, permanently bonded into a plastic housing. DFU's have pressure ratings to 125 psig, and may be installed using a variety of fitting systems.

9933-05-95

Available in a transparent nylon housing, this DFU is an ideal choice for an economical membrane filter for use where its chemical compatibility is suitable.

9922-11-95

This opaque PVDF DFU, with approximately double the membrane area of the 9933-05-95, is used where exceptional chemical compatibility is required.







Model 9922-11-95

Principal Specifications							
Model	9933-05-95	9922-11-95					
Inlet and Outlet Ports Materials of Construction	1" Tube	1" Tube					
Housing	Nylon	PVDF					
Cartridge	PTFE/Glass	PTFE/Glass					
Seals	None	None					
Maximum Temperature	230°F(110°C)	250°F(121°C)					
Maximum Pressure	125 psig	125 psig					
Maximum D Pressure	60 psi	60 psi					
Shipping Weight	0.1 lb (45 g)	0.2 lb (90 g)					
Dimensions	3.25"H x 1.0"W (8cm x 2.5cm)	4.6"H x 1.43"W (12cm x 3.6cm)					

Ordering Information					
For assistance, call toll-free at 1-800-343-4048					
Filter Assembly (1) Complete with Membrane Filter Cartridge	Description				
9933-05-95	In-line Nylon disposable filter with GS Membrane Cartridge				
9922-11-95	In-Line disposable PVDF filter with GS Membrane Cartridge				

1 Disposable Filter Units are sold in boxes of 3 or 10. For example, a box of 3 DFU's in nylon housings, order: 3/9933-05-95. For a box of 10, order: 9933-05-95.



Stainless Steel or PTFE Filter Housings - 1/8" to 1/2" Line Size

9756

Miniature 316 stainless steel filter, with 1/4" NPT in-line ports, 5000 psig rating. The 97S6 has a replaceable membrane cartridge and is an economical alternative when a disposable product is not required.

91S6, 95S6, 95T

Miniature T-Type filters in 316 stainless steel. The 91S6 is rated for 650 psig, the 95S6 is rated for 5000 psig. The 95T is constructed of PTFE, and is rated at 150 psig. The membrane cartridge is changed without breaking the inlet or outlet connections.

31S6, 33S6

Have 1/4" or 1/2" ports, 425 psig rating, can handle a higher gas flow rate, and have greater solids holding capacity than the Type 95 filters.

41S6, 45S6

Are higher flow rate stainless steel filters with 1/4" or 1/2" NPT ports. The Type 45, with stainless steel bowl, has a 250 psig rating.





Model 91S6, 95S6, 95T (95S6 Shown)



Model 31S6, 41S6 (31S6 Shown)



Model 33S6, 45S6 (45S6 Shown)



Membran

0.01 Micron Membrane Filters

Stainless Steel or PTFE Filter Housings - 1/8" to 1/2" Line Size

Principal Specificat	ions					
Model	9786	91S6	95S6	95T	31S6, 33S6	41S6, 45S6
Inlet and Outlet Ports Drain Port Materials of Construction Head Bowl Internals Seals Maximum Temperature Maximum Pressure Shipping Weight Dimensions	1/4" NPT (3) None 316SS 316SS Viton (6) 400°F(204°C) 5000 psig (1) 0.8 lbs (0.4 kg) 1.25"D X 3.1"L	1/8" NPT (2,3) 1/8" NPT 316SS 316SS 316SS PTFE (4) 400°F(204°C) 650 psig (1) 1.2 lbs. (0.5 kg) 1.5"D X 3.7"L	1/8" NPT (2,3) 1/8" NPT 316SS (5) 316SS (5) 316SS (5) PTFE (4) 400°F(204°C) 5000 psig (1) 1.3 lbs. (0.6 kg) 1.8"D X 4"L	1/8" NPT (2,3) 1/8" NPT PTFE (5) PTFE (5) Viton (4,6) 300°F(149°C) 150 psig (1) 0.5 lbs. (0.2 kg) 1.8"D X 4"L	1/2" NPT (2,3) 1/4", 1/8" NPT (7) 316SS 316SS Viton (6) 400°F(204°C) 425 psig (1) 5 lbs. (2.3 kg) 2.25"D X 5.5"L (31S6)	1/2"NPT (2,3) 1/4", 1/8" NPT (7) 316SS 316SS Viton (6) 400°F(204°C) 250 psig (1) 5.5 lbs. (2.5 kg) 2.25"D X 10"L (41S6)
	(3.2cm X 7.9cm)	(3.8cm X 9.4cm)	(4.6cm X 10.2cm)	(4.6cm X 10.2cm)	2.6"D X 4.5"L (33S6) (5.7cm X 14cm) (31S6) (2.6cm X 4.5cm) (33S6)	2.6"D X 9"L (45S6) (5.7cm X 25.4cm)(41S6) (6.6cm X 22.9cm) (45S6)

Ordering Information	Ordering Information									
For assistance, call toll-free at 1-800-343-4048 8AM to 6PM Eastern Time										
Housing Only Model	Membrane Cartridge No. Required	Membrane Cartridges Box of 3	(Order Separately) Box of 10							
97S6	1	GS-3/050-05-95	GS-050-05-95							
91S6	1	GS-3/050-11-95	GS-050-11-95							
95S6	1	GS-3/050-11-95	GS-050-11-95							
95T	1	GS-3/050-11-95	GS-050-11-95							
31S6, 33S6	1	GS-3/100-12-95	GS-100-12-95							
41S6, 45S6 95	1	GS-3/100-25-95	GS-100-25-							

Notes

- 1 Maximum pressure ratings are for temperatures to 200°F (93°C). Please consult factory for maximum pressure ratings at elevated temperatures.
- 2 Also available with 1/4" NPT ports, use designation Type 33S6-1/4 or 45S6-1/4.
- 3 Available with 1/4" socket weld for tubing size 0D ports, use designation 97SW, 95SW, 33SW, 45SW, etc. Please consult factory for special pricing.
- 4 PTFE encapsulated Viton seals are standard.
- 5 Constructed of materials which comply with NACE Specification MR-01-75. Request Certificate of Compliance.
- 6 PTFE encapsulated Viton and other seals are available upon request. Please consult factory.
- 7 Drain port for types 31S6 & 41S6 is 1/4".



High Pressure Membrane Filters - 1/2" Line Size

37/12, 37/25

316 stainless steel T-Type filters, 4000 psig rating. The Model 37 filters are also used when a larger line size or higher flow rate is required.

Principal Specifications						
Model	37/12	37/25				
Inlet and Outlet Ports	1/2" NPT (5)	1/2" NPT (5)				
Drain Port	1/8" NPT	1/8" NPT				
Materials of Construction						
Head	316SS (2)	316SS (2)				
Bowl	316SS (2)	316SS (2)				
Internals	316SS (2)	316SS (2)				
Seals	Viton (4)	Viton (4)				
Maximum Temperature	400°F(204°C)(1)	400°F(204°C)(1)				
Maximum Pressure	4000 psig	4000 psig				
Shipping Weight	6 lb (2.7 kg)	10 lb (4.5 g)				
Dimensions	2.75"Dia X 5.75"L (7cm X 14.6cm)	2.75"Dia X 10.25"L (7cm X 26cm)				



Model 37/12, 37/25 (37/25 Shown)

Ordering Information							
For assistance, call toll-free at 1-800-343-404							
	Membrane Cartridges (Or	rder Separately)					
Housing Only Model	Box of 3	Box of 10					
37/12	GS-3/100-12-95	GS-100-12-95					
37/25	GS-3/100-25-95	GS-100-25-95					

Notes

- 1 Maximum pressure ratings are for temperatures to 200°F (93°C). Please consult factory for maximum pressure ratings at elevated temperatures.
- 2 Constructed of materials which comply with NACE Specification MR-01-75. Request Certificate of Compliance.
- 3 Available with 1/2" socket weld for tubing size OD ports, use designation 37/12SW, 37/25SW.
- 4 PTFE encapsulated Viton and other seals are available upon request. Please consult factory.
- 5 For 1" line sizes up to 800 psig, consult factory.



Flow Rates														
Filter Housing	Flow Ra	ates, SCFN 20	l, at 2 psi l 60	Drop at Inc 100	dicated Li 125	ne Pressu 150	ıre (psig) 200	300	500	1000	2000	3000	4000	5000
9933-05-95	0.5	1.0	1.5	2.0	2.2	_	_	_	_	_	_	_	_	_
9922-11-95	0.5	1.0	1.7	2.2	2.3	_	_	_	_	_	_	_	_	_
91S6	0.5	1.0	1.8	2.5	2.8	3.0	3.4	4.1	5.3	_	_	_	_	_
95S6	0.5	1.0	1.8	2.5	2.8	3.0	3.4	4.1	5.3	7.4	10.5	12.9	14.8	16.5
95T	0.5	1.0	1.8	2.5	2.8	3.0	_	_	_	_	_	_	_	_
97S6	0.5	1.0	1.7	2.3	2.5	2.7	3.1	3.7	4.8	6.7	9.4	11.5	13.3	14.9
31S6, 33S6	4.0	0.4	4.0	7.0	7.7	0.4	0.0	11.0	_	_	_	_	_	-
37/12	1.0	2.1	4.6	7.0	7.7	8.4	9.6	11.6	14.8	20.8	29.3	35.9	41.4	-
41S6, 45S6	2.0	0.0	12.0	20.0	22.0	24.0	07.4	_	_	_	_	_	_	_
37/25	3.0	6.0	13.0	20.0	22.0	24.0	27.4	33.1	42.4	59.5	83.8	102.0	118.0	_



Filters and Dryers for the Food Industry

Balston Filters

Steam Filters

Balston Steam Filters are in full compliance with the requirements of the US Food, Drug, and Cosmetic Act. These filters may be used with steam, air, and other gases which directly contact food and food ingredients, including milk, alcoholic, and non-alcoholic liquids.

Sterile Air Filters

Balston Stainless Steel Compressed Air Filter Assemblies safeguard your operations from rust, pipescale, water, oil, and organisms usually found in compressed air. These filters will remove contaminants at a very high efficiency - up to 99.99% for 0.01 micron particles and droplets. Liquid releases from the filter cartridge to an automatic drain as rapidly as it enters the filter. This allows the filter to continue removing liquids for an unlimited time without loss of efficiency or flow capacity. The final stage of filtration removes all viable organisms with an efficiency rating of 99.9999+% at 0.01 micron. Select 1/4" to 1" line filters are constructed. of 304 stainless steel and are designed to hold up to the harshest environments.



Product Features:

Steam Filters


- Remove 98+% of 0.1 micron particles and remove liquid condensate at same efficiency
- Remove essentially all nonvolatile boiler feedwater chemicals
- Comply with USFDA, USDA, Health Protection Branch of Health and Welfare Canada, and 3-A accepted practices

Culinary Quality Steam

Sterile Air Filters

- All 304 stainless steel construction, ideal for standing up to aggressive washdown chemicals
- Remove 99.99% of 0.01 micron particles of oil, water, and dirt
- USDA/FSIS accepted for use in federally inspected meat and poultry plants

Sterile Air Filtration

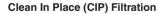



Steam Filters

Balston Series SR Filters are in full compliance with the requirements of the US Food, Drug and Cosmetic Act. They also meet the regulations for Indirect Food Additives used as Basic Components for Repeated Use Food Contact Surfaces as specified in 21 CFR Part 177, and Current Good Manufacturing Practices, 21 CFR Part 110. These filters have been accepted by the USDA for use in federally inspected meat and poultry plants. Balston Steam Filters are in full compliance with the 3A Accepted Practices (Number 609-04) for producing steam of culinary quality. They are also in full compliance with the requirements of the Health Protection Branch of Health and Welfare Canada.


Benefits

Balston Steam Filters eliminate particulate contamination of food products caused by direct contact with dirty steam. Other benefits include: reduction in steam condensate mixing with food products when steam is used for agitating, mixing, or cooking; eliminate taste and odor problems by reducing boiler feedwater carryover; Reduced maintenance requirements.

How it Works

The steam filter contains a patented Microfibre® filter cartridge in a rugged stainless steel housing designed specifically for steam service.

As shown in the cutaway drawing, steam enters the housing into an expansion chamber, where much of the condensate is knocked out of the steam as a result of the abrupt change in flow direction and velocity. The steam then flows upward in the housing, through the Balston grade SR microfibre filter cartridge (outside-to-inside flow), and then downward to the exit port. The grade SR filter cartridge, rated at 98+% efficiency for 0.1 micron and larger particles, removes essentially all the suspended solid particles and the remaining water droplets. The water draining from the filter cartridge and the expansion chamber is automatically removed from the housing by the automatic condensate drain.

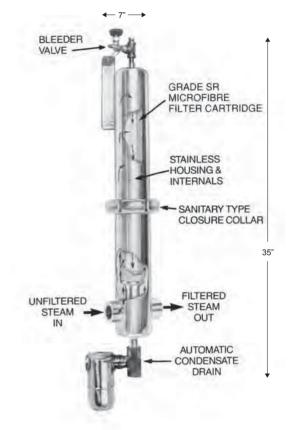

Model 23/75SR



Model SP6-23/75SR



Steam Filters

Recommended Steam Filters

For 3/4" and 1" Steam Lines

Model 23/75SR is recommended in smaller lines with a steam flow of up to 500 lbs. per hour. The filter is complete with filter cartridge, steam trap, and bleeder valve.

For 1-1/2" Steam Lines

Model SP3-23/75SR is recommended. It will filter up to 1500 lbs. of steam per hour. Each of the three filters has its own steam trap. A master trap disposes of most condensate before it reaches the filters. Manifolds can be connected to flow from left to right or right to left.

For 2" Steam Lines

Model SP4-23/75SR is recommended. It will filter up to 2000 lbs. of steam per hour. The Model SP6-23/75SR will filter up to 3000 lbs of steam per hour. Steam trap and manifold features are the same as the Model SP3-23/75.

Notes:

- 1 Each SP3, SP4, SP6 filter is supplied mounted on a stand.
- 2 Constructed of food grade EPR.
- 3 Each Steam Filter Assembly is supplied with filter cartridges installed.

Principal Specifications								
Model	23/75SR	SP2-23/75R	SP3-23/75SR	SP4-23/75SR	SP6-23/75SR			
Port Size	1" NPT	1 1/2" NPT	1 1/2" NPT	2" NPT	2" NPT			
Max Pressure	125 psig	125 psig	125 psig	125 psig	125 psig			
Flow Rate	500 lbs/hr	1000 lbs/hr	1500 lbs/hr	2000 lbs/hr	3000 lbs/hr			
Materials of Construction	304 SS	304 SS	304 SS	304 SS	304 SS			
Seals	EPR (2)	EPR (2)	EPR (2)	EPR (2)	EPR (2)			
Shipping Wt	26 lbs. (12 kg)	Approx. 110 lbs	190 lbs. (86 kg)	220 lbs. (100 kg)	280 lbs. (127 kg)			
Dimensions	7"W X 35"L (18cm X 88cm)	22"W X 46"L X 11"D (56cm X 117cm X 28cm)	29"W X 48"L X 21"D (74cm X 122cm X 53cm)	36"W X 48"L X 21"D (91cm X 122cm X 53cm)	50"W X 47.8"L X 22"E (74cm X 122cm X 53cm			

Ordering Infor	Ordering Information								
For assistance, call toll-free at 1-800-343-4048 8AM to 5PM Eastern Time									
Model	23/75SR	SP2-23/75SR	SP3-23/75SR	SP4-23/75SR	SP6-23/75SR				
Replacement Filter Cartridges									
(Box of 10)	200-75-SR (3)	200-75-SR (3)	200-75-SR (3)	200-75-SR (3)	200-75-SR (3)				
Filter Cartridges per housing	1	2	3	4	6				



Filters for the Food Industry

Stainless Steel Harsh Environment Filters for Food Processing and Packaging

All 304 stainless steel construction, ideal standing up to aggressive washdown chemicals

Remove 99.99% of 0.01 micron particles of oil, water, and dirt from compressed air and other gases

For Sterile Air Requirements:

Remove all viable organisms

USDA/FSIS accepted for use in federally inspected meat and poultry plants

Low pressure drop

Continuously trap and drain liquids

Remove trace oil vapor with adsorbent cartridges



Models 6006 and 6008

Balston® Stainless Steel Compressed Air Filter Assemblies

Protect your equipment and delicate instruments from the dirt, water, and oil usually found in compressed air and other gases. These filters will remove contaminants at a very high efficiency - up to 99.99% for 0.01 micron particles and droplets. Liquid releases from the filter cartridge to an automatic drain as rapidly as it enters the filter. This allows the filter to continue removing liquids for an unlimited time without loss of efficiency for flow capacity. Select 1/4" to 1" line filters are constructed of 304 stainless steel and are designed to hold up to the harshest environments.



Stainless Steel Harsh Environment Filters for Food Processing and Packaging

Filter Cartridge Description

General purpose applications such as plant compressed air

Single stage filtration. Use a Grade DX filter cartridge

Instrument air and other critical air requirements

Two stage filtration is necessary. Use a Grade DX followed by a Grade BX filter cartridge. As a general rule, a Grade BX filter cartridge should not be used alone.

Removal of trace compressor oil vapor For rare instances where even a trace amount of oil vapor can cause a problem, three stage filtration is necessary. Use a Grade DX followed by a Grade BX, and a type Cl cartridge.

Physical Properties, Microfibre Filter Cartridges

Temperature Range

-150°F to 300°F (-100°C - 149°C)

Maximum Pressure Differential Across Filter, Inside-to-Outside Flow:

100 psi

Materials of Construction

Borosilicate glass microfibers with fluorocarbon resin binder. Resistant to water, all hydrocarbon and synthetic lubricants.

Retention Efficiency

Grade	Efficiency for 0.01 Micron Particles and Droplets
DX	93%
BX	99.99%

Balston Filter Cartridges

Balston provides two grades of coalescing filter cartridges, Grade DX and Grade BX. Singly or in tandem, these filters satisfy all requirements for removing liquid and solid contaminants from compressed air. Balston also has an activated carbon adsorbent CI-type cartridge for the removal of trace oil vapors from a compressed air line. The activated carbon cartridge is Grade 000.

How to Select the Filter Cartridge and Housing

- 1 Decide which grade(s) of filter cartridges fits the application (see selection boxes at left).
- Select the filter housing with a port size equal to the line size where the filter is to be located.
- For a new installation in which the line size has yet to be selected, determine the gas flow rate and pressure at the point where the filter will be located, and then refer to the flow chart on the reverse side of this data sheet. NOTE: The filter port size must be equal to or larger than the line size (when specified).

How to Order the Filter Assembly

- Build your own custom filter assembly using the guideline matrix on Page 170 and specify your model number. Example: 1/2" filter with DPI and Auto Drain with Grade DX Filter = 6004N-01A-DX.
- Each assembly is shipped with the filter cartridge installed. To order additional filter cartridges, indicate the model number of the cartridges, and the grade. Examples 050-05-DX, 050-05-BX. The grade used for Type CI cartridges is 000 (CI-100-12-000).

Note: Assemblies with CI Cartridges are shipped with the adsorbent cartridge wrapped separately. This shipping method prolongs the life of the cartridge.



Stainless Steel Harsh Environment Filters 1/4" to 1" Line Size

Models 6102, 6002, 6904

The 6002 series models are 1/4" line size filters designed for lower flow systems and installations with space limitations. Models 6102 and 6002 are offered with two drain options: a manual drain or an auto float drain, for maintenance-free operation. Model 6904 offers 1/2" inlet and outlet connections for applications requiring 1/2" pipe with space limitations.

Model 6004

The 6004 series models are 1/2" line size filters designed for moderate flow rate systems. This series has increased liquid holding capacity, which safeguards sensitive end use points from system upsets and morning start ups.

Models 6006 and 6008

The 6006 and 6008 series models are 3/4" and 1" line size filters respectively. These are designed for high flow rate systems servicing multiple end use points. These are also offered with a high capacity auto float drain option.



Models 6102, 6002, 6904

Model 6004




Models 6006 and 6008

How to Order the Filter Assembly*

Build your own custom filter assembly using the guideline matrix below and specify your model number. Example: 1/2" filter with Auto Drain and Grade DX Filter = 6004N-0A1-DX.

*Consult Factory. Not all configurations are available.

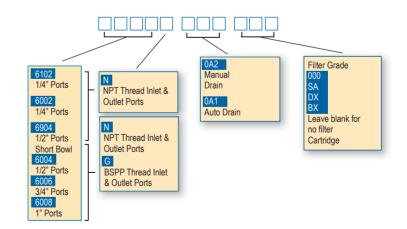



Stainless Steel Harsh Environment Filters 1/4" to 1" Line Size

Flow Rates

Filter Housing Model	Port Size	Size Cartridge Charts in each product data sheet for maximum pressure rating of each h									
			2	20	40	80	100	125	150	200	250
6102N	1/4"	DX	13.5	8	11	20	25	30	36		
		BX	1	2	3.5	5.7	6.8	8	10		
6002N	1/4"	DX	9	19	39	51	63	76	90	117	145
6904N	1/2"	BX	3	8	11	21	25	31	36	47	58
		CI	2	5	7	12	15	18	22	28	35
		SA		8	11	21	25	31	36		
6004N	1/2"	DX	19	41	65	113	137	166	196	257	316
		BX	9	19	30	51	63	76	90	117	145
		CI	6	12	19	32	39	48	56	73	90
		SA		19	30	51	63	76	90		
6006N	3/4"	DX	37	78	123	214	259	315	371	484	596
		BX	10	21	34	56	70	85	101	131	162
		CI	8	16	26	44	53	65	76	99	122
		SA		21	34	56	70	85	101		
6008N	1"	DX	55	115	181	314	380	463	546	711	877
		BX	11	23	37	64	77	94	111	144	178
		CI	10	20	32	56	67	82	96	125	154
		SA		23	37	64	77	94	111		

Sterile Air Filters

Balston grade SA filter cartridges, rated at 99.9999+% efficiency for 0.01 micron particles, is at least 30 times better than the accepted standard for sterile air filters developed by independent research organizations in the U.S. and U.K. (request bulletin TI-105A for a detailed discussion on Balston filter efficiency rating procedure, and Bulletin TI-935 for an independent test report on balstonSterile Air Filters). Balston Sterile Air Filters are in full compliance with the requirements of the FDA.

Steam Sterilization Procedure

In installations where the sterile air filter requires steam sterilization, we recommend the following procedures:

The steam sterilization pressure should not exceed 60 psig. Preferably, it should be held to 40 psig or less. A typical sterilization cycle is 30 psig steam for 30 minutes. Steaming time can be increased as desired without harm to the filter cartridges. The steam flow should not exceed the normal air flow for the unit. To ensure no buildup of condensate in the housing, condensate should be drained from the filter by a condensate drain valve during the steaming process. The cleanliness of the steam is an important factor influencing the life of the Sterile Air Filter cartridges. Parker strongly recommends using Model 23 Steam Filters to ensure optimum operating life. When autoclaving, the Grade SA filter cartridges will tolerate temperatures to 300°F (149°C) in dry gas. Viton or other heat resistant seals should be used in the housing.



Stainless Steel Harsh Environment Filters

Model	6102	6002	6904	6004	6006	6008
Port Size	1/4" NPT	1/4" NPT	1/2" NPT	1/2" NPT	3/4" NPT	1" NPT
Materials of Construction						
Head	316 Stainless Steel	304 Stainless Steel -				→
Bowl	316 Stainless Steel	304 Stainless Steel -				→
Internals	Acetal	Stainless Steel -				→
Seals	Viton	Buna-N Food Grade -				→
Maximum Temperature	140°F (60°C) (1)	120°F (49°C) (1) ——				→
Maximum Pressure	150 psig (2)	175 psig (2)				→
Minimum Pressure	15 psig (3)	15 psig (3) ———				→
Shipping Weight	3.5 lbs.	3.5 lbs.	3.5 lbs.	4.0 lbs.	11 lbs.	12 lbs.
Dimensions	1.5"W x 4.2"L	3"W X 7"L	3"W X 7"L	3"W X 10"L	4"W X 10"L	4"W X 12"L
	(3.8cm x 11.7cm)	(7cm X 18cm)	(7cm X 18cm)	(7cm X 25cm)	(10cm X 25cm)	(10cm X 30cm

perature with manual drain is 275°F.

1 Max. temperature with auto drain Max. tem- 2 Max. pressure with auto drain. Max. pressure with manual drain is 250 psi.

3 Required for proper operation of auto drain.

Assembly Ordering Information						
Model P/N	Filter Tube	Drain (Manual)	Drain (Auto. Float)	Mounting Bracket (stainless steel)		
6102N-0A0-(?X)	070-063-(?X)	SAP05481	N/A	N/A		
6102N-0A1-(?X)	070-063-(?X)	N/A	C02-2392	N/A		
6002N-0A2-(?X)	100-12-(?X)	C01-0108	N/A	C01-0094		
6002N-0A1-(?X)	100-12-(?X)	N/A	C01-0109	C01-0094		
6002N-0A2-SA	100-12-SA	C01-0108	N/A	C01-0094		
002N-0A2-000	CI-100-12-000	C01-0108	N/A	C01-0094		
6904N-0A2-(?X)	100-12-(?X)	C01-0108	N/A	C01-0094		
904N-0A1-(?X)	100-12-(?X)	N/A	C01-0109	C01-0094		
6904N-0A2-SA	100-12-SA	C01-0108	N/A	C01-0094		
904N-0A2-000	CI-100-12-000	C01-0108	N/A	C01-0094		
6004N-0A2-(?X)	100-18-(?X)	C01-0108	N/A	C01-0094		
6004N-0A1-(?X)	100-18-(?X)	N/A	C01-0109	C01-0094		
6004N-0A2-SA	100-18-SA	C01-0108	N/A	C01-0094		
6004N-0A2-000	CI-100-18-000	C01-0108	N/A	C01-0094		
6006N-0A2-(?X)	200-176-(?X)	C01-0108	N/A	C01-0094		
6006N-0A1-(?X)	200-176-(?X)	N/A	C01-0109	C01-0094		
6006N-0A2-SA	200-176-SA	C01-0108	N/A	C01-0094		
6006N-0A2-000	200-176-000	C01-0108	N/A	C01-0094		
6008N-0A2-(?X)	200-185-(?X)	C01-0108	N/A	C01-0094		
6008N-0A1-(?X)	200-185-(?X)	N/A	C01-0109	C01-0094		
6008N-0A2-SA	200-185-SA	C01-0108	N/A	C01-0094		
6008N-0A2-000	200-185-000	C01-0108	N/A	C01-0094		
Replacement Filter Cartridge (Ordering Information					
Model P/N	6102	6002/6904	6004	6006	6008	
Replacement Filter Cartridges						
Number required	1	1	1	1	1	
Box of 5	5/070-063-(?X)	5/100-12-(?X)	5/100-18-(?X)	5/200-176-(?X)	5/200-185-(?X)	
Box of 10	070-063-(?X)	100-12-(?X)	100-18-(?X)	200-176-(?X)	200-185-(?X)	
Box of 10	070-063-SA	100-12-SA	100-18-SA	200-176-SA	200-185-SA	
CI Cartridges (box of 1)		CI100-12-000	CI100-18-000	CI200-176-000	CI200-185-000	



Filters for the Food Industry

Balston 2 Stage Compressed Air Filter Systems

Full-featured with differential pressure indicators, auto drains, sight glasses, pressure relief valve, and bayonet bowl-to-head connection

Lifetime (20 year) warranty

Continuously trap and drain liquids

Remove 99.99% of 0.01 micron particles of oil, water, and dirt from compressed air and other gases

USDA accepted for use in federally inspected meat and poultry plants

Low pressure drop

Applications:

These filters are ideal for safeguarding critical production equipment from corrosive compressor condensate that can cause catastrophic failures and unexpected downtime. Ideal applications are:

- Instrumentation
- Air actuators and air cylinders
- Pneumatic packaging machines
- Pneumatic conveyors
- Air operated production equipment
- Air operated lifts

Safeguard your operations from rust, pipescale, water, and oil. The prefilters will remove contaminants at a very high efficiency - up to 93% for 0.01 micron particles and droplets. Liquid releases from the filter cartridge to an automatic drain as rapidly as it enters the filter. This allows the filter to continue removing liquids for an unlimited time without loss of efficiency or flow capacity.

The final stage of filtration removes all remaining contaminates with an efficiency rating of 99.99+% at 0.01 microns. Select 1/4" to 1 1/2" line filters are constructed of aluminum with a durable powder coating designed to hold up to the dirtiest compressed air systems.

The Parker Balston 2 stage filter systems offer the best protection to all your pneumatic equipment and instrumentation. These high efficiency filtration systems will eliminate costly maintenance and unexpected downtime due to contaminated compressed air.



Balston 2000 Series

The Balston filter performance complies with several of the international standards as written in ISO8573-1 which is fast becoming the industry standard method for specifying compressed air purity. The following diagrams illustrate the various classes of purity that can be achieved by using the Balston grade DX filter media or BX media or a combination of both.

Explanation for 2 Stage Compressed Air Filter System

1st Stage: Removal of large quantities of oil, water, **Grade DX** and dirt from compressed air. Prefilter to


Grade BX


2nd Stage: Complete removal of trace quantities of oil, Grade BX water, and dirt down to 0.01 microns.

	Solid			W	/ater	Oil	
Class	Maximum Particle Size (micron)	Maxii Concen ppm (r	tration		kimum e Dewpoint (°C)		imum ntration (mg/m³)
1	0.1	.08	(0.1)	-94	(-70)	.008	(0.01)
2	1	.8	(1)	-40	(-40)		(0.1)
3	5	4.2	(5)	-4	(-20)	.83	(1)
4	15	6.7	(8)	37	(+3)	4.2	(5)
5	40	8.3	(10)	45	(+7)	21	(25)
6	-	-	•	50	(+10)	-	-


ISO Class 1

ISO Class Example 1 Solid 4 Water 1 (

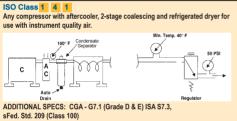

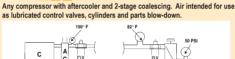

ADDITIONAL SPECS: Mil. Std. 282 H.E.P.A., U.S.P.H.S. 3A accepted particles for milk.

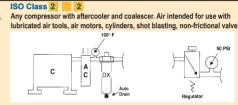

ADDITIONAL SPECS: CGA - G7.1 (Grades A & Ba1)

Flow Rates

Filter Housing Model	Port Size	Filter Cartridge Grade		ites (SCFM), in each prod						l Specificati sing	on
			2	20	40	80	100	125	150	200	250
2A-2002N-3B1	1/4"	DX	9	19	39	51	63	76	90	117	145
2A-2003N-3B1 2A-2004N-3B1	3/8"	ВХ	3	8	11	21	25	31	36	47	58
2A-2104N-3B1	1/2"	DX BX	19 9	41 19	65 30	113 51	137 63	166 76	196 90	257 117	316 145
2A-2206N-3B1	3/4"	DX BX	37 10	78 21	123 34	214 56	259 70	315 85	371 101	484 131	596 162
2A-2208N-3B1	1"	DX BX	55 11	115 23	181 37	314 64	380 77	463 94	546 111	711 144	877 178
2A-2312N-3B1	1 1/2"	DX BX	98 22	203 46	319 74	554 129	670 155	816 189	963 223	1254 290	1546 358





Model	2A-2002, 2003, 2004	2A-2104	2A-2206	2A-2208	2A-2312
Port Size	1/4" NPT	1/2" NPT	3/4" NPT	1" NPT	1.5" NPT
Materials of Construction					
Head	Aluminum				→
Bowl					
Internals	Aluminum				→
Seals	Buna-N Food Grade				→
Maximum Temperature (1)	120°F (49°C) ————				→
Maximum Pressure (2)	175 psig				—
Minimum Pressure (3)	15 psig ————				
Shipping Weight	4.2 lbs.	5 lbs.	11.7 lbs.	11.7 lbs.	27 lbs.
Dimensions	6.25"W X 8.5"L	6.25"W X 11"L	8.3"W X 13"L	8.3"W X 13"L	10.5"W X 17"L

Notes:

- 1 Max. temperature with auto drain
- $2\,$ Max. pressure with auto drain. Max. pressure with manual drain is 250 psi.
- 3 Required for proper operation of auto drain.

Assembly Ordering	g Information	Danlasamant	Ocataldas
Model P/N		Replacement	
2A-2002N-3B1	1/4" 2-Stage (DX, BX) Filter Assembly	Box of 5 5/100-12-DX	Box of 10 100-12-DX
2A-2003N-3B1 2A-2004N-3B1	3/8" 2-Stage (DX, BX) Filter Assembly 1/2" 2-Stage (DX, BX) Filter Assembly	5/100-12-BX	100-12-BX
2A-2104N-3B1	1/2" 2-Stage (DX, BX) Filter Assembly	5/100-18-DX 5/100-18-BX	100-18-DX 100-18-BX
2A-2206N-3B1	3/4" 2-Stage (DX, BX) Filter Assembly	5/200-176-DX 5/200-176-BX	150-19-DX 150-19-BX
2A-2208N-3B1	1" 2-Stage (DX, BX) Stainless Assembly	5/200-185-DX 5/200-185-BX	150-19-DX 150-19-BX
2A-2312N-3B1	1" 2-Stage (DX, BX) Stainless Assembly	5/200-35-DX 5/200-35-BX	200-35-DX 200-35-BX

^{4 2} each of mounting brackets are required for adequate support.



Balston 3 Stage Compressed Air Filter Assemblies

Safeguard your operations from rust, pipescale, water, oil, and organisms. The prefilters will remove contaminants at a very high efficiency - up to 99.99% for 0.01 micron particles and droplets. Liquid releases from the filter cartridge to an automatic drain as rapidly as it enters the filter. This allows the filter to continue removing liquids for an unlimited time without loss of efficiency or flow capacity.

The final stage of filtration removes all viable organisms with an efficiency rating of 99.9999+% at 0.01 microns. Select 1/4" to 1 1/2" aluminum with a durable powder coating designed to hold up to the dirtiest compressed air systems.



Product Features:

- Remove all viable organisms at 99.9999+% @0.01 microns
- Remove 99.99% of 0.01 micron particles of oil, water, and dirt from compressed air and other gases
- USDA accepted for use in federally inspected meat and poultry plants
- Low pressure drop
- Continuously trap and drain liquids

The Application:

Compressed air is contaminated with compressor oil, water condensate, pipe scale and rust all of which provide the ideal environment and means to grow bacteria. This natural occurring contaminate can also effect the taste, appearance and shelf life of food product. The food processing and packaging industry utilizes compressed air extensively throughout their facilities. Compressed air is used to push and propel product, cut and

mix product in addition to packaging product.

Cahoon Farms in Walcott, New York uses Parker Balston three stage filtration systems for all their compressed air and sterile air applications. Cahoon Farms packages fresh sliced apples and cherries, dried apples, and other assorted dried fruits. Compressed air is used extensively throughout the facility servicing pneumatic equipment, slicing and mixing food product, and packaging. The

sterile compressed air applications are filtered to an efficiency of 99.9999+% at 0.01 microns, which is 30 times better than the accepted industry standard. Cahoon Farms safeguards their food product from any possible contamination that could lead to bacteria and mold growth. The investment in these filtration systems ensures Cahoon Farms' products will maintain superior taste, quality and freshness with an extended shelf life.



Sterile Air Filter Rating Information

Balston grade SA filter cartridges, rated at 99.9999+% efficiency for 0.01 micron particles, is at least 30 times better than the accepted standard for sterile air filters developed by independent research organizations in the U.S. and U.K. (request bulletin TI-105 for a detailed discussion on Balston filter efficiency rating procedure, and Bulletin TI-935 for an independent test report on Balston Sterile Air Filters). Balston Sterile Air Filters are in full compliance with the requirements of the FDA.

Explanation	on for 3 Stage Sterile Air System
1st Stage: Grade DX	Removal of large quantities of oil, water, and dirt from compressed air. Prefilter to Grade BX
2nd Stage: Grade BX	Complete removal of trace quantities of oil, water, and dirt down to 0.01 microns.
3rd Stage: Grade SA	Removal of bacteria providing sterile air.

Flow Rates

Filter Housing Port Model Size		Filter Cartridge Grade				rop at indicate sheet for max				ipal Specifica ousing	tion
			2	20	40	80	100	125	150	200	250
3B-2002N-3B1	1/4"	DX	9	19	39	51	63	76	90	117	145
3B-2003N-3B1	3/8"	BX	3	8	11	21	25	31	36	47	58
3B-2004N-3B1	1/2"	SA		8	11	21	25	31	36		
3B-2104N-3B1	1/2"	DX	19	41	65	113	137	166	196	257	316
		BX	9	19	30	51	63	76	90	117	145
		SA		19	30	51	63	76	90		
3B-2206N-3B1	3/4"	DX	37	78	123	214	259	315	371	484	596
		BX	10	21	34	56	70	85	101	131	162
		SA		21	34	56	70	85	101		
3B-2208N-3B1	1"	DX	55	115	181	314	380	463	546	711	877
		BX	11	23	37	64	77	94	111	144	178
		SA		23	37	64	77	94	111		
3B-2312N-3B1	1 1/2"	DX	98	203	319	554	670	816	963	1254	1546
		BX	22	46	74	129	155	189	223	290	358
		SA	16	33	52	91	110	134	158	206	253



Filters for the Food Industry 3 Stage Sterile Air Filter Systems



Model	3B-2002, 2003, 2004	3B-2104	3B-2206	3B-2208	3B-2312
Port Size	1/4" NPT	1/2" NPT	3/4" NPT	1" NPT	1.5" NPT
Materials of Construction					
Head					→
Bowl	Aluminum				→
Internals	Aluminum				→
Seals	Buna-N Food Grade —				→
Maximum Temperature (1)	120°F (49°C) ————				→
Maximum Pressure (2)	175 psig —				→
Minimum Pressure (3)	15 psig ————				-
Shipping Weight	6.75 lbs.	7.5 lbs.	17.5 lbs.	17.5 lbs.	41.25 lbs.
Dimensions	10"W X 11"L	10"W X 11"L	13.5"W X 13"L	13"W X 13"L	17"W X 17"L

1 Max. temperature with auto drain

2 Max. pressure with auto drain. Max. pressure with manual drain is 250 psi.

3 Required for proper operation of auto drain.

sembly Ordering odel P/N	g Information	Replacement	Cartridge
MOUGI I /N		Box of 5	Box of 10
2D 2000N 2D4	1/4" 2 Chara (DV DV CA) Filter Assembly		
3B-2002N-3B1	1/4" 3-Stage (DX, BX, SA) Filter Assembly	5/100-12-DX	100-12-DX
3B-2003N-3B1 3B-2004N-3B1	3/8" 3-Stage (DX, BX, SA) Filter Assembly 1/2" 3-Stage (DX, BX, SA) Filter Assembly	5/100-12-BX 5/100-12-SA	100-12-BX 100-12-SA
DD-2004IN-3D I	1/2 3-Stage (DA, BA, SA) Filler Assembly	3/100-12-3A	100-12-3A
3B-2104N-3B1	1/2" 3-Stage (DX, BX, SA) Filter Assembly	5/100-18-DX	100-18-DX
75 2 10 III 05 1	172 0 dago (571, 571, 671) 1 mor 7000mbly	5/100-18-BX	100-18-BX
		5/100-18-SA	100-18-SA
3B-2206N-3B1	3/4" 3-Stage (DX, BX, SA) Filter Assembly	5/200-176-DX	150-19-DX
		5/200-176-BX	150-19-BX
		5/200-176-SA	150-19-SA
3B-2208N-3B1	1" 3-Stage (DX, BX, SA) Stainless Assembly	5/200-185-DX	150-19-DX
		5/200-185-BX	150-19-BX
		5/200-185-SA	150-19-SA
00 004011 004	4.4/01/0.01 (D)/ D)/ 0.4 (0.1)	5/000 05 DV	000 05 07
3B-2312N-3B1	1 1/2" 3-Stage (DX, BX, SA) Stainless Assembly	5/200-35-DX	200-35-DX
		5/200-35-BX	200-35-BX
		5/200-35-SA	200-35-SA

^{4 2} each of mounting brackets are required for adequate support.



Food Industry

Filters for the Food Industry

3 Stage Sterile Air Filter Systems

Balston Stainless Steel Compressed Air Filter Assemblies

Safeguard your operations from rust, pipescale, water, oil, and organisms. These filters will remove contaminants at a very high efficiency - up to 99.99% for 0.01 micron particles and droplets. Liquid releases from the filter cartridge to an automatic drain as rapidly as it enters the filter. This allows the filter to continue removing liquids for an unlimited time without loss of efficiency or flow capacity.

The final stage of filtration removes all viable organisms with an efficiency rating of 99.9999+ at 0.01 microns. Select 1/4" to 1" line filters are constructed of 304 stainless steel and are designed to hold up to the harshest environments.



Product Features

- All 304 stainless steel construction, ideal standing up to aggressive washdown chemicals
- Low pressure drop
- Remove 99.99% of 0.01 micron particles of oil, water, and dirt from compressed air and other gases
- Remove all viable organisms
- USDA/FSIS accepted for use in federally inspected meat and poulty plants
- Continuously trap and drain liquids

The Application

Compressed air is contaminated with compressor oil, water condensate, pipe scale and rust all of which provide the ideal environment and means to grow bacteria. This natural occurring contaminate can also effect the taste, appearance and shelf life of food product. The food processing and packaging industry utilizes compressed air extensively throughout their facilities. Compressed air is used to push and

propel product, cut and mix product in addition to packaging product.

Cahoon Farms in Walcott, New York uses Parker Balston three stage filtration systems for all their compressed air and sterile air applications. Cahoon Farms packages fresh sliced apples and cherries, dried apples, and other assorted dried fruits. Compressed air is used extensively throughout the facility servicing pneumatic equipment, slicing and mixing food product, and packaging. The sterile

compressed air applications are filtered to an efficiency of 99.9999+% at 0.01 microns which is 30 times better than the accepted industry standard. Cahoon Farms safeguards their food product from any possible contamination that could lead to bacteria and mold growth. The investment in these filtration systems ensures Cahoon Farms' products will maintain superior taste, quality and freshness with an extended shelf life.



Filters for the Food Industry

3 Stage Sterile Air Filter Systems

Sterile Air Filter Rating Information

Balston grade SA filter cartridges, rated at 99.9999+% efficiency for 0.01 micron particles, is at least 30 times better than the accepted standard for sterile air filters developed by independent research organizations in the U.S. and U.K. (request bulletin TI-105 for a detailed discussion on Balston filter efficiency rating procedure, and Bulletin TI-935 for an independent test report on Balston Sterile Air Filters). Balston Sterile Air Filters are in full compliance with the requirements of the FDA.

Explanation for 3 Stage Sterile Air System

1st Stage: Grade DX Removal of large quantities of oil, water, and dirt from compressed air. Prefilter to

Grade BX

2nd Stage: Grade BX Complete removal of trace quantities of oil, water, and dirt down to 0.01 microns.

Removal of bacteria providing sterile air.

3rd Stage: Grade SA

Steam Sterilization Procedure

In installations where the sterile air filter requires steam sterilization, we recommend the following procedures:

The steam sterilization pressure should not exceed 60 psig. Preferably, it should be held to 40 psig or less. A typical sterilization cycle is 30 psig steam for 30 minutes. Steaming time can be increased as desired without harm to the filter cartridges. The steam flow should not exceed the normal air flow for the unit. To ensure no buildup of condensate in the housing, condensate should be drained from the filter by a condensate drain valve during the steaming process. The cleanliness of the steam is an important factor influencing the life of the sterile air filter cartridges. Parker strongly recommends using model 23 steam filters to ensure optimum operating life. When autoclaving, the grade SA filter cartridges will tolerate temperatures to 300°F (149°C) in dry gas. Viton or other heat resistant seals should be used in the housing.

Flow Rates

Filter Housing Model	Port Size	Filter Cartridge Grade	Flow rates (SCFM), at 2 psi drop at indicated line pressure. Refer to Principal Specification Charts in each product data sheet for maximum pressure rating of each housing PSIG								ition
			2	20	40	80	100	125	150	200	250
3B-6002N-0A1	1/4"	DX	9	19	39	51	63	76	90	117	145
3B-6904N-0A1	1/2"	BX	3	8	11	21	25	31	36	47	58
		SA		8	11	21	25	31	36		
3B-6004N-0A1	1/2"	DX	19	41	65	113	137	166	196	257	316
		BX	9	19	30	51	63	76	90	117	145
		SA		19	30	51	63	76	90		
3B-6006N-0A1	3/4"	DX	37	78	123	214	259	315	371	484	596
		BX	10	21	34	56	70	85	101	131	162
		SA		21	34	56	70	85	101		
3B-6008N-0A1	1"	DX	55	115	181	314	380	463	546	711	877
		BX	11	23	37	64	77	94	111	144	178
		SA		23	37	64	77	94	111		



3 Stage Sterile Air Filter Systems



Principal Specifications						
Model	3B-6002	3B-6904	3B-6004	3B-6006	3B-6008	
Port Size	1/4" NPT	1/2" NPT	1/2" NPT	3/4" NPT	1" NPT	
Materials of Construction Head	304 Stainless Steel				→	
Bowl	304 Stainless Steel				→	
Internals	Stainless Steel					
Seals	Buna-N Food Grade				→	
Maximum Temperature (1)	120°F (49°C) —				→	
Maximum Pressure (2)	175 psig ———				→	
Minimum Pressure (3)	15 psig ————				→	
Shipping Weight	10.5 lbs.	10.5 lbs.	11.8 lbs.	33.7 lbs.	34 lbs.	
Dimensions	9"W X 3"D X 8"L	9"W X 3"D X 8"L	9"W X 3"D X 8"L	13"W X 4"D X 11"L	13"W X 4"D X 12"	

Notes:

1 Max. temperature with auto drain Max. tem- 2 Max. pressure with auto drain. Max. presperature with manual drain is 275°F.

sure with manual drain is 250 psi.

3 Required for proper operation of auto drain.

Assembly Ordering Model P/N	g Information Mounting Bracket (stainless steel)	Replacement	Cartridge	Mounting Bracket (stainless steel) (4
		Box of 5	Box of 10	
3B-6002N-0A1	1/4" 3-Stage (DX, BX, SA) Stainless Filter Assembly	5/100-12-DX 5/100-12-BX 5/100-12-SA	100-12-DX 100-12-BX 100-12-SA	C01-0094
B-6904N-0A1	1/2" 3-Stage (DX, BX, SA) Stainless Filter Assembly	5/100-12-DX 5/100-12-BX 5/100-12-SA	100-12-DX 100-12-BX 100-12-SA	C01-0094
BB-6004N-0A1	1/2" 3-Stage (DX, BX, SA) Stainless Filter Assembly	5/100-18-DX 5/100-18-BX 5/100-18-SA	100-18-DX 100-18-BX 100-18-SA	C01-0094
BB-6006N-0A1	3/4" 3-Stage (DX, BX, SA) Stainless Filter Assembly	5/200-176-DX 5/200-176-BX 5/200-176-SA	200-176-DX 200-176-BX 200-176-SA	C01-0094
3B-6008N-0A1	1" 3-Stage (DX, BX, SA) Stainless Filter Assembly	5/200-185-DX 5/200-185-BX 5/200-185-SA	200-185-DX 200-185-BX 200-185-SA	C01-0094

⁴ Two each of mounting brackets are required for adequate support



Sterile Air Filters

Remove all viable organisms

USDA/FSIS accepted for use in federally inspected Meat and Poultry plants

Low pressure drop

Full compliance with FDA requirements




Balston grade SA filter cartridges, rated at 99.9999+% efficiency for 0.01 micron particles, is at least 30 times better than the accepted standard for sterile air filters developed by independent research organizations in the U.S. and U.K. (request Bulletin TI-105A for a detailed discussion on Balston filter efficiency rating procedure, and Bulletin TI-935 for an independent test report on Balston Sterile Air Filters). Balston Sterile Air Filters are in full compliance with the requirements of the FDA.

Here's what one of your colleagues found:

A Balston sterile air filter assembly, consisting of Models 200X Series, was tested at the University of Massachusetts, Department of Food Science and Nutrition, under the direction of Professor David A. Evans, Ph.D.

"This sterile air system produced commercially sterile air and, to the limits of detection, no viable colonies of microorganisms were found".

- Professor David A. Evans, Ph.D.

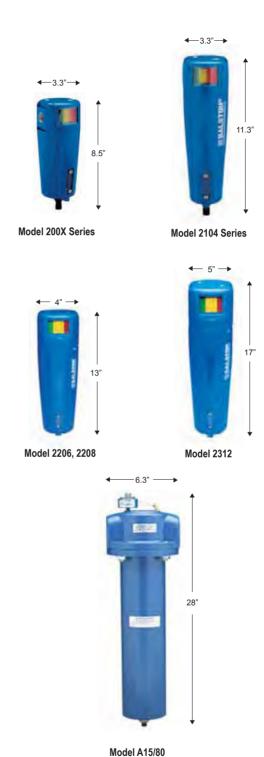



1-800-343-4048

184

Sterile Air Filters

Filter Cartridge Description 2nd Stage: 3rd Stage: Grade DX Grade BX Grade SA For complete removal For removal of bacteria For removal of large of trace quantities of when providing sterile quantities of oil, water, oil, water, and dirt. and dirt from compressed air. Prefilter to Grade BX

Physical Properties, Microfibre Filter Cartridges Temperature Range -150°F to 300°F (-100°C - 149°C) Maximum Pressure Differential Across Filter, Inside-to-Outside Flow: Materials of Construction Borosilicate glass microfibers with fluorocarbon resin binder. Resistant to water, all hydrocarbon and synthetic lubricants.


Retention Efficiency						
Efficiency for 0.01 Micron Particles and Droplets						
93% @ 0.01 μm						
99.99% @ 0.01 μm						
99.9999+% @ 0.01 μm						

Balston Filter Cartridge and Housing Selection

Balston provides two grades of coalescing filter cartridges, Grade DX and Grade BX. Singly or in tandem, these filters satisfy all requirements for removing liquid and solid contaminants from compressed air. These filters are recommended as prefilters in sterile air systems. The Balston Grade SA filter removes bacteria from compressed air. It is the final filter in a sterile air system.

How to Select the Filter Cartridge and Housing

- Decide which grade(s) of filter cartridges fits the application (see selection boxes at left).
- 2 Select the filter housing with a port size equal to the line size where the filter is to be located.
- For a new installation in which the line size has yet to be selected, determine the gas flow rate and pressure at the point where the filter will be located, and then refer to the flow chart on the reverse side of this data sheet. The filter port size must be equal to or larger than the line size (when specified).
- If the sterile air filter assembly requires steam sterilization, stainless steel filter assemblies specifically designed for in-line steam sterilization must be used. These assemblies are identified by the RED print in the flow chart on the next page.

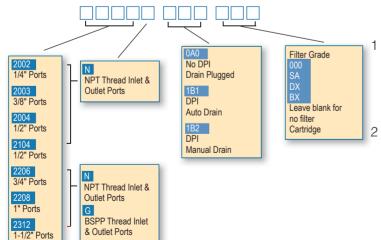

How to Order the Filter Assembly

- Build your own custom filter assembly using the guideline matrix to the left and specify your model number. Example: 1/2" filter with DPI and Auto Drain with Grade DX Filter = 2104N-1B1-DX.
- Each assembly is shipped with the filter cartridge installed. To order additional filter cartridges, indicate the model number of the cartridges, and the grade. Examples 100-12-DX, 100-12-BX, or 100-12-SA, etc.



Sterile Air Filters

Steam Sterilization Procedure

In installations where the sterile air filter requires steam sterilization, we recommend the following procedures:

The steam sterilization pressure should not exceed 60 psig. Preferably, it should be held to 40 psig or less. A typical sterilization cycle is 30 psig steam for 30 minutes. Steaming time can be increased as desired without harm to the filter cartridges. The steam flow should not exceed the normal air flow for the unit. To ensure no buildup of condensate in the housing, condensate should be drained from the filter by a condensate drain valve during the steaming process.

The cleanliness of the steam is an important factor influencing the life of the Sterile Air Filter cartridges. Parker strongly recommends using Model 23 Steam Filters to ensure optimum operating life (see steam filter section of this literature pack).

When autoclaving, the Grade SA filter cartridges will tolerate temperatures to 300°F (149°C) in dry gas. Viton or other heat resistant seals should be used in the housing.

Filter Assemblies Assemblies in RE Steam Sterilizatio	D are		Flow rates (SCFM), at 7 psi drop at indicated line pressure (over 3 stages) Refer to Principal Specification Charts in each product data sheet for maximum Recommended for pressure rating of each housing								
1st Stage	2nd Stage	3rd Stage	Port Size	20	40	60	80	100	125	150	
2002N-IBI-DX	2002N-IBI-BX	2002N-OAO-SA A33B-SA	1/4"	8	11	16	21	25	31	36	
2104N-IBI-DX	2104N-IBI-BX	2104N-OAO-SA A45B-SA	1/2"	19	30	41	51	63	76	90	
2208N-IBI-DX	2208N-IBI-BX	2208N-OAO-SA A27/35B-SA	1"	23	37	50	64	77	94	11	
2312N-IBI-DX	2312N-IBI-BX	2312N-OAO-SA A27/80B-SA (1)	1 1/2"	46	74	101	129	155	189	22	
A15/80-DX	A15/80-BX	A15/80-SA A15/80S6-SA	2"	94	148	202	256	310	378	44	
AFF3-0128-HFC	AFF3-0128-HEC	AKC-0280-SA AKSB-0280-SA	3"	190	300	400	510	620	755	89	
AFF4-0125-HFC	AFF4-0125-HEC	AKC-0480-SA AKSB-0480-SA	4"	380	590	810	1020	1240	1510	17	
AFF6-0136-HFC	AFF6-0136-HEC	AKC-0880-SA AKSB-0880-SA	6"	750	1180	1620	2050	2480	3020	35	
AFF8-0428-HFC	AFF8-0428-HEC	AKC-1480-SA AKSB-1480-SA	8"	1310	2070	2830	3580	4340	5300	62	
AFF10-0728-HFC	AFF10-0728-HEC	AKC-2280-SA AKSB-2280-SA	10"	2070	3270	4460	5660	6850	8340	98	

Notes



¹ Two Type A27/80B-SA in parallel required.

Sterile Air Filters - 1/4" to 2" Line Size


Principal Specification	ons					
Model	2002,2003,2004 (5)	2104 (5)	2206 (5)	2208 (5)	2312 (5)	A15/80
Port Size	ze 1/4",3/8",1/2" NPT 1/2" NPT		3/4" NPT	1" NPT	1 1/2" NPT	2" NPT
Maximum Pressure	250 psig (1)	250 psig (1)	250 psig (1)	250 psig (1)	250 psig (1)	250 psig (1)
Maximum Temperature	laximum Temperature 170°F (77°C)		130°F (54°C)	130°F (54°C)	130°F (54°C)	130°F (54°C)
Materials of Construction						
Head	Anod. Alum.	Anod. Alum.	Anod. Alum.	Anod. Alum.	Anod. Alum.	Anod. Alum.
Bowl	Anod. Alum.	Anod. Alum.	Anod. Alum.	Anod. Alum.	Anod. Alum.	Steel
Internals	Nylon	Nylon	Aluminum	Aluminum	Aluminum	St. Steel
Seals	Buna-N	Buna-N	Buna-N	Buna-N	Buna-N	Buna-N
Shipping Weight	2 lbs. (0.9 kg)	2.5 lbs. (1 kg)	8 lbs. (3.6 kg)	8 lbs. (3.6 kg)	15 lbs. (6.8 kg)	11 lbs. (5 kg)
Dimensions	3.3"W X 8.5"L (8cm X 22cm)	3.3"W X 11.3"L (8cm X 28cm)	4"W X 13"L (10cm X 33cm)	4"W X 13"L (10cm X 33cm)	5.0"W X 17"L (13cm X 43cm)	6.3"W X 28"L (16cm X 71cm)

Ordering Information						
For assistance, call toll-free at 1	-800-343-4048 8AM to	5PM Eastern Time				
Model	2002,2003,2004 (5)	2104 (5)	2206 (5)	2208 (5)	2312 5)	A15/80
Assembly with Grade DX Filter Cartridge	200?-IBI-DX	2104N-IBI-DX	2206N-IBI-DX	2208N-IBI-DX	2312N-IBI-DX	A15/80-DX
Assembly with Grade BX Filter Cartridge	200?-IBI-BX	2104N-IBI-BX	2206N-IBI-BX	2208N-IBI-BX	2312N-IBI-BX	A15/80-BX
Assembly with Grade SA Filter Cartridge & Support Core	200?-OAO-SA	2104N-OAO-SA	2206N-OAO-SA	2208N-OAO-SA	2312N-OAO-SA	A15/80-SA
Differential Pressure Indicator (optional)	Included (2)	Included (2)	Included (2)	Included (2)	Included (2)	Included (2)
Filter Cartridges (3)						
Number Required	1	1	1	1	1	1
Box of 3 (4)	3/100-12-🗆	3/100-18-□	3/150-19-□	3/150-19-□	3/200-35-□	3/200-80-
Box of 5 (4)	5/100-12-🗆	5/100-18-□	5/150-19-□	5/150-19-□	5/200-35-□	5/200-80-🖵
Box of 10 (4)	100-12-□	100-18-🗆	150-19-🗖	150-19-🗆	200-35-🗆	200-80-🗆

- 1 Maximum pressure ratings are for temperatures to 130°F (54°C). Please consult factory for maximum pressure ratings at elevated temperatures.
- 2 Differential Pressure Indicator is not supplied with assemblies containing Grade
- SA Cartridges. Maximum pressure rating for 41-082 is 250 psig. The DPI is sensitive in the range of 0-5 psi differential.
- 3 To order filter cartridges, indicate the grade of filter cartridge by placing the appropriate
- letter after the ordering number. Examples: 5/100-12-DX, 100-18-BX, 150-19-SA.
- 4 Grades BX, DX are available only in boxes of 5 and 10. Grade SA is available in boxes of 3 and 10.
- 5 Lifetime (20 year) warranty included. Contact your local representative for details.

How to Order the New "2000 Series"

Build your own custom filter assembly using the guideline matrix to the right and specify your model number. Example: 1/2" filter with DPI and Auto Drain with Grade DX Filter = 2104N-1B1-DX

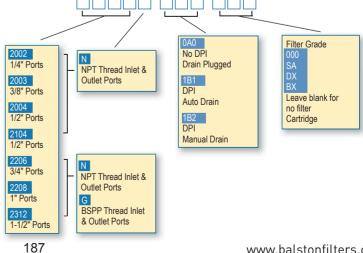



Filters for the Food Industry

Sterile Air Filters - 3" to 10" Line Size

Remove all viable organisms

Full compliance with FDA requirements

High flow rates

USDA/FSIS accepted for use in federally inspected meat and poultry plants

Balston® Sterile Air Filters

Balston grade SA filter cartridges, rated at 99.9999+% efficiency for 0.1 micron particles, is at least 30 times better than the accepted standard for sterile air filters developed by independent research organizations in the U.S. and U.K. (request Bulletin TI-105A for a detailed discussion on Balston filter efficiency rating procedure, and Bulletin TI-935 for an independent test report on Balston Sterile Air Filters). Balston Sterile Air Filters are in full compliance with the requirements of the FDA.



A Balston sterile air filter assembly, consisting of 1/4" Models of Grade DX, Grade BX, and Grade SA were tested at the University of Massachusetts, Department of Food Science and Nutrition, under the direction of Professor David A. Evans, Ph.D.

"This sterile air system produced commercially sterile air and, to the limits of detection, no viable colonies of microorganisms were found".

- Professor David A. Evans, Ph.D



Model AKC-0280



Model AKC-1480



Sterile Air Filters - 3" to 10" Line Size

Model	AKC-0280	AKC-0480	AKC-0880	AKC-1480	AKC-2280						
Port Size	3" Flange	4" Flange	6" Flange	8" Flange	10" Flange						
Maximum Pressure	250 psig (1)	250 psig (1)	200 psig (1)	200 psig (1)	200 psig (1)						
Maximum Temperature	230°F (110°C) (2)	230°F (110°C) (2)	250°F (110°C) (2)	250°F (110°C) (2)	250°F (110°C) (2)						
Materials of Construction	Carbon steel vessel w	Carbon steel vessel with 303 Stainless Steel filter tube holders and Buna N seals.									
Closure Type	Flat flanged top with s	wing bolts and Buna N "O"	rings.								
Shipping Weight	132 lbs. (60 kg)	210 lbs. (95 kg)	360 lbs. (163 kg)	590 lbs. (268 kg)	880 lbs. (400 kg)						
Dimensions	36"H X 16"W	36"H X 21"W	38"H X 25"W	54"H X 34"W	56"H X 36"W						
	(91cm X 40cm)	(91cm X 53cm)	(97cm X 64cm)	(137cm X 86cm)	(142cm X 91cm)						
Flange Center Line											
to Floor Dimension	7.75" (20cm)	6.25" (11cm)	7.5" (19cm)	16.25" (41cm)	17.25" (44cm)						

Ordering Information (3)					
For assistance, call toll-free at 1	-800-343-4048 8AM to	5PM Eastern Time			
Model	AKC-0280	AKC-0480	AKC-0880	AKC-1480	AKC-2280
Assembly with Grade SA Filter Cartridge & Support Core	AKC-0280-SA	AKC-0480-SA	AKC-0880-SA	AKC-1480-SA	AKC-2280-SA
Filter Cartridges (4)					
Number Required	2	4	8	14	22
Box of 3	3/200-80-□	3/200-80-□	3/200-80-□	3/200-80-□	3/200-80-□
Box of 5	5/200-80-□	5/200-80-□	5/200-80-□	5/200-80-□	5/200-80-□
Box of 10	200-80-🗆	200-80-🗆	200-80-🗆	200-80-🗆	200-80-🗆

Notes

- 1 Vessel is ASME Section VIII, Division 1 code stamped for rated pressure. All AKC series housings have CRN registration numbers assigned in all Canadian provinces.
- 2 Maximum operating temperature may be limited by seal material. Consult factory for recommendations at elevated temperatures.
- 3 Filter assemblies are shipped complete with automatic drain, filter cartridges, and differential pressure indicator.

Automatic Drain

The maximum operating pressure for the Model

20-211 Automatic Drain is 400 psig. Minimum operating pressure is 10 psig.

Differential Pressure Indicator

The maximum operating pressure for the Differential Pressure Indicator Model 41-071 is 250 psig. The DPI is sensitive in the range of 0-5 psi

The Automatic Drain and Differential Pressure Indicator are not included with assemblies containing SA cartridges.

4 To order filter cartridges, indicate the grade of filter cartridge by placing the appropriate letter after the ordering number. Examples: 5/100-12-SA, 100-18-SA, 150-19-SA.



Filters for the Food Industry

Steam Sterilizable Sterile Air Filters - 1/4" to 1" Line Size

Remove all viable organisms

In-line steam sterilization

Low pressure drop

Full compliance with FDA requirements

USDA/FSIS accepted for use in federally inspected meat and poultry plants



Model A33B-SA



Model A45B-SA



Model A27/35B-SA, A27/80B-SA

Balston® Sterile Air Filters

Balston grade SA filter cartridges, rated at 99.9999+% efficiency for 0.1 micron particles, is at least 30 times better than the accepted standard for sterile air filters developed by independent research organizations in the U.S. and U.K. (request Bulletin TI-105A for a detailed discussion on Balston filter efficiency rating procedure, and Bulletin TI-935 for an independent test report on Balston Sterile Air Filters). Balston Sterile Air Filters are in full compliance with the requirements of the FDA.

Here's what one of your colleagues found:

A Balston sterile air filter assembly, consisting of 1/4" Models of Grade DX, Grade BX, and Grade SA were tested at the University of Massachusetts, Department of Food Science and Nutrition, under the direction of Professor David A. Evans, Ph.D.

"This sterile air system produced commercially sterile air and, to the limits of detection, no viable colonies of microorganisms were found".

- Professor David A. Evans, Ph.D



Filters for the Food Industry

Steam Sterilizable Sterile Air Filters - 1/4" to 1" Line Size

Principal Specification	s			
Model	A33B	A45B	A27/35B	A27/80B
Inlet and Outlet Ports	1/4" NPT (1)	1/2" NPT (1)	1" NPT (1)	1" NPT (1)
Drain Port	1/8" NPT (2)	1/8" NPT (2)	1/4" NPT (2)	1/4" NPT (2)
Materials of Construction				
Head	316SS	316SS	316SS	316SS
Bowl	316SS	316SS	316SS	316SS
Internals	316SS	316SS	316SS	316SS
Seals	Viton (3)	Viton (3)	Viton (3)	Viton (3)
Maximum Temperature	400°F (204°C)	400°F (204°C)	400°F (204°C)	400°F (204°C)
Maximum Pressure	425 psig (4)	250 psig (4)	800 psig (4)	800 psig (4)
Maximum Steam Pressure for Sterilization	60 psig	60 psig	60 psig	60 psig
Shipping Weight	3 lbs. (1 kg)	5 lbs. (2 kg)	16 lbs. (7 kg)	20 lbs. (9 kg)
Dimensions	2.6"Dia X 4.9"L (7cm X 12cm)	2.6"Dia. X 8.4"L (7cm X 21cm)	4.0"Dia. X 16"L (10cm X 40cm)	4.0"Dia. X 27"L (10cm X 69cm)

Ordering Information				
For assistance, call toll-free	at 1-800-343-4048 8A	M to 5PM Eastern Time		
Model	A33B	A45B	A27/35B	A27/80B
Assembly with Grade SA Filter Cartridge	A33B-SA	A45B-SA	A27/35B-SA	A27/80B-SA
Filter Cartridges:				
Number Required	1	1	1	1
Box of 3	3/100-12-SA	3/100-25-SA	3/200-35-SA	3/200-80-SA
Box of 10	100-12-SA	100-25-SA	200-35-SA	200-80-SA

Notes:

1 Adaptors are available which convert threaded ports to sanitary type clamp connections

Ordering Information:

Part # 73803 1" NPT x 1" Sanitary
Part # 73804 1 1/2" NPT x 1 1/2" Sanitary
Part # 73805 2" NPT x 2" Sanitary

- 2 Condensate drain valve required. Supplied by customer.
- 3 Constructed of food grade Viton.
- 4 Maximum pressure ratings are for temperatures to 130°F (54°C). Please consult factory for maximum pressure ratings at elevated temperatures.



Filters for the Food Industry

Steam Sterilizable Sterile Air Filters - 2" to 10" Line Size

Remove all viable organisms

In-line steam sterilization

High flow rates

Full compliance with FDA requirements

USDA/FSIS accepted for use in federally inspected meat and poultry plants



Model AKSB-0280-3-SA



Model AKSB-1480-SA

Balston® Sterile Air Filters

Balston grade SA filter cartridges, rated at 99.9999+% efficiency for 0.01 micron particles, is at least 30 times better than the accepted standard for sterile air filters developed by independent research organizations in the U.S. and U.K. (request Bulletin TI-105A for a detailed discussion on Balston filter efficiency rating procedure, and Bulletin TI-935 for an independent test report on Balston Sterile Air Filters). Balston Sterile Air Filters are in full compliance with the requirements of the FDA.

Here's what one of your colleagues found:

A Balston sterile air filter assembly, consisting of 1/4" Models of Grade DX, Grade BX, and Grade SA were tested at the University of Massachusetts, Department of Food Science and Nutrition, under the direction of Professor David A. Evans, Ph.D.

"This sterile air system produced commercially sterile air and, to the limits of detection, no viable colonies of microorganisms were found".

- Professor David A. Evans, Ph.D



Food Industry

Filters for the Food Industry

Steam Sterilizable Sterile Air Filters - 2" to 10" Line Size

Model	AKSB-0280-2-SA	AKSB-0280-SA	AKSB-0480-SA	AKSB-0880-SA	AKSB-1480-SA	AKSB-2280-SA	
Port Size	2" Flange	3" Flange	4" Flange	6" Flange	8" Flange	10" Flange	
Materials of Construction	316SS	316SS	316SS	316SS	316SS	316SS	
Seals	Viton (1)	Viton (1)	Viton (1)	Viton (1)	Viton (1)	Viton (1)	
Maximum Pressure	200 psig (2)	200 psig (2)	200 psig (2)	200 psig (2)	200 psig (2)	200 psig (2)	
Maximum Temperature	200°F (93°C)	200°F (93°C)	200°F (93°C)	200°F (93°C)	200°F (93°C)	200°F (93°C)	
Maximum Steam Pressure							
or Sterilization	60 psig	60 psig	60 psig	60 psig	60 psig	60 psig	
Shipping Weight	140 lbs. (64 kg)	140 lbs. (64 kg)	210 lbs. (95 kg)	360 lbs. (163 kg)	590 lbs. (268 kg)	880 lbs. (400 k	
Dimensions	16"W X 36"L	16"W X 36"L	20"W X 36"L	25"W X 38"L	34"W X 54"L	36"W X 56"L	

Ordering Information						
For assistance, call toll-fre	ee at 1-800-343-4048 8	AM to 5PM Eastern Ti	me			
Model	AKSB-0280-2	AKSB-0280-3	AKSB-0480	AKSB-0880	AKSB-1480	AKSB-2280
Assembly with Grade SA Filter Cartridge	AKSB-0280-2-SA	AKSB-0280-SA	AKSB-0480-SA	AKSB-0880-SA	AKSB-1480-SA	AKSB-0280-SA
Filter Cartridges: Box of 3	3/200-80-SA	3/200-80-SA	3/200-80-SA	3/200-80-SA	3/200-80-SA	3/200-80-SA
Box of 10 Number per housing	200-80-SA 2	200-80-SA 2	200-80-SA 4	200-80-SA 8	200-80-SA 14	200-80-SA 22

Notes:

1 Constructed of food grade Viton.

2 Vessel is ASME Section VIII Division 1 Code stamped for rated pressure.



Cabinet Dryers for Wash Down Areas

Eliminate Moisture Problems in Electrical Cabinets and Motors

Balston CD Series Cabinet Dryers

You demand a lot from your electrical cabinets and motors. They are subject to nightly high pressure, hot wash downs and then expected to remain dry in a refrigerated area. Over time most cabinets develop moisture inside which leads to premature component failures. This interrupts production and costs you money. Expensive vortex coolers or heaters don't work. Vortex coolers use a considerable amount of air and have a high operating cost. Heaters simply raise the humidity of the air inside the cabinet and don't eliminate the moisture.

The Parker Balston Cabinet Dryer serves to reduce the humidity inside the cabinet to less than 10% RH. Any water that infiltrates the cabinet evaporates quickly. Electrical components stay clean and dry which prolongs their life.

Avoid costly down time!

Many plants struggle with moisture problems by managing downtime emergencies. Emergencies divert limited maintenance personnel and disrupt production at the cost of thousands of dollars per hour. The Cabinet Dryer reduces these maintenance and lost production costs by 80% or more. A typical customer will see savings of \$10K - 15K per year. The Cabinet Dryer will operate continuously and reliably without operator attention thus freeing up valuable maintenance personnel who are better devoted to important routine maintenance work rather than daily emergency response.

Product Features:

- Designed specifically for wash down areas
- Protects electrical cabinet components from damage caused by water and high humidity
- Minimizes pools of water inside cabinets
- Positive pressure keeps dust out
- Adds no heat to the cabinet
- Reduces cabinet humidity to less than 10% RH
- Requires no electricity, low operating costs
- Easy to install and maintain
- Quiet operation
- Protect motors, touch screens, drives and other critical components





Do Your Cabinets Look Like This?




Corrosion leads to premature component failure



Water accumulation in electrical

A Cabinet Dryer will keep your cabinets looking as good as new

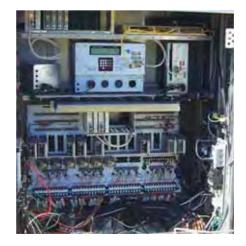



Cabinet Dryers for Wash Down Areas

Eliminate Moisture Problems in Electrical Cabinets and Motors

Principal Specifications

Model Number	CD0005	CD0010	CD0030
Cabinet Size Range (2)	0 - 4 FT ³	4 - 12 FT ³	12 - 36 FT ³
	(0 - 0.11m ³)	(0.11m ³ - 0.34m ³)	(0.34m ³ - 1m ³)
Min/Max Inlet Air Temp	40°F/120°F	40°F/120°F	40°F/120°F
	(4°C/49°C)	(4°C/49°C)	(4°C/49°C)
Min/Max Ambient Air Temp	35°F/120°F	35°F/120°F	35°F/120°F
	(2°C/49°C)	(2°C/49°C)	(2°C/49°C)
Air Consumption	0.6 SCFM	1.25 SCFM	3.5 SCFM
	(17 slpm)	(35.4 slpm)	(99 slpm)
Min/Max Air Pressure	60 psi/150 psi	60 psi/150 psi	60 psi/150 psi
	(4.1 BAR/10.3 BAR)	(4.1 BAR/10.3 BAR)	(4.1 BAR/10.3 BAR)
Delivered Dew Point	-7°F(-22°C) (1)	-7°F(-22°C) (1)	-7°F(-22°C) (1)
Inlet Port Size	1/4" NPT	1/4" NPT	1/4" NPT
Outlet Port Size	1/4" NPT	1/4" NPT	1/4" NPT
Electrical Requirements	None	None	None
Dimensions	3"w x 9.2"h x 2"d	3"w x 15.2"h x 2"d	4.6"w x 15.3"h x 2.9"d
	(7.6cm x 2.34cm x 5cm)	(7.6cm x 38.6cm x 5cm)	(11.7cm x 38.9cm x 7.4cm)
Shipping Weight	1.5 lbs (0.68 kg)	2 lbs (0.9 kg)	2.5 lbs (1.1 kg)

Notes:

- 1 Delivered dewpoint is specified for saturated inlet air at 100°F (38°C) and 100 psig (6.9 BAR).
- 2 If the cabinet is not tightly sealed, consider upsizing to the next module size
- 3 Filtration efficiency: 99.99% at 0.01micron.
- 4 For heavily contaminated air lines, install additional prefiltration.

Ordering Information For assistance call toll free at 800-343-4048, 8AM to 5PM EST

Model Number	CD0005	CD0010	CD0030
Replacement Filter Elements	070-063-BX	070-063-BX	070-063-BX
Replacement Auto Drain	C02-2392	C02-2392	C02-2392

Here's what our customers say:

"We tried heaters, fans and vortex coolers, our only solution was to use a Parker Balston dryer that continuously purges the cabinet with dry air."

Lee Clarkson
 Ross Industries

"I've been with Smithfield for 15 years and we've had issues with wet electrical cabinets for 15 years. We installed the cabinet dryer on our wettest cabinet to see if it would work. Our Multivac™ packager was having significant issues. It was out of service 2-3 times per week due to condensation inside the cabinet. When we installed the dryer we noticed a difference right away. The water droplets on the walls of the cabinet were gone and our downtime from moisture was completely eliminated. It worked just like they told me."

Maintenance Manager Large Meat Processing Plant





Application Notes



Nitrogen Generation Systems

Balston Nitrogen Generators

Balston offers both membrane and PSA technology. Balston Membrane Nitrogen Generators produce up to 99.5% pure, commercially sterile nitrogen at dewpoints to -58°F (-50°C) from a compressed air supply. All Membrane Nitrogen Generators include a 0.01 micron membrane filter which ensures the nitrogen is completely free of suspended impurities.

Balston Monobed and Dualbed PSA Nitrogen Generators produce up to 99.99% pure, compressed nitrogen at dewpoints to -58°F (-50°C) from a compressed air supply. The generators are designed to continually transform standard compressed air into nitrogen at safe, regulated pressures without operator attention.



Product Features:

- Membrane and PSA technologies available
- Lower cost...eliminates the need for expensive gas cylinders
- Eliminates unexpected shutdowns due to a bad or empty cylinder
- Hassle-free, easy to install and operate
- Compact, frees up valuable floor space
- Safe and reliable

Aluminum Extrusion Lead Free Soldering Food Processing and Packaging Chemical Tank Blanketing



Nitrogen Generation Systems

Membrane Nitrogen Generators



Balston Membrane Nitrogen Generator

Lower cost...eliminates the need for costly gas cylinders

Complete package with prefilters, carbon filter, and membrane filter

Compact - frees up valuable floor space

Eliminates unexpected shutdowns due to a "bad" or empty cylinder

Hassle-free, easy to install, easy to operate

Safe and reliable

No electrical line required

Applications

Purging or testing of tanks and vessels

Solvent blanketing

Food processing and packaging

Storage of perishables

Electronic component manufacture and storage

Analytical equipment purge

Carburizing, hardening, sintering,

annealing

Packaging

Chemical transferring

Sparging and mixing



HFX Series High Flow Nitrogen Membrane Generator

Advantages of Balston® Nitrogen Generators

Balston Membrane Nitrogen Generators produce up to 99.5% pure, commercially sterile nitrogen at dewpoints to -58°F (-50°C) from a compressed air supply. All Membrane Nitrogen Generators include a 0.01 micron membrane filter which ensures the nitrogen is completely free of suspended impurities. For applications requiring monitoring and controlling, an oxygen monitor which offers LED readouts and remote alarm or chart recorder capabilities can be included. An audible alarm signals high or low oxygen concentrations (determined by the application). The oxygen monitor is supplied with alarm relay outputs which may be used to signal a remote alarm, open a backup supply or the process stream, or close the process flow.

Balston Nitrogen eneration System





Generation Systems

Nitrogen Generation Systems

Membrane Nitrogen Generators



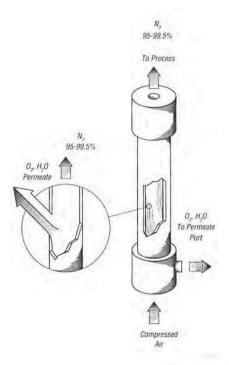

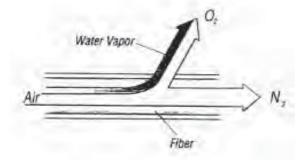

Proven Technology

Balston Membrane Nitrogen Generators produce up to 99% pure, commercially sterile nitrogen at dewpoints to -58°F (-50°C) from a compressed air supply. All Membrane Nitrogen Generators include a 0.01 micron membrane filter which ensures the nitrogen is completely free of suspended impurities. For applications requiring monitoring and controlling, Parker Hannifin offers systems which include oxygen monitors.

Balston Nitrogen Generators are one of the most efficient membrane systems available with higher recovery rates and lower operating costs than many other membrane systems.

Balston Nitrogen Generators utilize proprietary membrane separation technology. The membrane divides the air into two streams: one is 95%-99% pure nitrogen, and the other is oxygen-rich with carbon dioxide and other trace gases.

The generator separates air into its component gases by passing inexpensive, conventional compressed air through bundles of individual hollow fiber, semi-permeable membranes. Each fiber has a perfectly circular cross section and a uniform bore through its center. Because the fibers are so small, a great many can be packed into a limited space, providing an extremely large membrane surface area that can produce a relatively high volume product stream.

Compressed air is introduced to the center of the fibers at one end of the module and contacts the membrane as it flows through the fiber bores. While oxygen, water vapor and other trace gases permeate the membrane fiber and are discharged through a permeate port, the nitrogen is contained within the hollow fiber membrane, and flows through the outlet port of the module.

Water vapor also permeates through the membrane; therefore, the nitrogen product gas is very dry.

While "fast gases" like oxygen, carbon dioxide, and water vapor quickly permeate the membrane, most of the nitrogen flows along the membrane fiber as a separate product stream.

Balston Nitrogen

Nitrogen Generation Systems

Membrane Nitrogen Generators



Advantages

Lower cost...eliminates the need for costly gas cylinders

Complete package with prefilters, carbon filter, and membrane filter

Compact - frees up valuable floor space

Eliminates unexpected shutdowns due to a "bad" or empty cylinder

Hassle-free, easy to install, easy to operate

Safe and reliable

No electrical line required(1)

Custom Systems Available

Flow rates to 9200 SCFH

Delivery pressures to customer's specifications

Skid mounted systems with compressor, receiving tank and controls are available

Savings and Convenience

The Balston Membrane Nitrogen Generators completely eliminate the inconvenience and the high costs of nitrogen Dewars and cylinders. There is no need to depend on outside vendors for nitrogen gas supplies. The hassles of changing dangerous, high pressure cylinders and interruption of gas supplies are completely eliminated. The Balston Systems offer long term cost stability by eliminating uncontrollable vendor price increases, contract negotiation, long term commitments and tank rentals. Once the Generator is installed, a continuous nitrogen supply of consistent purity is available within minutes from start-up.

The Balston Nitrogen Generators are complete systems ready to operate as delivered with carefully matched components engineered for easy installation, operation and long term reliability. The generators are freestanding and housed in an attractive cabinet. Standard features include: high efficiency coalescing prefilters with automatic drains, an activated carbon filter, and a 0.01micron membrane final filter. Installation consists of simply connecting a standard compressed air line to the inlet and connecting the outlet to a nitrogen line. The membrane systems offer the advantages of no moving parts and no electrical requirements.^[1]

There is no complicated operating procedure to learn or labor intensive monitoring involved. Simply select the purity your process requires, set the flow and pressure, and within minutes high purity, dry nitrogen is available for use!

Once the system is operating, it requires little monitoring. The only maintenance involves changing the coalescing filter cartridges and activated carbon filter periodically. This is a simple ten minute procedure.

The Balston HFXO Series include an oxygen monitor which offers LED readouts and remote alarm or chart recorder capabilities. An audible alarm signals high or low oxygen concentrations (determined by the application). The oxygen monitor is supplied with alarm relay outputs which may be used to signal a remote alarm, open a backup supply or the process stream, or close the process flow.

Notes:

1 No electrical power required unless used with an accessory such as an oxygen monitor.



Generation System

Nitrogen Generation Systems

Membrane Nitrogen Generators - HFX Series

Flow R	ates (SC	CFH) @	100 psi	g @ 68	°F		Pressur	e Corre	ction F	actors	(at Ind	licated	Operat	ting Pro	essure	(PSIG)
Model	95	96	97	98	99	99.5	58	73	87	101	116	130	145	160	174	190
HFX Series N	Nitrogen Gener	ators														
HFX-1	40	33	26	16	11		.52	.65	.86	1	1.15	1.35	1.44			
HFX-3	148	120	95	70	42		.54	.68	.85	1	1.14	1.3	1.43			
HFX-5	279	229	176	131	76		.52	.65	.85	1	1.14	1.34	1.43			
HFX-7	452	360	283	209	120		.53	.66	.86	1	1.14	1.32	1.43			
HFX-9	752	600	452	330	201		.44	.65	.85	1	1.1	1.3	1.4			
HFX-11	1201	992	780	572	248		.44	.65	.85	1	1.2	1.4	1.6			

lodel Number	HFX-1, HFX0-1	HFX-3,HFX0-3	HFX-5, HFX0-5	HFX-7, HFX0-7, HFX-9, HFX0-9, HFX-11, HFX0-11
Atmospheric Dewpoint	-58°F (-50°C)	-58°F (-50°C)	-58°F (-50°C)	-58°F (-50°C)
Commercially Sterile	Yes	Yes	Yes	Yes
Particles > 0.01 micron	None	None	None	None
Suspended Liquids	None	None	None	None
Min/Max Operating Press.	60 psig/145 psig (1)	60 psig/145 psig (1)	60 psig/145 psig (1)	60 psig/145 psig (1)
Max. Press. Drop (at 95% N ₂ , 125 psig)	10 psig	10 psig	10 psig	10 psig
Recommended Ambient Operating Temperature	77°F (25°C)	77°F (25°C)	77°F (25°C)	77°F (25°C)
Min/Max Inlet Air Temp.	40°F/122°F (4°C/50°C)	40°F/122°F (4°C/50°C)	40°F/122°F (4°C/50°C)	40°F/122°F (4°C/50°C)
Recommended Inlet Air Temperature	77°F (25°C)	77°F (25°C)	77°F (25°C)	77°F (25°C)
Inlet/Outlet Port Sizes	1/4" NPT	1/4" NPT	1/4" NPT	1/2" NPT
Electrical Requirements	None (2)	None (2)	None (2)	None (2)
Dimensions	12.8"w x 7.5"d x 16.3"h (32cm x 19.1cm x 41cm)	16"w x 16"d x 50"h (41cm x 25cm x 91cm)	16"w x 16"d x 50"h (41cm x 25cm x 91cm)	24"w x 20"d x 69"h (61cm x 51cm x 175cm)
Shipping Wt.	38 lbs. (17.3 kg)	75 lbs. (34 kg)	106 lbs. (114 kg)	250 lbs. (114 kg)

Notes:

² No electrical power required unless used with an electrical accessory, e.g., an oxygen analyzer.

For assistance, call toll-free at 1-8	00-343-4048 8AM to	5PM Eastern Ti	me				
Maintenance Kit Components							
Model	Maintenance Kit	Maintenance Kit w/02 Monitor	Replacement Filter Cartridges 1st stage	Replacement Filter Cartridges 2nd stage	Replacement Filter Cartridges 3rd stage	Final Membrane Filter	Activated Carbon Filte
HFX-1, HFX0-1 (w/O2 monitor)	MK75005	MK750050	100-12-DX	100-12-BX		9933-05-95	1/7825-08-00
HFX-3, HFX0-3 (w/O2 monitor)	MK7579C	MK75790C	100-12-DX	100-12-BX		GS-100-12-95	75620
HFX-5, HFX0-5 (w/O2 monitor)	MK7579C	MK75790C	100-12-DX	100-12-BX		GS-100-12-95	75620
HFX-7, HFX0-7 (w/O2 monitor)	MK7576	MK76760	100-18-DX	100-18-BX	100-25-BX	GS-100-25-95	75303
HFX-9, HFX0-9 (w/O2 monitor)	MK7576	MK75760	100-18-DX	100-18-BX	100-25-BX	GS-100-25-95	75303
HFX-11, HFX0-11 (w/O2 monitor)	MK7576	MK76760	100-18-DX	100-18-BX	100-25-BX	GS-100-25-95	75303



¹ Maximum operating pressure in Europe is 8 barg.

Balston Nitrogen Generation Systen


Nitrogen Generation Systems

PSA Nitrogen Generators





DB-1900

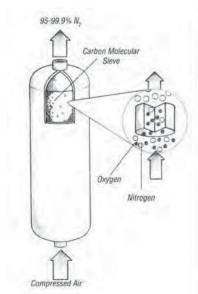

Pressure swing adsorption gas separation process preferentially adsorbs oxygen over nitrogen using carbon molecular sieve (CMS).

Lower cost...eliminates the need for costly gas cylinders

Complete package with prefilters, final filters, and receiving tank

Compact - frees up valuable floor space

Eliminates unexpected shutdowns due to a "bad" or empty cylinder

Hassle-free, easy to install, easy to operate

Safe and reliable

Proven Technology

Balston Monobed and Dual Bed Nitrogen Generators produce up to 99.99% pure, compressed nitrogen at dewpoints to -58°F (-50°C) from nearly any compressed air supply. The generators are designed to continually transform standard compressed air into nitrogen at safe, regulated pressures without operator attention.

How the Technology Works

Balston PSA Nitrogen Generators utilize a combination of filtration and pressure swing adsorption technologies. High efficiency prefiltration pretreats the compressed air to remove all contaminants down to 0.1 micron. Air entering the generator consists of 21% oxygen and 78% nitrogen. The gas separation process preferentially adsorbs oxygen over nitrogen using carbon molecular sieve (CMS). At high pressures the CMS has a greater affinity for oxygen, carbon dioxide, and water vapor than it does at low pressures. By raising and lowering the pressure within the CMS bed, all contaminants are captured and released, leaving the CMS unchanged. This process allows the nitrogen to pass through as a product gas at pressure. The depressurization phase of the CMS releases the absorbed oxygen and other contaminant gases to the atmosphere.




Balston Nitrogen

Nitrogen Generation Systems

PSA Nitrogen Generators - Monobed Series





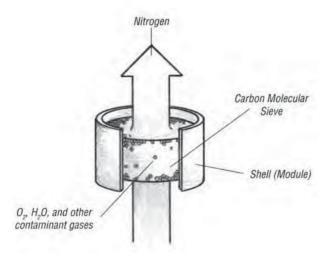

Savings and Convenience

The Balston PSA Nitrogen Generators completely eliminate the inconvenience and the high costs of nitrogen Dewars, bulk nitrogen supplies, and cylinders. There is no need to depend on outside vendors for your nitrogen gas supplies. The hassles of changing dangerous, high pressure cylinders, and interruption of gas supplies are completely eliminated. The Balston PSA Nitrogen Generators offer long term cost stability eliminating uncontrollable vendor price increases, contract negotiations, long term commitments, and tank rentals. Once the Generator is installed, a continuous nitrogen supply of consistent purity is available within minutes from start-up.

Easy to Operate and Maintain

Installation consists of simply connecting a standard compressed air line to the inlet and connecting the outlet to a nitrogen line. Plug the electrical cord into a wall outlet, and the unit is ready for trouble-free operation. This system is designed to operate 24 hours per day, 7 days per week.

Once the system is operating, it requires little monitoring. The only maintenance involves changing the coalescing prefilter cartridges and final sterile air filter periodically. The PSA towers do not require any maintenance.

An oxygen monitor to measure the oxygen concentration of the nitrogen stream is available as an option. An audible alarm signals high or low oxygen concentrations (determined by the application). The oxygen analyzer is supplied with alarm relay outputs which may by used to signal a remote alarm, open a backup supply or the process stream, or close the process flow for protection of downstream equipment or processes.



Balston Nitrogen Generation Systen

Nitrogen Generation Systems

PSA Nitrogen Generators - Monobed Series

del Number	MB-1	MB-3	MB-5
Atmospheric Dewpoint	-58°F (-50°C)	-58°F (-50°C)	-58°F (-50°C)
Commercially Sterile	Yes	Yes	Yes
Particles > 0.01 micron	None	None	None
Suspended Liquids	None	None	None
Recommended Inlet Pressure	110 psig (7.6 barg)	110 psig (7.6 barg)	110 psig (7.6 barg)
Max Inlet Pressure	140 psig (9.7 barg)	140 psig (9.7 barg)	140 psig (9.7 barg)
Max Outlet Pressure at Corresponding Purity (Based on nominal conditions & standard 60 gallon nitrogen tank)	80 psig @ 99.99 - 95%	80 psig @ 99.99 - 96.0% 75 psig @ 95.0%	80 psig @ 99.99-99.5% 75 psig @ 99.0% 70 psig @ 98.0-95.0%
Min/Max Ambient Temperature	40°F/95°F (4°C/35°C)	40°F/95°F (4°C/35°C)	40°F/95°F (4°C/35°C)
Inlet Port Size	1/2" NPT (female)	1/2" NPT (female)	1/2" NPT (female)
Outlet Port Size	1/2" NPT (female)	1/2" NPT (female)	1/2" NPT (female)
Electrical Requirements	120VAC/60 Hz., .18 kw	120VAC/60 Hz., .18 kw	120VAC/60 Hz., .18 kw
MB Dimensions Nitrogen Tank Dimensions (all units)	29 3/8"w x 24 1/2"d x 78"h (74cr 26" dia x 54"h (58cm x 58cm x 1	,	
Max. Shipping Wt. (all units)	460 lbs. (209 kg)		

Ordering Information - Monobed Nitroge	en Generators			
For assistance, call toll-free at 1-800-343-4048 8AM to 5PM Ea	astern Time			
Model Balston Monobed without Oxygen Analyzer Balston Monobed with a Parker Oxygen Analyzer Balston Monobed with a Teledyne 3300 PB Analyzer Balston Monobed with a Teledyne 3300 TB Analyzer	MB-1 MB-1 MBO-1 MBOA-1 MBOB-1	MB-3 MB-3 MBO-3 MBOA-3 MBOB-3	MB-5 MB-5 MBO-5 MBOA-5 MBOB-5	
Monobed Nitrogen Generator Replacement Parts Prefilter (box of 5) Final Filter (box of 5) Final Sterile Air Filter (box of 10)	Part Number 5/100-18-BX 5/100-12-BX 100-18-SA			
Replacement Oxygen Monitor Fuel Cells (Optional) Parker 72-730 Teledyne 3300PB (High Purity Applications) Teledyne 3300TB (High Purity Trace Applications)	72-695 122 B2C			
Maintenance Kits MKMB1 MKMB01 MKMB0A1 MKMB0B1	Maintenance Kit w/out 02 Sensor Maintenance Kit w/02 Sensor (72695) Maintenance Kit W/02 Sensor (I22) Maintenance Kit W/02 Sensor (B2C)			

Nitrogen Purity Flow Chart - Monobed Nitrogen Generators

Flow Rate (SCFH)						
Purity (%N2)	MB-1	MB-3	MB-5			
95	130	260	390			
96	115	230	345			
97	103	207	310			
98	90	180	270			
99	72	143	215			
99.5	60	120	180			
99.9	43	87	130			
99.95	38	77	115			
99.99	14	27	41			

Notes

¹ The 72-460 is an optional accessory which will maintain a constant pressure drop across the flow control valve, thereby providing a constant nitrogen purity.

Nitrogen Generation Systems

PSA Nitrogen Generators - Dual Bed Series

Model Number	DB-5, DB-10	DB-15, DB-20
Nominal Conditions		
Feed Pressure (minimum)	110 psig	110 psig
Temperature	80°F	80°F
Ambient Pressure	1 Atm.	1 Atm.
Compressed Air Specifications		
Maximum Pressure	140 PSIG	140 PSIG
Temperature Range	60°F - 105°F	60°F - 105°F
Dewpoint	40°F atmospheric dewpoint or better	40°F atmospheric dewpoint or better
Residual Oil Content	Trace	Trace
Particles	<.01 micron	<.01 micron
Atmospheric Dewpoint		
Atmospheric Dewpoint	-58°F (-50°C)	-58°F (-50°C)
Commercially Sterile	Yes	Yes
Particles > .1 micron	None	None
Suspended Liquids	None	None
Recommended Inlet Pressure (Min.)	110 psig (7.6 barg)	110 psig (7.6 barg)
Max Inlet Pressure	140 psig (9.7 barg)	140 psig (9.7 barg)
Max Outlet Pressure (Based on nominal conditions and standard 60 gallon nitrogen tank)	80psig	DB-15: 80 psig @ 95-99.99% Purity DB-20: 80 psig @ 98-99.99% Purity 75 psig @ 97% Purity 70 psig @ 95-96% Purity
Min. / Max. Ambient Temperature	40°F/95°F (4°C/35°C)	40°F/95°F (4°C/35°C)
Ambient Conditions	· ,	· · ·
Temperature	45°F - 95°F	45°F - 95°F
Min/Max Ambient Temperature	40°F - 95°F	40°F - 95°F
Ambient Pressure	Atmospheric	Atmospheric
Air Quality	Clean air without contaminants	Clean air without contaminants
Dimensions, Weight and Connections		
Dimensions	28.5"L x 32.25"D x 78"H	28.5"L x 50"D x 78"H
Weight (with tank)	620 lbs (DB-5), 830 lbs (DB-10)	1240 lbs (DB-15), 1450 lbs (DB-20)
Inlet/Outlet	1/2" NPT/1/2" NPT	1" NPT/3/4" NPT
Electrical Requirement	120VAC/60Hz, 1.5 Amp	120VAC/60Hz, 1.5 Amp

Ordering Information - Models DB5, DB-10, DB-15, DB-20						
For assistance, call toll free at 800-343-4048, 8AM to 5PM EST						
Balston Dual Bed Nitrogen Generator with Oxygen Analyzer	DBO-5	DBO-10	DBO-15	DBO-20		
Balston Dual Bed Nitrogen Generator without Oxygen Analyzer	DB-5	DB-10	DB-15	DB-20		
Maintenance Kit for Nitrogen Generator with Oxygen Analyzer	MKDBO-5	MKDBO-5	MKDBO-15	MKDBO-15		
Maintenance Kit for Nitrogen Generator without Oxygen Analzer	MKDB5	MKDB5	MKDB15	MKDB15		
Oxygen Sensor	72695	72695	72695	72695		

Performance Data - Nitrogen Flow (SCFH), for Models DB5 to DB-20						
% Nitrogen	DB-5	DB-10	DB-15	DB-20		
99.999	33	66	99	132		
99.995	74	148	222	296		
99.99	141	281	421	561		
99.95	204	409	613	817		
99.9	240	480	720	960		
99.5	345	689	1034	1378		
99	416	831	1247	1663		
98	499	998	1496	1995		
97	570	1140	1710	2280		
96	630	1259	1889	2518		
95	694	1387	2081	2774		

Notes

Nitrogen Generation Systems

PSA Nitrogen Generators - Dual Bed Series

Model	DB-1200	DB-1600	DB-1900
Atmospheric Dewpoint	-58°F (-50°C)	-58°F (-50°C)	-58°F (-50°C)
Particles > .1 micron	None	None	None
Suspended Liquids	None	None	None
Recommended Inlet Pressure	110 psig (7.6 barg)	110 psig (7.6 barg)	110 psig (7.6 barg)
Max Outlet Pressure	80 psig	80 psig	80 psig
Min/Max Ambient Temperature	40°F/95°F (4°C/35°C)	40°F/95°F (4°C/35°C)	40°F/95°F (4°C/35°C)
Inlet Port Size	1-1/2" NPT (female)	1-1/2" NPT (female)	2" NPT (female)
Outlet Port Size	1" NPT (female)	1" NPT (female)	1-1/2" NPT (female)
Electrical Requirements	120VAC/60 Hz	120VAC/60 Hz	120VAC/60 Hz
Dimensions	78"w x 48"d x 92"h (198cm x 122cm x 234cm)	78"w x 48"d x 92"h (198cm x 122cm x 234cm)	72"w x 54"d x 101"h (183cm x 137cm x 257cm)
Shipping Wt.	3,800 lbs. (1,724 kg)	3,800 lbs. (1,724 kg)	4300 lbs. (1,951 kg)
Model	DB-2500		DB-4000
Atmospheric Dewpoint	-58°F (-50°C)		-58°F (-50°C)
Particles > .1 micron	None		None
Suspended Liquids	None		None
Recommended Inlet Pressure	110 psig (7.6 barg)		110 psig (7.6 barg)
Max Outlet Pressure	80 psig		80 psig
Min/Max Ambient Temperature	40°F/95°F (4°C/35	5°C)	40°F/95°F (4°C/35°C)
Inlet Port Size	2" NPT (female)		2" NPT (female)
Outlet Port Size	1-1/2" NPT (female	e)	1-1/2" NPT (female)
Electrical Requirements	120VAC/60 Hz		120VAC/60 Hz
Dimensions	72"w x 54"d x 125" (183cm x 137cm x		84"w x 72"d x 138"h (213cm x 183cm x 351cm)
Shipping Wt.	6500 lbs. (2948 kg)	7100 lbs. (3221 kg)

How To Order								
For assistance, call toll-free at 1-	For assistance, call toll-free at 1-800-343-4048 8AM to 5PM Eastern Time							
Dual Bed Nitrogen Generator	DB-1200	DB-1600	DB-1900	DB-2500	DB-4000			
Prefilter Cartridges, 1st Stage	200-35-DX	200-35-DX	200-80-DX	200-80-DX	200-80-DX			
Prefilter Cartridges, 2nd Stage	200-35-BX	200-35-BX	200-80-BX	200-80-BX	200-80-BX			
Additional Prefilter Cartridges	200-35-DX	200-35-DX	200-80-DX	200-80-DX	200-80-DX			
Final Air Filter	100-18-DX	150-19-DX	150-19-DX	200-35-DX	200-35-DX			
Oxygen Monitor Standard High Purity (Optional)	72-730 3290	72-730 3290	72-730 3290	72-730 3290	72-730 3290			

Flow Rate (SCFH)						
Purity %N2	DB-1200	DB-1600	DB-1900	DB-2500	DB-4000	
95	3300	4400	5220	6880	11010	
96	3050	4066	4540	5984	9574	
97	2800	3732	4430	5836	9330	
98	2445	3250	3860	5088	8138	
99	1995	2652	3150	4150	6640	
99.5	1635	2178	2585	3402	5445	
99.9	1077	1435	1703	2243	3590	
99.95	951	1268	1505	1981	3170	
99.99	630	840	997	1312	2100	
99.995%	522	696	826	1088	1741	
99.999%	186	248	295	389	622	

Compressed Air Dryers

Balston Compressed Air Dryers

Balston offers both membrane and PSA technology. Balston Membrane Air Dryers combine superior coalescing technology with a proven, innovative membrane system to supply clean, dry compressed air with dewpoints as low as -40°F (-40°C).

Balston PSA Compressed Air Dryers will reduce the dewpoint of compressed air to -100°F (-73°C). Each dryer is delivered complete and ready for easy installation.



Product Features:

- Unattended 24 hour operation
- Compact
- Membrane and PSA technologies available
- Silent operation
- No desiccant to change
- Easy to install and operate

Moisture Sensitive Point of Use Areas

Main Ring Applications

Process and Production Equipment



Compressed Air Dryers

Membrane Air Dryers



Balston Membrane Air Dryers

Offer a reliable, efficient, and economical alternative to pressure swing and refrigerant dryer technologies

Require no electricity thus lowering operating costs

Dewpoints as low as -40°F (-40°C) prevent freeze-ups

Explosion proof

Silent operation

No desiccant to change

State-of-the-Art Membrane Technology

Water vapor from the compressed air supply passes through the hollow fibers of the membrane. At the same time, a small portion of the dry air product is redirected along the length of the fibers to sweep out the water vapor laden air which has permeated the membrane. The moisture-laden sweep gas is then vented to the atmosphere, and clean, dry air is supplied to the application. The drying power of the membrane is controlled by varying the compressed air flow rate and pressure. The Balston Membrane Air Dryer is designed to operate continuously, 24 hours per day, 7 days per week. The only maintenance required is changing the prefilter cartridge twice a year. This semi-annual maintenance takes approximately 5 minutes.

Membrane Air Dryers

Balston Membrane Air Dryers combine a superior coalescing technology with a proven, innovative membrane system to supply clean, dry compressed air with dewpoints as low as -40°F (-40°C). The Membrane Air Dryers are engineered for easy installation, operation, and long term reliability. The dryers incorporate high efficiency coalescing filtration and the highest efficiency membrane available to provide low cost operation and minimal maintenance.

Applications

Low dewpoint instrument air Pneumatic equipment Pressurizing electroni cabinets

Analytical instrumentation

Instrument air for analyzer buildings

Prevention of freeze-ups

Dry air for hazardous areas

General laboratory air supply

Protect electrical panel components from moisture damage

- "We have not had one shutdown due to freeze-ups since the Balston Membrane Dryer was installed."

Peter Vogt International Filler Corp.






compressed Air Dryers

Compressed Air Dryers

Membrane Air Dryer - Principle of Operation

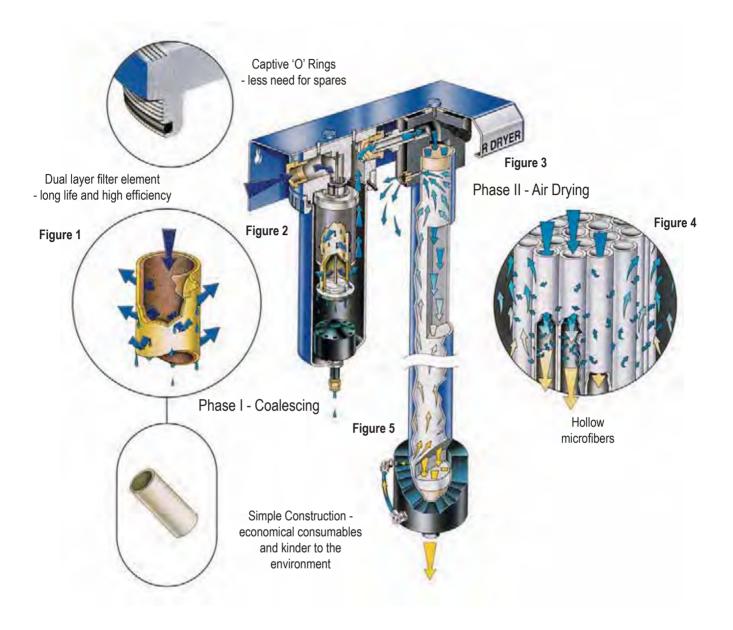

Phase I - Coalescing Filtration

Prior to entering the membrane drying module, the compressed air passes through a high efficiency coalescing filter to remove oil and water droplets and particulate contamination with an efficiency of 99.99% at 0.01 micron. The liquids removed by the filter cartridge continuously drip from the filter cartridge into the bottom of the housing, where they are automatically emptied by an autodrain assembly (see Fig. 1 and Fig. 2). The air leaving the prefilter, therefore, is laden only with water vapor, which will be removed in the membrane module.

Phase II - Drying

The water vapor in the compressed air is removed by the principle of selective permeation through a membrane (see Fig. 3). The membrane module consists of bundles of hollow membrane fibers (see Fig. 4), each permeable only to water vapor. As the compressed air passes through the center of these fibers, water vapor permeates through the walls of the fiber, and dry air exits from the other end of the fiber. A small portion of the dry air (regeneration flow) is redirected along the length of the membrane fiber to carry away the moisture-laden air which surrounds the membrane fibers. The remainder of the dry air is piped to the application.



Compressed Air Dryers

Membrane Air Dryers for -40°F (-40°C) Dewpoint



Flow Rates	Outlet Flow in SCFM (slpm) at Indicated Operating Pressure for -40°F (-40°C) Atmospheric Dewpoint					
Pressure Dewpoint	60 psig (4.1 BAR) -40°F(-40°C)	80 psig (5.5 BAR) -40°F(-40°C)	100 psig (6.9 BAR) -40°F(-40°C)	120 psig (8.3 BAR) -40°F(-40°C)	140 psig (7.7 BAR) -40°F(-40°C)	
Model 76-01	.3 (.5)	.6 (1)	1 (1.7)	1.3 (2.2)	1.7 (2.9)	
Model 76-02	.6 (1)	1 (1.7)	2 (3.4)	2.4 (4.1)	3.4 (5.8)	
Model 76-10	3.0 (5)	5 (8.5)	10 (17)	13 (22)	17 (29)	
Model 76-20	6.0 (10)	10 (17)	20 (34)	26 (44)	34 (58)	
Model 76-40	12.0 (20)	20 (34)	40 (68)	52 (88)	68 (116)	

Membrane Module Regeneration Flow	Regeneration Flow in SCFM (slpm) at Indicated Operating Pressure and all dewpoints				
Pressure Dewpoint	60 psig (4.1 BARG)	80 psig 5.5 (BARG)	100 psig (6.9 BARG)	120 psig (8.3 BARG)	140 psig (7.7 BARG)
Model 76-01	.2 (.34)	.2 (.34)	.3 (.5)	.3 (.5)	.3 (.5)
Model 76-02	.34 (.58)	.4 (.68)	.5 (.84)	.6 (1)	.7 (1.2)
Model 76-10	1.7 (2.9)	2.1 (3.6)	2.5 (4.2)	3 (5)	3.3 (5.6)
Model 76-20	3.4 (5.8)	4.2 (7.1)	5 (8.5)	6 (10)	6.6 (11.2)
Model 76-40	6.8 (11.6)	8.4 (14.3)	10 (17)	12 (20)	14 (23.8)



Membrane Air Dryers for -40°F (-40°C) Dewpoint

Model	76-01	76-02	76-10	76-20	76-40	
Max. Flow Rate At -40°F (-40°C) Dewpoint	1 SCFM (1.7 Nm³/Hr)(1)	2 SCFM (3.4 Nm³/Hr)(1)	10 SCFM (1.7 Nm ³ /Hr)(1)	20 SCFM (3.4 Nm³/Hr)(1)	40 SCFM (6.8 Nm ³ /Hr)(1)	
Min/Max Inlet Air Temp.	40°F/120°F (4°C/49°C) (2)				→	
Ambient Temp. Range	40°F - 120°F (4°C - 49°C)				→	
Min/Max Inlet Pressure	60 psig (4.1 slpm)/150 psig	(10.3 slpm) —			→	
Compressed Air Requirement	Total Air Consumption: Regeneration Flow + Outlet Flow Requirements (see tables on pg.166)					
Max. Pressure Drop	5 psid (.34 bard) (3)	5 psid (.34 bard) (3)	5 psid (.34 bard) (3)	5 psid (.34 bard) (3)	5 psid (.34 bard) (3)	
Wall Mountable	Yes	Yes	Yes	Yes	Yes	
Prefilter (included)	Yes (4)	Yes (4)	Yes (4)	Yes (4)	Yes (4)	
Inlet/Outlet Port Size	1/4" NPT (female)	1/4" NPT (female)	1/2" NPT (female)	1" NPT (female)	1 1/2" NPT (female)/ 3/4" NPT (female)	
Electrical Requirements	None	None	None	None	None	
Dimensions	6"W x 22"H x 5"D (15cm x 58cm x 13cm)	6"W x 23"H x 5"D (15cm x 58cm x 13cm)	6"W x 37"H x 5"D (15cm x 94cm x 13cm)	12"W x 37"H x 7"D (30cm x 94cm x 18cm)	19"W x 39"H x 8"D (48cm x 99cm x 21cm)	
Shipping Weight	9 lbs. (4 kg)	10 lbs. (5 kg)	18 lbs. (9 kg)	20 lbs. (9 kg)	35 lbs. (16 kg)	

- 1 Dewpoint specified for saturated inlet air at 100°F (38°C) and 100 psig (6.9 barg).

 Outlet flows will vary slightly for other inlet conditions.
- 2 Inlet compressed air dewpoint must not exceed the ambient air temperature.
 3 5 psid (.34 bard) at -40°F (-40°C) dewpoint
- operating parameters.
- 4 If compressed air is extremely contaminated, a Balston Grade DX prefilter should be installed directly upstream from the membrane dryer. 5 Filtration efficiency: 99.99% at 0.01 micron.

Ordering Information							
For Assistance, call toll-free at 1-800-343-4048 8AM to 5PM Eastern Time							
Description	Model Number						
Balston Membrane Air Dryer	76-01	76-02	76-10	76-20	76-40		
Replacement Prefilter Cartridges	100-12-BX	100-12-BX	100-18-BX	150-19-BX	200-35-BX		
Optional Additional Coalescing Prefilter	2002N-1B1-DX	2002N-1B1-DX	2104N-1B1-DX	2208N-1B1-DX	2312N-1B1-DX		
Replacement Filter Cartridges for Optional Prefilter	100-12-DX	100-12-DX	100-18-DX	150-19-DX	200-35-DX		
Pressure Regulator (0-130 psig) 1/2" NPT Ports	72-130	72-130	72-130		_		



IT Series Membrane Air Dryers for +35°F (-2°C) Dewpoint*

Offer a reliable, efficient, and economical alternative to pressure swing and refrigerant dryer technologies

Require no electricity thus lowering operating costs

Produce +35°F (-2°C) dewpoint, ideal for critical points of use

Produce +15°F (-9°C) dewpoint in air systems with existing refrigerated air dryers

No moving parts

Silent operation

No desiccant to change



Applications

Food processing and automation

Electronics/Dry Boxes

Coordinate Measurement Machines

Critical Pneumatic Valves

Protection of Pneumatic Instrumentation

Low Dewpoint Instrument Air

Pneumatic Equipment

Dry Air for Hazardous Areas

IT Series Membrane Dryers

There are many variables that will affect the output specification of compressed air. By the time air reaches all its intended point of use, changes in pressure and temperature can contribute to potential contamination. As capital equipment tolerances become tighter and more sensitive to this contamination, maintenance costs will escalate if equipment is not adequately protected. In cases where standard air filtration is not sufficient or where the reliability, performance and operating cost of older dryer technologies is becoming more significant, a Balston Membrane Dryer provides a reliable and economical alternative.

IT Series Point of Use Membrane Dryers

Balston Membrane Air Dryers combine superior coalescing filtration technology with a proven, innovative membrane system to supply clean, dry, +35°F (-2°C) dewpoint compressed air. If the house compressed air is equipped with a refrigerated dryer, the dewpoint drops to +15°F (-9°C). The Balston Membrane Dryers are available in 8 different models which can deliver compressed air at flow rates up to 100 SCFM (170 NM3/Hr).


dewpoint. The systems are engineered for easy installation, operation, and long term reliability. By incorporating high efficiency coalescing filtration and the highest efficiency membrane available, the systems provide low cost operation with the lowest minimal maintenance.

^{*} If the house compressed air is equipped with a refrigerated dryer, the dewpoint drops to +15°F (-9°C).




212 1-800-343-4048

IT Series Membrane Air Dryers for +35°F (-2°C) Dewpoint*

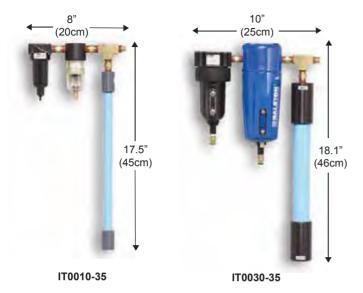



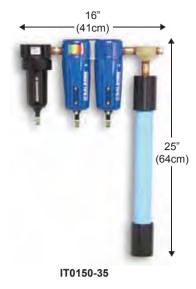

Easy to Operate and Maintain

Installation consists of simply connecting a standard compressed air line to the inlet and connecting the outlet to your application. The unit is ready for trouble-free operation. This system is designed to operate 24 hours per day, 7 days per week.

Once the system is operating, it requires little monitoring. The only maintenance involves changing the coalescing prefilter cartridges periodically. The membrane module does not require any maintenance.



Flow Rates

Model Number	IT0010-35	IT0030-35	IT0080-35	IT0150-35	IT0250-3560	IT0250-3500	IT0500-3560	IT0500-3500	IT1000-3560	IT1000-3500
Flow @ 100 psig Inlet Pressure, scfm (Nr	1 (1.7) m³/Hr)	3 (5.1)	8 (13.6)	15 (25.5)	25 (42.5)	N/A	50 (85)	N/A	100 (170)	N/A
Flow @ 101-150 psig Inlet Pressure, scfm (Nr		3 (5.1)	8 (13.6)	15 (25.5)	N/A	25 (42.5)	N/A	50 (85)	N/A	100 (170)
Regeneration Flow @ 100 psig, scfm (Nm³/Hr)		0.5 (.85)	1.5 (2.5)	2.7 (4.6)	4.5 (7.6)	4.5 (7.6)	9.0 (15.3)	9.0 (15.3)	18.0 (30.6)	18.0 (30.6)

⁽¹⁾ Total Air Consumption = Regeneration + Outlet Flow.





^{*} If the house compressed air is equipped with a refrigerated dryer, the outlet dewpoint drops to +15°F (-9°C).

IT Series Membrane Air Dryers for +35°F (-2°C) Dewpoint*

Principal Specifications

Model Number	IT0010-35	IT0030-35	IT0080-35	IT0150-35	IT0250-3560	IT0250-3500	IT0500-3560	IT0500-3500	IT1000-3560	IT1000-3500
Min/Max Inlet Air Temp.	40°F/120°F (4°C/49°C)	40°F/120°F (4°C/49°C)	40°F/120°F (4°C/49°C)	40°F/120°F (4°C/49°C)	40°F/120°F (4°C/49°C)	40°F/120°F (4°C/49°C)	40°F/120°F (4°C/49°C)	40°F/120°F (4°C/49°C)	40°F/120°F (4°C/49°C)	40°F/120°F (4°C/49°C)
Min/Max Ambient Air Temp.	40°F/120°F (4°C/49°C)	40°F/120°F (4°C/49°C)	40°F/120°F (4°C/49°C)	40°F/120°F (4°C/49°C)	40°F/120°F (4°C/49°C)	40°F/120°F (4°C/49°C)	40°F/120°F (4°C/49°C)	40°F/120°F (4°C/49°C)	40°F/120°F (4°C/49°C)	40°F/120°F (4°C/49°C)
Min/Max Inlet Pressure	60/150 psig (4.1/10 barg)	60/150 psig (4.1/10 barg)	60/150 psig (4.1/10 barg)	60/150 psig (4.1/10 barg)	60/100 psig (4.1/6.9 barg)	100/150 psig (6.9/10 barg)	60/100 psig (4.1/6.9 barg)	100/150 psig (6.9/10 barg)	100/150 psig (6.9/10 barg)	100/150 psig (6.9/10 barg)
Max. Pressure Drop (1)	3 psid (.2 bard)	3 psid (.2 bard)	3 psid (.2 bard)	3 psid (.2 bard)	5 psid (.34 bard)	5 psid (.34 bard)	5 psid (.34 bard)	5 psid (.34 bard)	5 psid (.34 bard)	5 psid (.34 bard)
Wall Mountable	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes
Mechanical Separator (Included)	F14F17B	F06F18B	F06F18B	F07F38B	F07F38B	F07F38B	F07F38B	F07F38B	F602-08WJR	F602-08WJR
Coalescing Prefilters (1)	8A02N-OB2-BX	2002N-0B1-BX	2002N-0B1-BX	2004N-1B1-DX 2004N-0B1-BX	2104-1B1-DX 2104-0B1-BX	2104N-1B1-DX 2104-0B1-BX	2208N-1B1-DX 2208N-0B1-BX	2208N-1B1-DX 2208N-0B1-BX	2208N-1B1-DX 2208N-0B1-BX	2208N-1B1-DX 2208N-0B1-BX
inlet Port Size	1/4" NPT	1/4" NPT	1/4" NPT	1/2" NPT	1/2" NPT	1/2" NPT	1/2" NPT	1/2" NPT	1" NPT	1" NPT
Outlet Port Size	1/4" NPT	1/4" NPT	1/4" NPT	1/2" NPT	1" NPT	1" NPT	1" NPT	1" NPT	1" NPT	1" NPT
Electrical Requirements	None	None	None	None	None	None	None	None	None	None
Dimensions (cm)	17.5"Lx8"Wx2.5"D (44.5 x 20.3 x 6.3)	18.1"Lx10"Wx4"D (45.2 x 10.5 x 6.3)	24"Lx11.1"Wx4"D (61 x 28.2 x 6.3)	25"Lx16"Wx4.5"D (63.5 x 40.6 x 11.4)	26"Lx18"Wx6"D (66 x 45.7 x 15.2)	26"Lx18"Wx6"D (66 x 45.7 x 15.2)	39"Lx21"Wx6"D (99 x 53.3 x 15.2)	39"Dx21"Wx6"D (99 x 53.3 x 15.2)	47"Dx28"Wx7"D (119 x 71 x 18)	47"Dx28"Wx7"D (119 x 71 x 18)
Shipping Weight	1.62 lbs (.73 kg)	6.68 lbs (3 kg)	6.68 lbs (3 kg)	14.88 lbs (6.75 kg)	24.5 lbs (11.11 kg)	24.5 lbs (11.11 kg)	36.5 lbs (16.55 kg)	36.5 lbs (16.55 kg)	52 lbs (24 kg)	52 lbs (24 kg)

Ordering Information for assistance call toll free at 800-343-4048, 8AM to 5PM EST

Model Number	IT0010-35	IT0030-35	IT0080-35	IT0150-35	IT0250-3560	IT0250-3500	IT0500-3560	IT0500-3500	IT1000-3560	IT1000-3500
Replacement Prefilter Cartridges*										
Stage 1	PS403	PS702	PS702	PS802	PS802	PS802	PS802	PS802	EK602VB	EK602VB
Stage 2 **				5/100-12-DX	5/100-18-DX	5/100-18-DX	5/100-19-DX	5/150-19-DX	5/150-19=DX	5/150-19-DX
Stage 3	5/050-05-BX	5/100-12-BX	5/100-12-BX	5/100-12-BX	5/100-18-BX	5/100-18-BX	5/150-19-BX	5/150-19-BX	5/150-19-BX	5/150-19-BX

^{*} If the house compressed air is equipped with a refrigerated dryer, the dewpoint drops to +15°F (-9°C).





214 1-800-343-4048

If compressed air is extremely contaminated, a Grade DX prefilter should be installed directly upstream of the membrane dryer Filtration efficiency: 99.99% at 0.01 micron.

Membrane Air Dryers for Coordinate Measurement Machines

The Only Way To Remove Oil and Dry Compressed Air!

Now there is only one sensible way to remove oil and dry compressed air! Refrigerant air dryers are becoming a thing of the past. High efficiency, durable membrane technology is quickly becoming the standard for drying compressed air. Parker Hannifin is leading the way with membrane technology that consumes the least amount of compressed air for regeneration.

Balston CMM Air Dryers combine a superior coalescing technology with a proven, innovative membrane system to supply clean, dry compressed air with a constant dewpoint to 35°F (2°C). The Balston CMM Air Dryers are available in 2 different models which can deliver dry, compressed air at flow rates up to 15 SCFM (25.5 Nm³/Hr). The Balston Dryers are engineered for easy installation, operation, and long term reliability.



Customer Testimonial:

"Before we bought a Balston Membrane Dryer, we required two repairs to our CMM; the first cost \$10,000 and the next was over \$6,000. In the more than two years since installing the Balston Membrane Dryer we have not needed any repairs."

Rick Nisula Maintenance Buyer Smith's Aerospace

Product Features:

- Designed specifically for use with CMMs
- Protects CMMs from costly repairs caused by oil and water
- Ideal for supplying pure, dry air to Brown & Sharpe, Zeiss, IMS and MTI CMMs
- No heat or vibration generated; prevents inaccurate measurements
- Guaranteed dewpoint of 35°F (2°C)
- Requires no electricity resulting in lower operating costs
- Complete system with high efficiency coalescing filters
- Silent operation
- Minimal maintenance required





Compressed Air Dryers


Membrane Air Dryers for Coordinate Measurement Machines

Problems that cause costly repairs to Coordinate Measurement Machines:

A CMM has 26 highly sensitive air bearings per machine. If oil and moisture are present in the air system supplying the air bearings, the .5mm hole in the bottom of the air bearing will become clogged producing a "drag" in the machine. As the resistance builds, it causes hysteresis in the measurements producing an inaccurate measurement.

If this problem is allowed to continue, the bearing will drag on the aluminum ways and wear a groove in the machine. Once a groove develops, the air bearing will not produce lift if air is leaking out through the groove in the machine ways. To correct the problem, a complete rebuild of the machine at the factory is necessary which can be as costly as purchasing a new machine.

If the problem is caught in time, a service team will be required to come to the facility to repair the machine. The team will remove the bearings and the holes and grooves are cleaned with alcohol. Each bearing is then resurfaced with 600-1500 grit paper. Badly corroded or pitted air bearings are replaced at a cost of \$200.00 per bearing. Air hoses are also replaced, and all air passages are cleaned. The machine is then reassembled, and the time-consuming and costly task of recalibrating the machine with the ball bar and a B89 test is performed as the final step in repairing the machine.

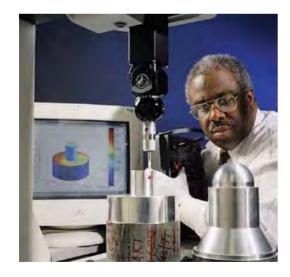

How to avoid costly maintenance problems:

Many repairs average upwards of \$5,000.00. These costly repairs and downtime can easily be avoided by installing a Balston high efficiency Membrane Air Dryer. The Balston Membrane Air Dryer will provide extremely clean, dry air to a CMM, eliminating the possibility of contamination. The Dryer utilizes patented membrane technology, unsurpassed in performance and durability to dehydrate and purify the compressed air. The Balston Membrane Dryer is the only system designed specifically for CMM applications.

Principal Specifications 35°F (2°C) Pressure Dewpoint (1)

Model Number	CM0080-35	CM0150-35
Flow @ 100 psig Inlet Pressure	8 scfm (13.6 Nm³/Hr)	15 scfm (25.5 Nm³/Hr)
Compressed Air Requirements	9.5 scfm (16.1 Nm ³ /Hr)	17.7 scfm (30 Nm³/Hr)
Min/Max Inlet Air Temp.	40°F/120°F (4°C/49°C)	40°F/120°F (4°C/49°C)
Min/Max Ambient Air Temp.	40°F/120°F (4°C/49°C)	40°F/120°F (4°C/49°C)
Min/Max Inlet Pressure	60/150 psig (4.1/10 barg)	60/150 psig (4.1/10 barg)
Max. Pressure Drop	3 psid (.2 bard)	3 psid (.2 bard)
Wall Mountable	Yes	Yes
Mechanical Separator Included	F06F18B	F07F38B
Coalescing Prefilters	– 8002N-0A1-BX	8004N-1A1-DX 8004N-0A1-BX
inlet Port Size	1/4" NPT	1/2" NPT
Outlet Port Size	1/4" NPT	1/2" NPT
Electrical Requirements	None	None
Dimensions (cm)	24"L x 11.1"W x 4"D (61cm x 28.2cm x 6.3cm)	25"L x 16"W x 4.5"D (63.5cm x 40.6cm x 11.4cm)
Shipping Weight	6.68 lbs (3 kg)	14.88 lbs (6.75 kg)

Notes

- 1 Dewpoint specified for saturated inlet air at 100°F (38°C) and 100 psig.
- $2\,$ Filtration efficiency: 99.99% at 0.01 micron.

Ordering Information

For assistance call toll free at 800-343-4048, 8AM to 5PM EST

Model Number	CM0080-35	CM0150-35
Replacement Filter Elements		
1st Stage	PS702	PS802
2nd Stage	100-12-BX	100-12-DX
3rd Stage		100-12-BX



5000 Series Smart Dryer Membrane Air Dryers

Operating costs are 35 - 40% less than a refrigerant air dryer*

No electricity required

State-of-the-art membrane technology

Guaranteed 35°F (-2°C) dewpoint - 13% dryer than refrigerant dryers

Guaranteed 15°F (-9°C) in air systems equipped with a refrigerant air dryer

Durable - will hold up to the dirtiest compressed air system

No requirement for costly maintenance contracts

Output capacities to 200 scfm (340Nm³/Hr) **

Complete system with profilters, autodrains, and

Complete system with prefilters, autodrains, and pressure indicators



Model SMRT 5100

The Only Way To Dry Compressed Air!

Now, there is only one sensible way to dry compressed air! High efficiency, durable membrane technology is quickly becoming the standard for drying compressed air. Parker Hannifin is leading the way with membrane technology that consumes the least amount of compressed air for drying.

The SMART Dryer™ utilizes sophisticated technology to monitor system parameters and automatically adjusts the regenerative sweep flow as required. The variable sweep system results in significant energy savings and low operating costs.

The SMART Dryer[™] technology offers another advantage over refrigerant air drying technology as it does not produce condensate. An average 25 HP compressor system can produce up to 1,800 gallons (6.8 m³) of oily condensate per year! The refrigerant dryer condenses it into an oily/water emulsion which has to be disposed of at a high cost to you! The Balston® Membrane Air Dryer is designed to operate continuously, 24 hours a day, 7 days a week. The only maintenance required is changing the prefilter cartridges twice a year, which take approximately 5 minutes and requires no tools!

Applications

General Compressed Air Mainlines Process Controls

HVAC Systems

Instrument Cabinets CNC/CMM Machinery

Fire and Sprinkler Systems

Pneumatic Controls

Dry Air for Hazardous Areas

Chemical Blanketing and Packaging

Electronics/Dry Boxes

Laser Optics

Spray Painting

Bag House Controls

Benefits

Easy to install - no electrician required to install or maintain system

No refrigerants or freons - environmentally friendly

Complete system with prefilters, auto drains, and pressure gauges

Compact size





^{*}Non-cycling refrigerant air dryer

^{**} Consult Factory for higher flow rates

5000 Series Smart Dryer Membrane Air Dryers

Why buy a Balston SMART Dryer[™] instead of a cycling refrigerant air dryer?

The Balston SMART Dryer will save YOU money and offer better performance!

All Balston SMART Dryers require no electricity.

All air dryers are sized based on the maximum capacity output of a compressed air system with inlet conditions assumed to be 100°F inlet temperature, 100 psig inlet pressure and 100°F ambient temperature. In the majority of installations, it is unlikely air dryers will be required to operate under these extreme conditions. Most importantly, the majority of compressed air systems are not operating at the maximum output capacity.

Refrigerant and desiccant air dryers, sized to meet these operating conditions are designed to run continuously regardless of the system's demands, when in fact the actual system conditions are far less.

The result is significant operating costs in wasted energy and wear and tear on refrigerant compressors, cooling systems, drains and other componentry.

In a typical manufacturing plant operating one 8 hour shift with a 100 SCFM (170 Nm³/Hr) compressor system running at 75% capacity (on average over the 8 hour shift), a typical non-cycling refrigerant air dryer would cost \$716 in just electrical costs alone, compared to the Balston SMART Dryer with only \$436 in electrical costs. If you factor in the annual maintenance costs of \$600 for a non-cycling refrigerant dryer compared to \$130 for the Balston SMART Dryer, there is a total annual savings of over \$750.

Recently, refrigerant manufacturers have responded to this issue by developing a cycling air dryer which cools a cold storage heat sink reservoir. Once the reservoir is cooled to the minimum temperature the compressor (refrigerant) is shut off. The compressor cycles back on when the temperature of the storage reservoir reaches a preset upper limit. This reduces the total energy consumption of the dryer however it could produce significant variations in output dewpoints.


The Balston SMART Dryer does not require refrigerant, compressors, cooling systems or other componentry that carries high operating costs (energy) and maintenance costs. The Balston SMART Dryer utilizes sophisticated technology to monitor the system parameters and automatically adjusts the regenerative sweep flow as required. The variable sweep system results in significant energy savings and low operating costs with no fluctuation in output dewpoints.

In a typical manufacturing plant operating an 8 hour shift with 100 SCFM (170 Nm³/Hr) compressor system

running at 75% capacity (on average over the 8 hour shift), a typical cycling refrigerant air dryer would cost \$454.00 in electrical costs alone, compared to the Balston SMART Dryer with only \$436.00 in electrical costs. If you factor in the annual maintenance cost of \$800 for a cycling refrigerant dryer compared to \$130.00 for the Balston SMART Dryer, there is a total annual savings of over \$685.00

Additionally, there are no moving parts, no freons that need recharging, no compressors to be serviced and no cooling coils to be cored and cleaned.

Most importantly, the Balston SMART Dryer is producing a constant 35°F dewpoint which is 13% dryer than a cycling refrigerant air dryer (ppm weight in air).

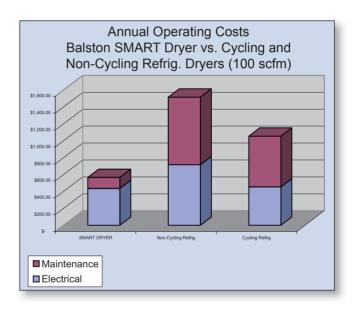

Here's What Our Customers Say

"Our compressed air system is now completely dry and clean at a very reasonable cost. And we gain at least three hours of production time each week by not having to shut down to clean rusted valves..."


Wayne Etchells, Vice President Melton Corporation, Cranston, R.I.


"This new type of membrane dryer was just what we needed to eliminate problems with water building up in compressed air lines...Since the day we installed it, we haven't had a single problem with rust. The time and money we save by not having to repair spindles and air motors pays for the cost of the dryer every few months."

John Napier, Maintenance Engineer King Machine, Akron, OH


218 1-800-343-4048

5000 Series Smart Dryer Membrane Air Dryers

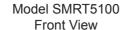

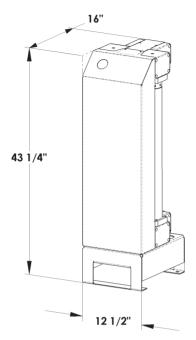

Model SMRT5200 Front View

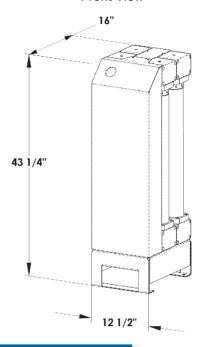

Principal Specifications

Model Number	Membrane Air Dryers SMRT5100	SMRT5200
Max Flow Rate @35°F(2°C) dewpoint	100 SCFM (170 Nm ³ /Hr)	200 SCFM (340 Nm ³ /Hr)
Dewpoint	35°F (2°C) / 15°F (-9°C) (1)	35°F (2°C) / 15°F (-9°C) (1)
Min/Max Inlet Air Temp.	40°F/120°F (4°C/49°C)	40°F/120°F (4°C/49°C)
Ambient Temp. Range	40°F/110°F (4°/43°C)	40°F/110°F (4°/43°C)
Min/Max Inlet Pressure	80 psig/150 psig (5.5 barg/10 barg)	80 psig/150 psig (5.5 barg/10 barg)
Max Dewpoint	120°F	120°F
Max Compressed Air Requirement	113 SCFM (192 Nm³/Hr)	226 SCFM (384 Nm³/Hr)
Max Pressure Drop	10 psid (0.7 bard) (2)	10 psid (0.7 bard) (2)
Inlet/Outlet Port Size	1 1/2"NPT(male)	2"NPT(male)
Physical Dimensions	12.5"w x 43.25"h x 16"d (3) (31.75cm x 109.9cm x 40.6cm)	12.5"w x 43.25"h x 16"d (3) (31.75cm x 109.9cm x 40.6cm)
Shipping Weight	175 lbs(86 kg)	250 lbs(113kg)
	Model Number Max Flow Rate @35°F(2°C) dewpoint Dewpoint Min/Max Inlet Air Temp. Ambient Temp. Range Min/Max Inlet Pressure Max Dewpoint Max Compressed Air Requirement Max Pressure Drop Inlet/Outlet Port Size Physical Dimensions	Model Number Membrane Air Dryers SMRT5100 Max Flow Rate @35°F(2°C) dewpoint 100 SCFM (170 Nm³/Hr) Dewpoint 35°F (2°C) / 15°F (-9°C) (1) Min/Max Inlet Air Temp. 40°F/120°F (4°C/49°C) Ambient Temp. Range 40°F/110°F (4°/43°C) Min/Max Inlet Pressure 80 psig/150 psig (5.5 barg/10 barg) Max Dewpoint 120°F Max Compressed Air Requirement 113 SCFM (192 Nm³/Hr) Max Pressure Drop 10 psid (0.7 bard) (2) Inlet/Outlet Port Size 1 1/2"NPT(male) Physical Dimensions 12.5"w x 43.25"h x 16"d (3) (31.75cm x 109.9cm x 40.6cm)

Notes:

- 1 35°F (2°C) Dewpoint specified for saturated inlet air at 100°F(38°C) and max. flow at 100 psig (6.9 barg). 15°F (-9°C) Dewpoint specified for saturated inlet air at 50°F (10°C) and max. flow at 100 psig (6.9 barg).
- 2 Max. pressure drop measured at max flow rate @ 100 psig (6.9 barg). Pressure drop will increase at lower feed pressures consult factory.
- 3 Excluding coalescing prefilter assembly.
- 4 Filtration efficiency: 99.99% at 0.01 micron.

Ordering Information For assistance call 1-800-343-4048

Model Number	SMRT5100	SMRT5200	
Coalescing Prefilter	2312N-1B1-DX	A15/80-DX	
Assembly	2312N-1B1-BX	A15/80-BX	
Replacement Prefilter	200-35-DX	200-80-DX	
Cartridges (every 6 months)	200-35-BX	200-80-BX	
Membrane Replacement Module	D01-0086	D01-0086	
Automatic Drain Kit	21552	21552	

Compressed Air Dryers




Cabinet Dryers Eliminate Moisture Problems in Electrical Cabinets and Motors

Balston CD Series Cabinet Dryers

You demand a lot from your electrical cabinets and motors. They are subject to nightly high pressure, hot wash downs and then expected to remain dry in a refrigerated area. Over time most cabinets develop moisture inside which leads to premature component failures. This interrupts production and costs you money. Expensive vortex coolers or heaters don't work. Vortex coolers use a considerable amount of air and have a high operating cost. Heaters simply raise the humidity of the air inside the cabinet and don't eliminate the moisture.

The Parker Balston Cabinet Dryer serves to reduce the humidity inside the cabinet to less than 10% RH. Any water that infiltrates the cabinet evaporates quickly. Electrical components stay clean and dry which prolongs their life.

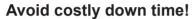

Many plants struggle with moisture problems by managing downtime emergencies. Emergencies divert limited maintenance personnel and disrupt production at the cost of thousands of dollars per hour. The Cabinet Dryer reduces these maintenance and lost production costs by 80% or more. A typical customer will see savings of \$10K - 15K per year. The Cabinet Dryer will operate continuously and reliably without operator attention thus freeing up valuable maintenance personnel who are better devoted to important routine maintenance work rather than daily emergency response.

Product Features:

- Designed specifically for wash down areas
- Protects electrical cabinet components from damage caused by water and high humidity
- Minimizes pools of water inside cabinets
- Positive pressure keeps dust out
- Adds no heat to the cabinet
- Reduces cabinet humidity to less than 10% RH
- Requires no electricity, low operating costs
- Easy to install and maintain
- Quiet operation
- Protect motors, touch screens, drives and other critical components





Do Your Cabinets Look Like This?



Corrosion leads to premature component failure



Water accumulation in electrical

A Cabinet Dryer will keep your cabinets looking as good as new





220 1-800-343-4048

Cabinet Dryers Eliminate Moisture Problems in Electrical Cabinets and Motors

Principal Specifications

Model Number	CD0005	CD0010	CD0030
Cabinet Size Range (2)	0 - 4 FT ³ (0 - 0.11m ³)	4 - 12 FT ³ (0.11m ³ - 0.34m ³)	12 - 36 FT ³ (0.34m ³ - 1m ³)
Min/Max Inlet Air Temp	40°F/120°F (4°C/49°C)	40°F/120°F (4°C/49°C)	40°F/120°F (4°C/49°C)
Min/Max Ambient Air Temp	35°F/120°F (2°C/49°C)	35°F/120°F (2°C/49°C)	35°F/120°F (2°C/49°C)
Air Consumption	0.6 SCFM (17 slpm)	1.25 SCFM (35.4 slpm)	3.5 SCFM (99 slpm)
Min/Max Air Pressure	60 psi/150 psi (4.1 BAR/10.3 BAR)	60 psi/150 psi (4.1 BAR/10.3 BAR)	60 psi/150 psi (4.1 BAR/10.3 BAR)
Delivered Dew Point	-7°F(-22°C) (1)	-7°F(-22°C) (1)	-7°F(-22°C) (1)
Inlet and Outlet Port Size	1/4" NPT	1/4" NPT	1/4" NPT
Electrical Requirements	None	None	None
Dimensions	3"w x 9.2"h x 2"d (7.6cm x 2.34cm x 5cm)	3"w x 15.2"h x 2"d (7.6cm x 38.6cm x 5cm)	4.6"w x 15.3"h x 2.9"d (11.7cm x 38.9cm x 7.4cm)
Shipping Weight	1.5 lbs (0.68 kg)	2 lbs (0.9 kg)	2.5 lbs (1.1 kg)

Notes:

- 1 Delivered dewpoint is specified for saturated inlet air at 100°F (38°C) and 100 psig (6.9 BAR).
- 2 If the cabinet is not tightly sealed, consider upsizing to the next module size.
- 3 Filtration efficiency: 99.99% at 0.01micron.
- 4 For heavily contaminated air lines, install additional prefiltration.

Ordering Information For assistance call toll free at 800-343-4048, 8AM to 5PM EST

Model Number	CD0005	CD0010	CD0030
Replacement Filter Elements	070-063-BX	070-063-BX	070-063-BX
Replacement Auto Drain	C02-2392	C02-2392	C02-2392

Here's what our customers say:

"We tried heaters, fans and vortex coolers, our only solution was to use a Parker Balston dryer that continuously purges the cabinet with dry air."

- Lee Clarkson Ross Industries

"I've been with Smithfield for 15 years and we've had issues with wet electrical cabinets for 15 years. We installed the cabinet dryer on our wettest cabinet to see if it would work. Our Multivac™ packager was having significant issues. It was out of service 2-3 times per week due to condensation inside the cabinet. When we installed the dryer we noticed a difference right away. The water droplets on the walls of the cabinet were gone and our downtime from moisture was completely eliminated. It worked just like they told me."

Maintenance Manager Large Meat Processing Plant







PSA Air Dryer



Balston Compressed Air Dryer

Reduce the dewpoint of compressed air to -100°F (-73°C)

Unattended 24 hour operation

Lightweight and compact

No desiccant to change

Applications

Pneumatic Tool Stations

HVAC Systems

Purge Electrical Boxes

Air Lines Subject to Sub-Freezing

Temperatures

Blanketing Moisture Sensitive Materials

Spray Painting

Pneumatic Instrumentation

Robotics

Lasers

Dry Boxes

Model 75-A20NA

Balston regenerative PSA desiccant dryer reduces the atmospheric dewpoint of compressed air without operator attention. Model 75-A20NA will reduce the dewpoint to -100°F (-73°C). The dryer is delivered complete and ready for easy installation. The dryer has coalescing prefilters with automatic drains, PSA drying towers, a particulate final filter, a moisture indicator, differential pressure indicator, and pretested controls.

The Balston regenerative dryer has safe, 12 VDC electrical controls. To install, simply attach the inlet (60 psig/4.1 BARG minimum) and outlet air lines, plug the electrical transformer into a wall outlet - no electrician required - and the unit is ready for trouble-free operation.

This reliable dryer can be easily installed, operated, and maintained by personnel not trained in instrumentation. The Balston dryer is useful when air comes into contact with moisture-sensitive materials, or when outside compressed air lines are subjected to sub-freezing temperatures.

The 75-A20NA is a wall mountable unit. It has a 10 SCFM/min. (283 lpm) capacity (at 100 psig/6.9 BARG inlet pressure).



PSA Air Dryer

Principal Specifications	
Model	75-A20NA
Dewpoint	-100°F (-73°C) (1)
Max. Dry (outlet) Air Flow Rate for Specified Dew Point (1)	
Inlet Pressure 125 psig	12.0 SCFM (340 lpm)
Inlet Pressure 100 psig	10.0 SCFM (283 lpm)
Inlet Pressure 80 psig	8.3 SCFM (235 lpm)
Inlet Pressure 60 psig	6.5 SCFM (184 lpm)
Air Loss for Regeneration	2.5 SCFM (71 lpm) (2)
Min/Max Inlet Air Pressure	60 psig/125 psig (4.1 BARG/8.6 BARG)
Max. Inlet Air Temperature	78°F (25°C) (3)
Pressure Drop at Max. Flow Rate	8 psid (0.055 BARD)
Inlet/Outlet Port Size (female)	1/4" NPT
Electrical Requirements	120 VAC/60 Hz. (4)
Shipping Weight	50 lbs. (23 kg)
Dimensions	15"W X 41"H (38cm X 104cm)

Note

- 1 Dewpoint will be lower than specified at lower air flow.
- 2 Total air required = air loss for regeneration + process demand (up to max. dry air flow rate).
- 3 Outlet dewpoint will increase at higher inlet compressed air temperatures.
- 4 Power consumption less than 10 watts. Each dryer is shipped with a 12 VDC plug-in transformer to connect to the local electrical supply
- 5 Filtration efficiency: 99.99% at 0.01 micron.

Ordering Information		
For Assistance, call toll-free at 1-800-343-4048 8AM to 5PM Eastern Time		
Description	Model Number	
Balston Compressed Air Dryer	75-A20NA	
Replacement Filter Cartridges 1st stage (box of 10)	100-18-DX	
Replacement Filter Cartridges 2nd stage (box of 10)	100-18-BX	
Maintenance Kit, 1 year supply of filter cartridges	MK7525P	



Customer Support and Service Network for Balston® Products



Customer Support and Assistance

Balston products are supported by a staff of 70+ highly trained sales and service specialists located throughout North America and Canada.

The Specialists are continuously trained and updated on all Balston branded products and technologies, ensuring prompt, accurate customer service.

When on-site service isn't practical, replacement items are shipped the same day you contact us directly to your facility from one of our near by Stocking Centers or directly from our Manufacturing Plant. We guarantee overnight delivery and we pay the freight!

World Class Manufacturing

All Balston branded products are manufactured within strict guidelines of a total quality management program. Each product incorporates superior workmanship and the best quality components available ensuring long term reliability and trouble free operation. Your complete satisfaction is guaranteed.

Technical Support Staff

If you have technical questions, special product modifications or unique applications, Balston's technical information and support staff are available to assist you with your requirements.

These highly trained application engineers are committed to ensuring your questions are answered accurately, and your special needs are attended to. In addition, they will work closely with you on new and unique applications.

This team of engineers can be contacted at 1-800-343-4048 8AM to 5PM Eastern Time.



224 1-800-343-4048

Part Number	Page Number(s)	Additional Information
050-05-()	79	
050-07-()	90	
050-11	75, 90	
050-11Q	90,100	
050-11-()	75, 90, 91, 106, 107	
05R	28, 41	NEW ADDITION
05R113A	41, 42	NEW ADDITION
05R118A	41, 42	NEW ADDITION
05R213A	41, 42	NEW ADDITION
05R218A	41, 42	NEW ADDITION
070-063-BX	195, 221	NEW ADDITION
07R	28 , 45, 46	NEW ADDITION
07R213A	45, 46	NEW ADDITION
07R313A	45, 46	NEW ADDITION
07R413A	45, 46	NEW ADDITION
06E	29, 53, 54	NEW ADDITION
06E12B13A	53, 54	NEW ADDITION
06E14B13A	53, 54	NEW ADDITION
06E16B13A	53, 54	NEW ADDITION
06E18B13A	53, 54	NEW ADDITION
06E22B13A	53, 54	NEW ADDITION
06E24B13A	53, 54	NEW ADDITION
06E26B13A	53, 54	NEW ADDITION
06E28B13A	53, 54 53, 54	NEW ADDITION
06E32B13A	53, 54	NEW ADDITION
06E34B13A	53, 54	NEW ADDITION NEW ADDITION
06E36B13A 06E38B13A	53, 54 53, 54	NEW ADDITION NEW ADDITION
10F	53, 54	NEW ADDITION NEW ADDITION
10F01E	28, 33, 3433, 34 33, 34	NEW ADDITION
10F03E	33, 34	NEW ADDITION
10F05E	33, 34	NEW ADDITION
10F07E	33, 34	NEW ADDITION
10F11E	33, 34	NEW ADDITION
10F13E	33, 34	NEW ADDITION
10F15E	33, 34	NEW ADDITION
10F17E	33, 34	NEW ADDITION
100-12-404	95	NEWABBITION
100-12-BX	177, 185, 201, 211, 216	
100-12-DH21	96	
100-12-DX	177, 201, 211, 216	
100-12-SA	174, 185, 191	
100-12	75	
100-12-()	75, 79, 88, 89, 91, 92, 93, 10	6 174 187
100-185-()	106	0, 11 1, 101
100-18-BX	177, 201, 211, 223	
100-18-DX	177, 201, 206, 211, 223	
100-18-SA	204	
100-18-()	174, 187	
100-25-BX	201	
100-25-DH21	96	
100-25	75	
100-25-()	75, 79, 88, 89, 91, 92, 106, 1	91
105S6	76, 77, 78, 90	



```
11010
                   113
                   41
11015
                   62
11970
                   62
11971
11972
                   62
11977
                   62
                                               NEW ADDITION
12E
                   24
12E 27
                   25
12E 37
                   25
                   25
12E 47
130-14-()
                   25
                   62
14000
14001
                   62
14157
                   123, 133
                   123, 133
14158
14159
                   123, 133
14160
                   131, 133
                   131, 133
14162
14163
                   131, 133
14164
                   131, 133
14165
                   131, 133
14166
                   131, 133
14168
                   133
14172
                   121, 127, 128, 131, 134
14173
                   118, 119, 123, 126, 127, 128, 130, 131, 132, 134
                   118, 119, 127, 128, 130, 131, 132, 134
14174
14175
                   118, 119, 131, 132
14176
                   134
                                               NEW ADDITION
                   134
                                               NEW ADDITION
14177
                   127, 134
14178
14179
                   131, 132, 134
14180
                   121, 134
                   121, 127, 128, 131, 134
14181
14182
                   118, 119, 127, 128, 130, 132, 134
14183
                   123, 130, 134
                   134
14184
14E
                   29, 49, 50
                                               NEW ADDITION
14E01B13F
                   49, 50
                                               NEW ADDITION
14E03B13F
                   49, 50
                                               NEW ADDITION
14E05B13F
                   49, 50
                                               NEW ADDITION
14E07B13F
                   49, 50
                                               NEW ADDITION
14E11B13F
                   49, 50
                                               NEW ADDITION
                   49, 50
14E13B13F
                                               NEW ADDITION
                   49, 50
14E15B13F
                                               NEW ADDITION
                                               NEW ADDITION
14E17B13F
                   49, 50
150-12- X
                   102
150-19-BX
                   211
                   177, 211
150-19-DX
150-19-()
                   177, 187
                   77, 78, 86, 87
15/80S6
17L
                   26
                   27
17L22BE
                   27
17L32BE
                   27
17L42BE
19158
                   113
```



19202 19206 19290	113 113 113	
19206	113	NEW ADDITION
2206G-0A0-() 2206 2206N-1B1-() 2206N1B2-() 2206N-0A0-() 2208	11, 185, 187 3, 11, 12, 184, 185, 187 11, 185, 187 11, 185, 187 11, 185, 187 3, 11, 12, 184, 185, 187	
2208G-1B1-()	11, 185, 187	



```
11, 185, 187
2208G-1B2-()
2208G-0A0-()
                    11, 185, 187
2208N-1B1-()
                    11, 185, 186, 187, 211
2208N-1B2-()
                    185, 187
2208N-0A0-()
                    11, 185, 186, 187
23
                    173, 186
2312
                    3, 11, 12, 184, 185, 187
2312G-1B1-()
                    11, 185, 186
2312G-1B2-()
                    11, 185, 187
                    11, 185, 187
2312G-0A0-()
2312N-1B1-()
                    11, 185, 186, 187, 211
2312N-1B2-()
                    11, 185, 186, 187
2312N-0A0-()
                    11, 185, 186, 187
23/75R
                    146, 147, 148
                    169
23/75SR
                    78,84
26/35
26/35D-3000
                    86, 87
                    86, 87
26/35D-5000
27
                    86, 140
                    68, 76, 77, 78, 86, 87
27/35
27/35-3000
                    86, 87
27/50
                    136, 140
27/75SR
                     168
                    76, 77, 78, 86, 87
27/80
27/80-3000
                    86, 87
27/95
                    140
                    176, 177
2A-2002N-3B1
2A-2003N-3B1
                    176, 177
                    176, 177
2A-2004N-3B1
2A-2104N-3B1
                    176, 177
2A-2206N-3B1
                    176, 177
                    176, 177
2A-2208N-3B1
                    176, 177
2A-2312N-3B1
30
                    71
30/12
                    76, 78, 79
                    76, 78, 79
30/25
3/100-12-SA
                    191
                    187
3/100-12-()
3/100-18-()
                    187
3/100-25-SA
                     191
31G
                    75, 77, 78, 91
31GCFL
                    68
31GCFL-1/4
                    106
31S6
                    75, 77, 78, 91, 163, 164, 166
31S6CFL-1/4
                    106
3/200-16-371H
                    113
3/200-35-SA
                    187
3/200-35-()
                    187
3/200-35-371H
                    113
3/200-80-SA
                    193
                    187, 189
3/200-80-()
                    206
3290
33G
                    69, 71, 75, 77, 78, 89, 136, 141
33S6
                    68, 75, 77, 78, 89, 92, 136, 141, 163, 164, 166
37
                    71. 165
```



```
37/12
                    71, 75, 76, 77, 78, 88, 165, 166
37/25
                    75, 76, 77, 78, 88, 165, 166
38
                    96
38/12
                    96
38/25
                    96
39
                    103, 104
39-0
                    103, 104
39002
                    102, 104
39014
                    102.104
                    102, 104
39015
                    102, 104
39020
39-2
                    103, 104
3/9955-12-371H
                    113
3/9956-12-371H
                    113
3B-2002N-3B1
                    179, 180
                                                NEW ADDITION
3B-2003N-3B1
                    179, 180
                                                NEW ADDITION
                    179, 180
3B-2004N-3B1
                                                NEW ADDITION
3B-2104N-3B1
                    179, 180
                                                NEW ADDITION
3B-2206N-3B1
                    179, 180
                                                NEW ADDITION
                                                NEW ADDITION
                    179, 180
3B-2208N-3B1
                    179, 180
                                                NEW ADDITION
3B-2312N-3B1
                    182, 183
3B-6002N-0A1
                                                NEW ADDITION
3B-6904N-0A1
                    182, 183
                                                NEW ADDITION
3B-6004N-0A1
                    182, 183
                                                NEW ADDITION
                    182, 183
                                                NEW ADDITION
3B-6006N-0A1
                    182, 183
3B-6008N-0A1
                                                NEW ADDITION
41-070
                    61
41-071
                    189
41G
                    75, 77, 78, 91
41GCFL
                    68
41GCFL-1/4
                    105, 106
41S6
                    75, 77, 78, 91, 163, 164, 166
41S6CFL-1/4
4433-05
                    62, 63, 78, 80, 81, 84, 143
4433-05-BX
                    81
4433-05-()
                    63, 81, 84, 143
                    71, 75, 77, 78, 89, 92, 136, 141
45G
45S6
                    71, 75, 77, 78, 89, 92, 136, 141, 163, 164, 166
47S6
                    76, 77, 78, 107
48S6
                    68, 76, 77, 78, 105, 106
49S6
                    68, 76, 77, 78, 105, 106
5/050-05-()
5/100-12-BX
                    11, 177, 180, 183, 204
5/100-12-DX
                    177, 180, 183
                                                NEW ADDITION
5/100-12-SA
                    180, 183
                                                NEW ADDITION
                    174, 187, 214
5/100-12-()
                    177, 180, 183, 204, 214
5/100-18-BX
                    177, 180, 183
                                                NEW ADDITION
5/100-18-DX
                    177, 180, 183
5/100-18-SA
                                                NEW ADDITION
5/100-18-()
                    174, 187, 214
                    214
5/100-19-()
                    25
5/130-14-()
                    187, 214
5/150-19-()
5/200-35-()
                    187
5/200-35-BX
                    177, 180
                                                NEW ADDITION
```



5/200-35-DX	177, 180	NEW ADDITION	
5/200-35-SA	177, 180	NEW ADDITION	
5/200-176-()	174	NEW ABBITION	
5/200-176-()	177, 180, 183	NEW ADDITION	
5/200-176-DX	177, 180, 183	NEW ADDITION	
5/200-176-SA	177, 180, 183	NEW ADDITION	
5/200-185-()	174		
5/200-185-BX	177, 180, 183	NEW ADDITION	
5/200-185-DX	177, 180, 183	NEW ADDITION	
5/200-185-SA	180	NEW ADDITION	
5/200-80-()	187, 189		
51028-HEC	14		
510-36-HEC	14		
510-28-HFC	14		
510-36-HFC	14		
53	93, 138		
53/18	76, 77, 93, 94, 136, 138, 139		
53/50	76, 77, 93, 94, 136, 138, 139	, 140, 149	
53/95	136, 138, 139, 148, 149		
54	93		
54/50	77, 93, 94, 136, 138, 139		
57-501	144		
57-501-C	144		
57-501-F	144		
57-501-M	144		
58N	95		
58P	77, 93, 94, 138, 139		
6102	172, 173, 174, 19, 20, 21, 17	2, 173, 174	NEW ADDITION
6102N-0A1-()	172, 173, 174, 19, 21, 172, 1	74	NEW ADDITION
6102N-0A2-()	172, 173, 174, 19, 21, 172, 1	74	NEW ADDITION
6002	19, 20, 21, 172, 173, 174		
6002N-0A1-()	19, 21, 172, 174		
6002N-0A2-()	19, 21, 172, 174		
6004	19, 20, 21, 172, 173, 174		
6004G-0A1-()	19, 21, 172		
6004G-0A2-()	19, 21, 172		
6004N-0A1- ()	19, 21, 172, 174		
6004N-0A2-()	19, 21, 172, 174		
6006	19, 20, 21, 170, 172, 173		
6006G-0A1-()	19, 21, 172		
6006G-0A2-()	19, 21, 172		
6006N-0A1-()			
	19, 21, 172, 174		
6006N-0A2-()	19, 21, 172, 174		
6008	19, 20, 21, 170, 172, 173		
6008N-0A1-()	21		
6008N-0A2-()	21		
6904	19, 20, 21, 172, 173, 174		
6904N-0A1-()	19, 21, 172, 174		
6904N-0A2-()	19, 21, 172, 174		
7/200-35-371H	113		
7/200-80-371H	113		
72-130	211		
72-460	204		
72-695	204, 205		
72-730	206		



```
73803
                      191
                      191
73804
73805
                      191
                      201
75303
75620
                      201
75-A20NA
                      222, 223
76-01
                     210, 211
76-02
                     210, 211
76-10
                     210, 211
76-20
                     210, 211
76-40
                     210, 211
850-25-HEC
                      14
850-25-HFC
                      14
850-36-HEC
                      14
850-36-HFC
                      14
8800-12
                      77, 78, 80, 81, 85
8800-12-()
                      81, 85
8822-()-()
                      76
8822-11
                      62, 68, 70, 76, 77
8822-11-()
                     62.76
8833-11
                      62, 63, 68, 76, 77, 78, 80, 81, 84
                     81
8833-11-BX
8833-11-DX
                     81
8833-11-()
                      63, 81, 84
85
                      71, 75, 76, 77, 78
90
                      76, 77, 78, 93, 94
91
91S6
                      71, 76, 77, 78, 90, 163, 164, 166
                      68, 75
95
95A
                      76, 77, 78, 90
95M
                      76, 77, 78, 90
95S6
                      71, 76, 77, 78, 90, 163, 164, 166
95T
                      76, 77, 78, 90, 163, 164, 166
97S6
                      76, 78, 79, 163, 164, 166
                      97, 98, 99
98
                      97, 98
98-0
98002
                      98, 100
98010
                      100
98011
                      100
                      100
98012
98013
                      100
98014
                      98
                      98
98015
98020
                      98, 100
98-2
                      97, 98
9900-05
                      62, 63, 78, 80, 81, 85
9900-05-BK
                     80, 81
9900-05-()
                     63, 81, 85
                      62, 63, 69, 76, 77, 78, 80, 81, 85, 142, 143
9922-05
9922-05-()
                     63, 81, 85, 143
9922-11
                      62, 63, 77, 78, 80, 81, 85, 142, 143
9922-11-95
                      162, 166
9922-11-()
                     63, 85, 143
9933-05
                     62, 63, 69, 76, 77, 78, 80, 81, 84, 142, 143
9933-05-95
                      162, 166, 201
```



```
9933-05-DQ
                    70
9933-05-()
                    63, 81, 84, 143
9933-11
                    63, 77, 78, 80, 81, 84, 142, 143
9933-11-()
                    63, 81, 84, 143
9953-11
                    80, 81, 85
9953-11-()
                    81, 85
9953-11-BX
                    81
9953-11-DX
                    81
9955-05-DX
                    22, 23
9955-11-DX
                    22, 23
9955-12
                    112, 119, 122, 123, 124, 125, 126, 128, 131, 132
9955-12-371H
                    112, 113
9955-12-DX
                    22, 23
9956-12
                    119, 124, 127, 128, 131
9956-12-371H
                    112, 113
A05-0045
                    75
                    75
A05-0046
                    3, 12, 184, 187
A15/80
A15/80-BX
                    186, 219
                    186, 219
A15/80-DX
                    186
A15/80-SA
                    186
A15/80S6-SA
A27/35B
                    191
A27/35B-SA
                    186, 190, 191
A27/80B
                    191
A27/80B-SA
                    186, 191
A33B
                    191
A33B-SA
                    186, 190, 191
A34
                    150
A39/12
                    101, 102
A39/12-_X-0
                    102
A39/12- X-2
                    102
A39-0
                    102
A39-2
                    102
A45B
                    191
A45B-SA
                    186, 190, 191
A914
                    3, 10, 11
A914A
                    10, 11
A914D
                    3, 10, 11
A914P
                    3, 10
A94A-()
                    3
A98
                    99
                    100
A98/11
                    100
A98/11-()Q-()
A98/11-_Q
                    100
A98/11-_Q-0
                    100
A98/11-_Q-2
                    100
A98/11-BQ-0
                    100
A98/11-BQ-2
                    100
A98/11-DQ-0
                    100
A98/11-DQ-2
                    100
AFF10-0728-HEC
                    14, 157, 186
                    14, 157
AFF10-0728-HFC
AFF12-1128-HEC
                    14, 157
AFF12-1128-HFC
                    14, 157
```



AFF16-1528-HEC	14, 157
AFF16-1528-HFC	14, 157
AFF3-0128-HEC	14, 157, 186
AFF3-0128-HFC	14, 157, 186
AFF4-0125-HEC	14, 157, 186 14, 157, 186
AFF4-0125-HFC	14, 157, 186
AFF6-0136-HEC	14, 157, 186
AFF6-0136-HFC	14, 157, 186
AFF8-0428-HEC	14, 157, 186
AFF8-0428-HFC	14, 157, 186
AFN3-0128-HEC	14, 157
AFN3-0128-HFC	14, 157
AFR-940	25
AFR-940-()	25
AFR-940A	25
AFR-940A-()	25
AHC-0180	153, 155
AHC-0180-()	153
AHC-0180-DX	153
AHC-0280	153, 155
AHC-0280-()	153, 155
AHC-0280-DX	153, 155
AHC-0480	153, 155
AHC-0480-()	155
AHC-0480-DX	155
AHC-0880	154, 155
AHC-0880-()	154, 155
AHC-0880- DX	154, 155
AKC-0280	188, 189
AKC-0280-()	188, 189
AKC-0280-BX	189
AKC-0280-DX	189
AKC-0280-SA	186, 189
AKC-0480	189
AKC-0480-()	189
AKC-0480-BX	189
AKC-0480-DX	189
AKC-0480-SA	186, 189
AKC-0880	189
AKC-0880-()	189
AKC-0880-BX	189
AKC-0880-DX	189
AKC-0880-SA	186, 189
AKC-1480	188, 189
AKC-1480-()	189
AKC-1480-BX	189
AKC-1480-DX	189
AKC-1480-SA	186, 189
AKC-2280	189
AKC-2280-()	189
AKC-2280-BX	189
AKC-2280-DX	189
AKC-2280-SA	186, 189
AKH-0280	3, 16, 152, 153, 155
AKH-0280-()	16, 153



```
AKH-0280-3
                    151
AKH-0280-DX
                    16, 153, 155
AKH-0480
                    3, 16, 152, 153, 155
AKH-0480-()
                    16, 153
AKH-0480-DX
                    16, 153
AKH-0880
                    3, 16, 152, 154, 155
AKH-0880-()
                    16, 154
AKH-0880-DX
                    16, 154
AKH-1480
                    3, 16, 154, 155
                    16, 154
AKH-1480-()
AKH-1480-DX
                    16, 154
AKH-2280
                    3, 16, 154, 155
AKH-2280-()
                    16
                    116, 154
AKH-2280-DX
AKS-0280
                    153, 155
AKS-0280-DX
                    153, 155
AKS-0480
                    153, 155
                    153, 155
AKS-0480-DX
AKS-0880
                    154, 155
AKS-0880-()
                    154, 155
AKS-1480
                    154, 155
AKS-1480-()
                    154, 155
AKS-2280
                    154, 155
AKS-2280-()
                    144, 155
AKSB-0280-2
                    193
AKSB-0280-2-SA
                    193
AKSB-0280-3
                    193
AKSB-0280-3-SA
                    193, 193
AKSB-0280-SA
                    186
AKSB-0480
                    193
AKSB-0480-SA
                    186, 193
AKSB-0880
                    193
AKSB-0880-SA
                    186, 193
AKSB-1480
                    193
                    186, 192, 193
AKSB-1480-SA
                    186, 193
AKSB-2280-SA
ALF3-0128-HEC
                    14
ALF3-0128-HFC
                    14
ALF4-0125-HEC
                    14
ALF4-0125-HFC
                    14
ALF6-0136-HEC
                    14
ALF6-0136-HFC
                    14
ALN3-0128-HEC
                    14
ALN3-0128-HFC
                    14
ALN6-0336-HEC
                    14
                    14
ALN6-0336-HFC
AR-009-DX
                    22, 23
                                               NEW ADDITION
AR-009-371H
                    112, 113
                                               NEW ADDITION
AR-015-371H
                    112, 113
                                               NEW ADDITION
                    112, 118, 119, 120, 121, 122, 123, 124, 125, 126, 127, 128, 130, 131, 132
AR-0316
AR-0316-371H
                    112, 113
AR-0335
                    118, 119, 120, 121, 122, 123, 124, 125, 126, 127, 128, 129, 130, 131, 132
AR-0335-371H
                    112, 113
AR-0735
                    118, 119, 120, 121, 123, 124, 125, 126, 127, 128, 129, 130, 131, 132
AR-0735-371H
                    112, 113
```



234 1-800-343-4048

```
AR-0780
                    112, 118, 119, 120, 121, 122, 123, 124, 125, 126, 127, 129, 130, 132
AR-0780-371H
                    112, 113
                    118, 119, 120, 121, 122, 123, 125, 127, 129, 130, 132
AR-1280
AR-1280-371H
                    112, 113
                    118, 119, 120, 121, 125, 126, 127, 129, 130
AR-1680
                    112, 113
AR-1680-371H
AR-3080
                    119, 120, 121, 125, 126, 127, 129, 130, 131, 132
AR-3080-371H
                    112, 113
                    204
B2C
                                               NEW ADDITION
BE200-168-DX
                   23
C02-2392
                    195, 211
                                               NEW ADDITION
C10A1308
                   48
CD0005
                    195, 221
CD0010
                    195, 221
CD0030
                    195, 221
CF-0112
                    114, 115
CF-0112-102
                    115
CF-0112-30
                    115
CF-0118
                    114, 115
CF-0118-102
                    115
CF-0118-30
                    114, 115
CI-100-12-000
                   174
                    174
CI-100-18-000
CI-200-176-000
                    174
CI-200-185-000
                    174
CI-200-35-000
                   87, 88, 92
                                               NEW ADDITION
CM0080-35
                   216
CM0150-35
                   216
                                               NEW ADDITION
CV-0112
                    118, 119, 120, 121, 122, 123, 124, 125, 126, 127, 128, 131, 132
CV-0112-30
                    116, 117
                    110, 111
CV-0112-371H
CV-0118
                    110
CV-0118-30
                    116, 117
CV-0118-371H
                    110, 111
D01-0086
                    219
DBO-10
                    205
                    205
DBO-15
DBO-20
                    205
DBO-5
                    205
                    205
DB-10
DB-1200
                    206
DB-15
                    205
DB-1600
                    206
DB-1900
                    206
                    205
DB-20
DB-2500
                    206
DB-4000
                    206
DB-5
                    205
DB5-10
                    203
DH21
                   96
EK602VB
                    214
                                               NEW ADDITON
ET-100-12-30
                    150
FB11
                   29, 55, 56
                                               NEW ADDITION
FB11-04DGC-SS
                   56
                                               NEW ADDITON
FB11-04WGCSS
                    55
                                               NEW ADDITION
```



FB11-04WGCRSS FB11G04WGCRSS FB11G04WGCRSS FB548-02DGCSS FF10 FF10-04DGSS FF10-04DGRSS FF10-04WGSS FF10-04WGRSS FF11-04DJRS FF11-04DJRS FF11G04WJRSS FF11G04WJRSS FF11G04WJRSS FF11G04WJRSS FF11G04DJRS GS-050-05-95 GS-050-11-95 GS-050-11-95 GS-100-12-95 GS-3/050-05-95 GS-3/050-05-95 GS-3/050-11-95 GS-3/100-25-95 HFX0-1 HFX0-11 HFX0-3 HFX0-5 HFX0-7 HFX0-9 HFX-1 HFX-1 HFX-3 HFX-5 HFX-7 HFX-9 I22 IT0010-35 IT0030-35 IT0150-35 IT0250-3500 IT0250-3500 IT0250-3500	55 55 55 29, 51 28, 31, 32 31 31 31 31 28, 37, 38 37, 38 37, 38 37, 38 28 164 164 164, 165, 201 164, 165, 201 164, 165 164, 165 201 201 201 201 201 201 201 201	NEW ADDITION (CHANGED FROM F11-XXXX NEW ADDITION (CHANGED FROM F11-XXXX NEW ADDITION (CHANGED FROM F11-XXXX NEW ADDITION) NEW ADDITION NEW ADDITION NEW ADDITION NEW ADDITION NEW ADDITION
IT0500-3560	213, 214	NEW ADDITION
IT1000-3500 IT1000-3560	213, 214 213, 214	NEW ADDITION NEW ADDITION
K4520N14060	48	NEW ADDITION
K4520N14160	48	NEW ADDITION
KS-0280-3	153	
KS-0480-4	153	
LP-100-12-()	94, 136, 139, 141	
LP-100-25-()	136, 141	
LP-200	93, 138	NEW ADDITION
LP-200-12-80	141	NEW ADDITION
LP-200-18-()	94, 139	



LP-200-18-80	139	NEW ADDITION
LP-200-50-()	94, 136, 139, 140	
LP-200-50-20	148, 149	
LP-200-50-80	140	NEW ADDITON
LP-200-95-()	136, 139, 140	
LP-200-95-20	148, 149	
MB-1	204	
MB-3	204	
MB-5	204	
MBO-1	204	
MBO-1-A1	204	
MBO-1-B1	204	
MBO-3	204	
MBO-3-A1	204	
MBO-3-B1	204	
MBO-5	204	
MBOA-5	204	
MBOB-5	204	
MK75005	201	
MK750050	201	
MK7525P	223	
MK7576	201	
MK75760	201	
MK75790C	201	
MK7579C	201	
MK76760	201	
MKDBO-15	205	
MKDBO-5	205	
MKDB15	205	
MKDB5	205	
MKMBO1	204	
MKMBOA1	204	
MKMBOB1	204	
MKMB1	204	NEW ADDITION
P3NKA00MW	48	NEW ADDITON
P3NKA00PN	48	NEW ADDITION
P3NKA00RR	48	NEW ADDITION
P3NR	28, 47, 48	NEW ADDITION
P3NRA96BNN	47	NEW ADDITION
P3NRA98BNN	47	NEW ADDITION
P3NRA9PBNN	47	NEW ADDITION
PS403	214	
PS702	214, 216	
PS802	214, 216	
R-009		123, 124, 125, 126, 127, 128, 129, 130, 131, 132 New Addition
R-009-30	114, 116, 117	NEW ADDITION
R-015		123, 124, 125, 126, 127, 128, 129, 130, 131, 132 New Addition
R-015-30	114, 116, 117	NEW ADDITION
SMRT5100	217, 219	
SMRT5200	217, 219	
SP2-23/75SR	169	
SP3-23-75SR	169	
SP4-23-75SR	169	
SP6-23/75SR SS-100-12	168, 169 88, 89, 106	
OO 100-12	30, 00, 100	



SS-100-25	88, 89, 106	
SS-200-35	87	
SS-200-80	87	
WF-200-50-C	144	
WF-200-50-F	144	
WF-200-50-M	144	
WF-3/200-50-C	144	
WF-3/200-50-F	144	
WF-3/200-50-M	144	
WS002N	6	NEW ADDITION
WS003N	6	NEW ADDITION
WS004N	6	NEW ADDITION
WS0H3N	6	NEW ADDITION
WS0H4N	6	NEW ADDITION
WS006N	6	NEW ADDITION
WS008N	6	NEW ADDITION
WS0H6N	6	NEW ADDITION
WH0H8N	6	NEW ADDITION
WS0010N	6	NEW ADDITION
WS0012N	6	NEW ADDITION
WS0H10N	6	NEW ADDITION
WS0H12N	6	NEW ADDITION
WS0016N	6	NEW ADDITION
WS0020N	6	NEW ADDITION
WS0024N	6	NEW ADDITION





Offer of Sale

The items described in this document are hereby offered for sale at prices to be established by Parker Hannifin Corporation, its subsidiaries and its authorized distributors. This offer and its acceptance by any customer ("Buyer") shall be governed by all of the following Terms and Conditions. Buyer's order for any item described in its document, when communicated to Parker Hannifin Corporation, its subsidiary or an authorized distributor ("Seller") verbally or in writing, shall constitute acceptance of this offer.

- 1. Terms and Conditions of Sale: All descriptions, quotations, proposals, offers, acknowledgments, acceptances and sales of Seller's products are subject to and shall be governed exclusively by the terms and conditions stated herein. Buyer's acceptance of any offer to sell is limited to these terms and conditions. Any terms or conditions in addition to, or inconsistent with those stated herein, proposed by Buyer in any acceptance or an offer by Seller, are hereby objected to. No such additional, different or inconsistent terms and conditions shall become part of the contract between Buyer and Seller unless expressly accepted in writing by Seller. Seller's acceptance of any offer to purchase by Buyer is expressly conditional upon Buyer's assent to all the terms and conditions stated herein, including any terms in addition to, or inconsistent with those contained in Buyer's offer. Acceptance of Seller's products shall in all events constitute such assent.
- 2. Payment: Payment shall be made by Buyer within 30 days from the date of shipment. Amounts not timely paid shall bear interest at the Maximum rate permitted by law for each month or portion thereof that the Buyer is late making payment. Any claims by Buyer for omissions or shortages in a shipment shall be waived unless Seller receives notice thereof within 30 days after Buyer's receipt of the shipment.
- **3. Delivery:** Unless otherwise provided on the face hereof, delivery shall be made F.O.B. Seller's plant. Regardless of the method of delivery, however, risk of loss shall pass to Buyer upon Seller's delivery to a carrier. Any delivery dates shown are approximate only and Seller shall have no liability for any delays in delivery.
- 4. Warranty: Seller warrants that the items sold hereunder shall be free from defects in material or workmanship for a period of 18 months from date of shipment to Buyer. THIS WARRANTY COMPRISES THE SOLE AND ENTIRE WARRANTY PERTAINING TO ITEMS PROVIDED HEREUNDER. SELLER MAKES NO OTHER WARRANTY, GUARANTEE, OR REPRESENTATION OF ANY KIND WHATSOEVER. ALL OTHER WARRANTIES, INCLUDING BUT NOT LIMITED TO, MERCHANTABILITY AND FITNESS FOR PURPOSE, WHETHER EXPRESS, IMPLIED, OR ARISING BY OPERATION OF LAW, TRADE USAGE, OR COURSE OF DEALING ARE HEREBY DISCLAIMED.

NOTWITHSTANDING THE FOREGOING, THERE ARE NO WARRANTIES WHATSOEVER ON ITEMS BUILT OR ACQUIRED WHOLLY OR PARTIALLY, TO BUYER'S DESIGNS OR SPECIFICATIONS.

- 5. Limitation of Remedy: SELLER'S LIABILITY ARISING FROM OR IN ANY WAY CONNECTED WITH THE ITEMS SOLD OR THIS CONTRACT SHALL BE LIMITED EXCLUSIVELY TO REPAIR OR REPLACEMENT OF ITEMS SOLD OR REFUND OF THE PURCHASE PRICE PAID BY BUYER, AT SELLER'S SOLE OPTION. IN NO EVENT SHALL SELLER BE LIABLE FOR ANY INCIDENTAL, CONSEQUENTIAL OR SPECIAL DAMAGES OF ANY KIND OR NATURE WHATSOEVER, INCLUDING BUT NOT LIMITED TO LOST PROFITS ARISING FROM OR IN ANY WAY CONNECTED WITH THIS AGREEMENT OR ITEMS SOLD HEREUNDER, WHETHER ALLEGED TO ARISE FROM BREACH OF CONTRACT, EXPRESS OR IMPLIED WARRANTY, OR IN TORT, INCLUDING WITHOUT LIMITATION, NEGLIGENCE, FAILURE TO WARN OR STRICT LIABILITY.
- 6. Changes, Reschedules and Cancellations: Buyer may request to modify the designs or specifications for the items sold hereunder as well as the quantities and delivery dates thereof, or may request to cancel all or part of this order, however, no such requested modification or cancellation shall become part of the contract between Buyer and Seller unless accepted by Seller in a written amendment to this agreement. Acceptance of any such requested modification or cancellation shall be at Seller's discretion, and shall be upon such terms and conditions as Seller may require.

- 7. Special Tooling: A tooling charge may be imposed for any special tooling, including without limitation, dies, fixtures, molds and patterns, acquired to manufacture items sold pursuant to this contract. Such special tooling shall be and remain Seller's property notwithstanding payment of any charges by Buyer. In no event will Buyer acquire any interest in apparatus belonging to Seller which is utilized in the manufacture of the items sold hereunder, even if such apparatus has been specially converted or adapted for such manufacture and notwithstanding any charges paid by Buyer. Unless otherwise agreed, Seller shall have the right to alter, discard or otherwise dispose of any special tooling or other property in its sole discretion at any time.
- 8. Buyer's Property: Any designs, tools, patterns, materials, drawings, confidential information or equipment furnished by Buyer or any other items which become Buyer's property, may be considered obsolete and may be destroyed by Seller after two [2] consecutive years have elapsed without Buyer placing an order for the items which are manufactured using such property. Seller shall not be responsible for any loss or damage to such property while it is in Seller's possession or control.
- **9. Taxes:** Unless otherwise indicated on the face hereof, all prices and charges are exclusive of excise, sales, use, property, occupational or like taxes which may be imposed by any taxing authority upon the manufacture, sale or delivery of the items sold hereunder. If any such taxes must be paid by Seller or if Seller is liable for the collection of such tax, the amount thereof shall be in addition to the amounts for the items sold. Buyer agrees to pay all such taxes or to reimburse Seller therefore upon receipt of its invoice. If Buyer claims exemption from any sales, use or other tax imposed by any taxing authority, Buyer shall save Seller harmless from and against any such tax, together with any interest or penalties thereon which may be assessed if the items are held to be taxable.
- 10. Indemnity For Infringement of Intellectual Property Rights: Seller shall have no liability for infringement of any patents, trademarks, copyrights, trade dress, trade secrets or similar rights except as provided in this Part 10. Seller will defend and indemnify Buyer against allegations of infringement of U.S. patents, U.S. trademarks, copyrights, trade dress and trade secrets (hereinafter 'Intellectual Property Rights'). Seller will defend at its expense and will pay the cost of any settlement or damages awarded in an action brought against Buyer based on an allegation that an item sold pursuant to this contract infringes the Intellectual Property Rights of a third party. Seller's obligation to defend and indemnify Buyer is contingent on Buyer notifying Seller within ten (10) days after Buyer becomes aware of such allegations of infringement, and Seller having sole control over the defense of any allegations or actions including all negotiations for settlement or compromise. If an item sold hereunder is subject to a claim that it infringes the Intellectual Property Rights of a third party, Seller may, at its sole expense and option, procure for Buyer the right to continue using said item, replace or modify said item so as to make it noninfringing, or offer to accept return of said item and return the purchase price less a reasonable allowance for depreciation. Notwithstanding the foregoing, Seller shall have no liability for claims of infringement based on information provided by Buyer, or directed to items delivered hereunder for which the designs are specified in whole or part by Buyer, or infringements resulting from the modification, combination or use in a system of any item sold hereunder. The foregoing provisions of this Part 10 shall constitute Seller's sole and exclusive liability and Buyer's sole and exclusive remedy for infringement of Intellectual Property Rights.

If a claim is based on information provided by Buyer or if the design for an item delivered hereunder is specified in whole or in part by Buyer, Buyer shall defend and indemnify Seller for all costs, expenses or judgments resulting from any claim that such item infringes any patent, trademark, copyright, trade dress, trade secret or any similar right.

- 11. Force Majeure: Seller does not assume the risk of and shall not be liable for delay or failure to perform any of Seller's obligations by reason of circumstances beyond the reasonable control of Seller (hereinafter 'Events of Force Majeure'). Events of Force Majeure shall include without limitation, accidents, acts of God, strikes or labor disputes, acts, laws, rules or regulations of any government or government agency, fires, floods, delays or failures in delivery of carriers or suppliers, shortages of materials and any other cause beyond Seller's Control.
- 12. Entire Agreement/Governing Law: The terms and conditions set forth herein, together with any amendments, modifications and any different terms or conditions expressly accepted by Selter in writing, shall constitute the entire Agreement concerning the items sold, and there are no oral or other representations or agreements which pertain thereto. This Agreement shall be governed in all respects by the law of the State of Ohio. No actions arising out of the sale of the items sold hereunder or this Agreement may be brought by either party more than two (2) years after the cause of action accrues.



Parker Hannifin Corporation

Filtration Group

Global Headquarters

6035 Parkland Boulevard Cleveland, OH 44124-4141 T 216 896 3000, F 216 896 4021 www.parker.com

North America Compressed Air Treatment

Filtration & Separation/Balston

242 Neck Road Haverhill, MA 01835 T 978 858 0505, F 978 858 0625 www.balstonfilters.com

Filtration & Separation/Finite

500 Glaspie Street Oxford, MI 48371-5132 T 248 628 6400, F 248 628 1850 www.parker.com/finitefilter

Purification, Dehydration and Filtration Division

4087 Walden Avenue Lancaster, NY 14086 T 716 685 4040, F 716 685 1010 www.airtek.com

Sales Office 5900-B Northwoods Parkway Charlotte, NC 28269 T 704 921 9303, F 704 921 1960 www.domnickhunter.com

Engine Filtration & Water Purification

Racor

3400 Finch Road, PO Box 3208 Modesto, CA 95353 T 209 521 7860, F 209 529 3278 www.parker.com/racor

Racor

850 North West St., PO Box 6030 Holly Springs, MS 38635 T 662 252 2656, F 662 274 2118 www.parker.com/racor

Racor

302 Parker Drive Beaufort, SC 29906 T 843 846 3200, F 843 846 3230 www.parker.com/racor

Racor -- Village Marine Tec.

2000 West 135th Street Gardena, CA 90249 T 310 516 9911, F 310 538 3048 www.villagemarine.com

Hydraulic Filtration

Hydraulic Filter

16810 Fulton County Road #2 Metamora, OH 43540-9714 T 419 644 4311, F 419 644 6205 www.parker.com/hydraulicfilter

Process Filtration

Process Advanced Filtration

2340 Eastman Avenue Oxnard, CA 93030 T 805 604 3400, F 805 604 3401 www.parker.com/processfiltration

Europe

Compressed Air Treatment

domnick hunter Industrial

Dukesway, Team Valley Trading Estate Gateshead, Tyne & Wear England NE11 OPZ T +44 (0) 191 402 9000, F +44 (0) 191 482 6296 www.domnickhunter.com

Hiross Zander Padova Business Unit

Strada Zona Industriale 4 35020 S. Angelo di Piove Padova, Italy T +39 049 9712 111, F +39 049 9701 911 www.dh-hiross.com

Hiross Zander Essen Business Unit

Zander Aufbereitungstechnik GmbH Im Teelbruch 118 D-45219 Essen, Germany T +49 2054 9340, F +49 2054 934164 www.zander.de

Parker Gas Separations

Oude Kerkstraat 4 P O Box 258 4870 AG Etten- Leur, Netherlands T +31 76 508 5300, F +31 76 508 5333

Engine Filtration & Water Purification

Racor

Shaw Cross Business Park Churwell Vale Dewsbury, WF12 7RD England T +44 (0) 1924 487000, F +44 (0) 1924 487038 www.parker.com/rfde

Racor Research & Development

Parker Hannifin GmbH & Co KG Inselstrasse 3 – 5 70327 Stuttgart Germany T+49 (0)711 7071 290-0, F+49 (0)711 7071 290 -70 www.parker.com/racor

Hydraulic Filtration

Hydraulic Filter

Stieltjesweg 8, 6827 BV P.O. Box 5008 6802 EA Arnhem, Holland T +31 26 3760376, F +31 26 3643620 www.parker.com/eurofilt

Urjala Operation

Salmentie 260 31700 Urjala as Finland T +358 20 753 2500, F +358 20 753 2501 www.parker.com/fi

Condition Monitoring Center

Brunel Way Thetford, Norfolk IP 24 1HP England T +44 1842 763299, F +44 1842 756300 www.parker.com/cmc

Process Filtration

domnick hunter Process

Durham Road, Birtley Co. Durham, DH3 2SF England T +44 (0) 191 410 5121, F +44 (0) 191 410 5312 www.domnickhunter.com

Africa

Parker Hannifin Africa Pty Ltd

Parker Place, 10 Berne Avenue, Aeroport Kempton Park, 1620 South Africa T +27 11 9610700, F +27 11 3927213 www.parker.com/eu

Asia Pacific

Australia

9 Carrington Road, Castle Hill NSW 2154, Australia T +61 2 9634 777, F +61 2 9899 6184 www.parker.com/australia

China

280 YunQiao Road JinQiao Export Processing Zone Shanghai 101206 China T +86 21 5031 2525, F +86 21 5834 3714 www.parker.com/china

India

Plot EL 26, MIDC, TTC Industrial Area Mahape, Navi Mumbai 400 709 India T +91 22 5613 7081, 82, 83, 84, 85 F +91 22 2768 6618 6841 www. parker.com/india

Japan

626, Totsuka-cho, Totsuka-ku Yokohama-shi, 244-0003 Japan T +81 45 870 1522, F +81 45 864 5305 www.parker.com/japan

Korea

1-C Block, Industrial Complex of Jangan, 615-1, Geumui-Ri Jangan-Myeon, Hwaseong-City Gyeonggi-Do, Korea T +82 31 359 0771, F +82 31 359 0770 www.parker.com/korea

Singapore

11, Fourth Chin Bee Road Singapore 619 702 T +65 6887 6300, F +65 6261 4929 www.parker.com/singapore

Thailand

1023 3rd Floor, TPS Building Pattanakam Road, Suanluang, Bangkok 10250 Thailand T +66 2717 8140, F +66 2717 8148 www.parker.com/thailand

Latin America

Parker Comercio Ltda.

Filtration Division

Estrada Municipal Joel de Paula 900 Eugenio de Melo, Sao Jose dos Campos CEP 12225-390 SP Brazil T +55 12 4009 3500, F +55 12 4009 3529 www.parker.com/br

Pan American Division - Miami

7400 NW 19th Street, Suite A Miami, FL 33128 T 305 470 8800 F 305 470 8808 www.parker.com/panam

© 2009 Parker Hannifin Corporation

Bulletin FNS-E / June 2010

www.parker.com/balston

Parker Hannifin Corporation
Filtration and Separation Division
242 Neck Road
Haverhill, MA 01835
T 978 858 0505, F 978 556 7501
www.balstonfilters.com

